

vtech®

Parent's Guide

GO! GO!  
CORY  
CARSON®

**Two Scoops Eileen Ice Cream Truck™**




91-003936-000 (US)

# INTRODUCTION

Thank you for purchasing the **Go! Go! Cory Carson® Two Scoops Eileen Ice Cream Truck™!**

Every day is ice cream day with Cory, Chrissy and Eileen Ice Cream Truck! Help Cory and Chrissy find Eileen so they can order their favorite flavor! Drive Eileen around Bumperton Hills and watch her ice cream cone light up while she plays fun sounds and music.

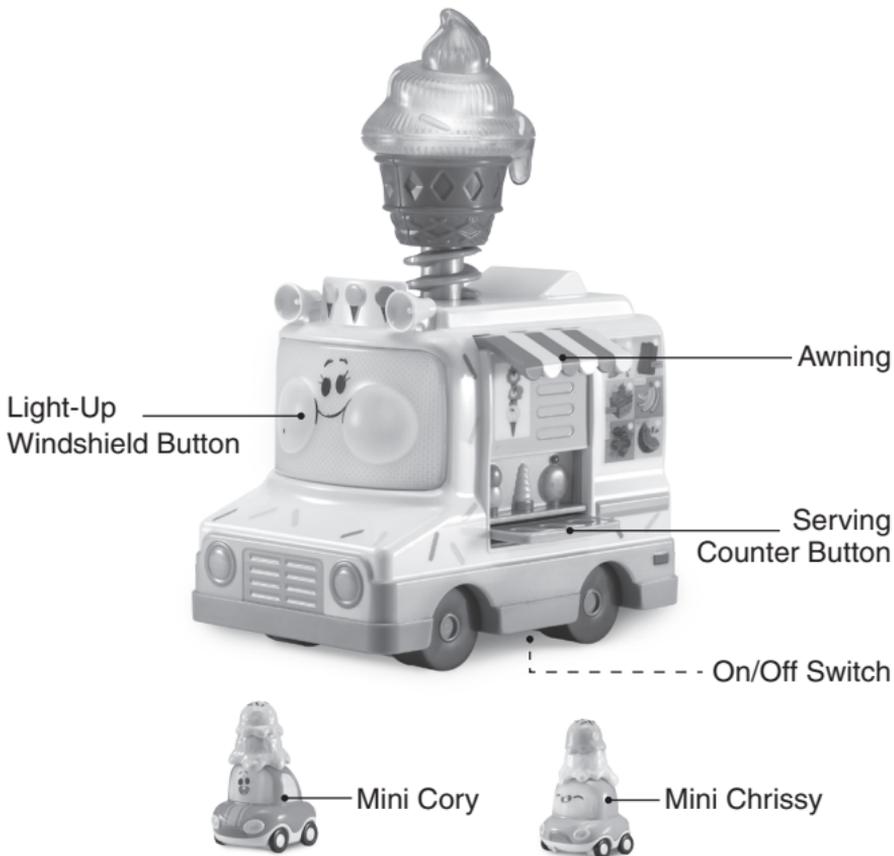

# INCLUDED IN THIS PACKAGE

## Go! Go! Cory Carson® Two Scoops Eileen Ice Cream Truck™

- 1 Eileen Ice Cream Truck
- 1 mini Cory
- 1 mini Chrissy
- Parent's guide

### WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

### NOTE

Please keep this parent's guide as it contains important information.


### ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

### NOTE

Il est conseillé de conserver ce guide des parents car il comporte des informations importantes.

### Unlock the Packaging Locks

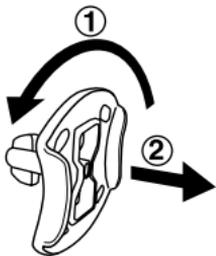


- ① Rotate the packaging locks 90 degrees counterclockwise.
- ② Pull out the packaging locks and discard.

# INSTRUCTIONS

## Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the bottom of the unit, use a coin or screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 3 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended)
5. Replace the battery cover and tighten the screw to secure.

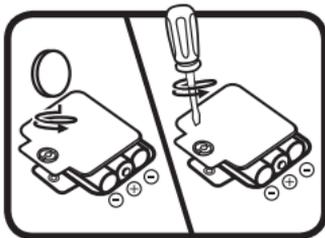

### **WARNING/ATTENTION**

Adult assembly required for battery installation.

Keep batteries out of reach of children.

Les piles ou accumulateurs doivent être installés par un adulte.

Tenir les piles ou accumulateurs hors de portée des enfants.

## **IMPORTANT: BATTERY INFORMATION**

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.


### **RECHARGEABLE BATTERIES:**

- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

# PRODUCT FEATURES

## 1. On/Off Switch

To turn Eileen **ON**, slide the **On/Off Switch** to the **ON** ☺ position. To turn Eileen **OFF**, slide the **On/Off Switch** to the **OFF** ● position.

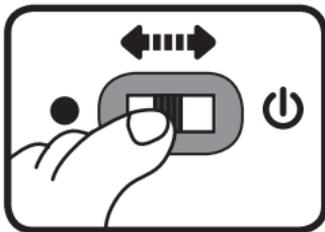

## 2. Awning

The **Awning** is adjustable. Pull the **Awning** out to play at the window, or push it back in to drive Eileen around.



## 3. Automatic Shut-Off

To preserve battery life, the **Two Scoops Eileen Ice Cream Truck™** character will automatically shut off after approximately 65 seconds without input. The unit can be turned on again by pressing the **Light-Up Windshield Button**, pressing the **Serving Counter Button**, or by rolling it quickly.


### NOTE

This product is in Try-Me mode in the packaging. After opening the package, turn the unit off and on again to proceed with normal play. If the unit powers down while playing, please install a new set of batteries.

# ACTIVITIES

## 1. Light-Up Windshield Button

Press the **Light-Up Windshield Button** to hear fun sounds, songs, phrases and melodies. The light and ice cream cone will flash with the sounds.

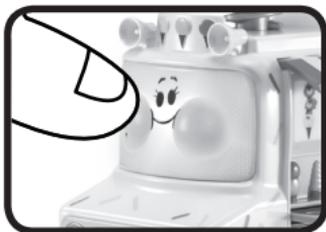

## 2. Serving Counter Button

Press the **Serving Counter Button** to hear fun sounds, phrases and short tunes. The light and ice cream cone will flash with the sounds.



## 3. Sounds and Melodies

Push the character to hear fun sounds. If a melody is already playing, push the character to add fun sounds on top of the melody. The light and ice cream cone will flash with the sounds.



## SONG LYRICS

1. I've been looking all over for you guys!  
Who's ready for some ice cream!
2. Come and get your ice cream!  
Strawberry, chocolate, vanilla.  
I've got all your favorite flavors!  
Come and get it!
3. Hey, guys!  
It's ice cream time!

## MELODIES

1. Greensleeves
2. Sailors Hornpipe
3. Go Tell Aunt Rhody
4. Teddy Bear Picnic
5. Glad Cat Rag
6. The Merry Peasant

## CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

## TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to play again.
5. If the product still does not work, install a new set of batteries.

**IMPORTANT NOTE:**

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S., **1-877-352-8697** in Canada, or by going to our website **vtechkids.com** and filling out our **Contact Us** form located under the **Customer Support** link. Creating and developing VTech products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

**NOTE**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Caution:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### **Supplier's Declaration of Conformity**

47 CFR § 2.1077 Compliance Information

Trade Name: VTech®  
Model: 5455  
Product Name: Go! Go! Cory Carson®  
Two Scoops Eileen Ice Cream Truck™  
Responsible Party: VTech Electronics North America, LLC  
Address: 1156 W. Shure Drive, Suite 200  
Arlington Heights, IL 60004  
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

***CAN ICES-3 (B)/NMB-3(B)***

**Visit our website for more  
information about our products,  
downloads, resources and more.**

***www.vtechkids.com***  
***www.vtechkids.ca***

Read our complete warranty policy online at  
***www.vtechkids.com/warranty***  
***www.vtechkids.ca/warranty***

