


Parent's Guide





INTRODUCTION

Thank you for purchasing the **Switch & Go™ Triceratops Bulldozer.** Engage your imagination with the hard-working bulldozer that transforms into a fearsome triceratops. Sound effects and phrases bring the action to life in your very own dinosaur universe.

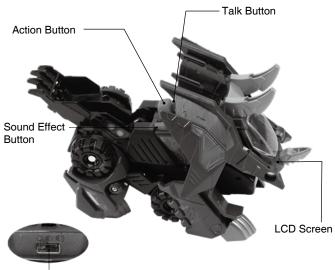

Off/Low/High Volume Selector

INCLUDED IN THIS PACKAGE

- Switch & Go[™] Triceratops Bulldozer
- Parent's guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please keep this parent's guide as it contains important information.

ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes et vis d'emballage. Ils ne font pas partie du jouet.


NOTE

Il est conseillé de conserver ce guide des parents car il comporte des informations importantes

GETTING STARTED

Battery Removal and Installation

- 1. Make sure the unit is turned Off.
- Find the battery cover located on the bottom of the unit and use a screwdriver to loosen the screw and open the battery cover.
- Remove old batteries by pulling up on one end of each battery.
- Install 2 new AAA (LR03/AM-4) batteries following the diagram inside the battery box.
- 5. Replace the battery cover and tighten the screw to secure.

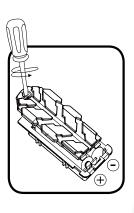

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity (+ and -).
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- · Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

MISE EN GARDE

- Utiliser des piles alcalines neuves pour des performances maximales.
- Seules des piles du type recommandé doivent être utilisées.
- Ne pas mélanger différents types de piles ou d'accumulateurs, ne pas mélanger des piles ou des accumulateurs neufs avec des usagés.
- Ne pas utiliser des piles ou des accumulateurs endommagés.
- Mettre en place les piles ou les accumulateurs en respectant les polarités + et -.
- Ne pas mettre les bornes d'une pile ou d'un accumulateur en court-circuit (en reliant directement le + et le -).
- · Enlever les piles ou les accumulateurs usagés du jouet.
- Retirer les piles ou les accumulateurs en cas de nonutilisation prolongée.
- Ne les jeter ni au feu ni dans la nature.
- Ne pas tenter de recharger des piles non rechargeables.
- Enlever les accumulateurs du jouet pour les recharger.
- Les accumulateurs ne doivent être chargés que sous la surveillance d'un adulte.

PRODUCT FEATURES

1. Off/Low/High Volume Selector

To turn the unit **On** or adjust the volume, slide the Off/Low/High Volume Selector to Low () or High () .To turn the unit Off, slide the selector to Off .



2. Talk Button



Press the Talk Button to hear fun dino and driver phrases.



3. Sound Effect Button



Press the Sound Effect Button to hear cool dinosaur and bulldozer sound effects.



4. Action Button (Dino Mode Only)

Press the Action Button to see the dino's head move and mouth light up.



5. Motion Sensor

Move the triceratops to activate the **Motion Sensor** and hear walking sound effects in Dino mode. In Vehicle mode, move the bulldozer to hear driving sound effects.

 
6. Automatic Shut-Off

To preserve battery life, the **Triceratops Bulldozer** will automatically shut off after several seconds without input. The unit can be turned on again by pressing the Talk Button or Sound Effect Button.

NOTE

If the unit powers down or if the light fades out during play, please install a new set of batteries.


TRANSFORMATION




1. Begin in Dino mode.



 3. Rotate the front legs to reveal the tires.



 
5. Fold the tail onto the top.



Move the head shield forward.



  Rotate the rear legs to create the front tires of the vehicle.



6. Finish in Vehicle mode.

NOTE

To switch the vehicle back into a dino, follow the above steps in reverse order.

CARE & MAINTENANCE

- 1. Keep the unit clean by wiping it with a slightly damp cloth.
- Keep the unit out of direct sunlight and away from any direct heat sources.
- Remove the batteries if the unit will not be in use for an extended period of time.
- Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

- 1. Turn the unit Off.
- 2. Interrupt the power supply by removing the batteries.
- 3. Let the unit stand for a few minutes, then replace the batteries.
- Turn the unit back On. The unit should now be ready to use again.
- 5. If the unit still does not work, insert a new set of batteries.

IMPORTANT NOTE

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S.,1-877-352-8697 in Canada, or visit our website vtechkids.com and fill out our Contact Us form located under the Customer Support link. Creating and developing VTech products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Supplier's Declaration of Conformity 47 CFR § 2.1077 Compliance Information

Trade Name: VTech® Model: 1951

Product Name: Switch & Go™ Triceratops Bulldozer Responsible Party: VTech Electronics North America, LLC

Address: 1156 W. Shure Drive, Suite 200

Arlington Heights, IL 60004

Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

CAN ICES-3 (B)/NMB-3(B)



Visit our website for more information about our products, downloads, resources and more.

vtechkids.com

Read our complete warranty policy online at vtechkids.com/warranty

