

**vtech**<sup>®</sup>

 
# Instruction Manual

## **Bounce & Discover Llama**<sup>™</sup>



# INTRODUCTION

Thank you for purchasing the **Bounce & Discover Llama™**. Take this cute little llama for a spin! With up-and-down and side-to-side motion, this sweet animal helps kids develop strength and balance while teaching colors, shapes and numbers.

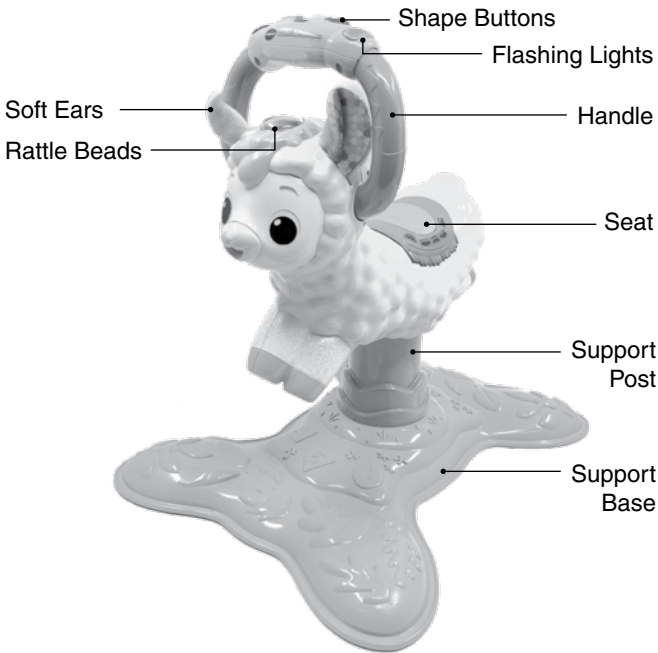

# INCLUDED IN THE PACKAGE

- **Bounce & Discover Llama™**



 
Llama



Support Base



Handle

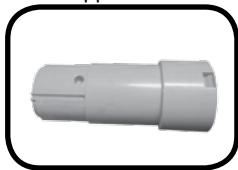

Support Post

- Four screws
- Quick Start Guide

## WARNING

All packing materials, such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

## NOTE

Please save this Instruction Manual as it contains important information.

## ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes et vis d'emballage. Ils ne font pas partie du jouet.

 
## NOTE

Il est conseillé de sauvegarder ce manuel d'instructions car il comporte des informations importantes.

# GETTING STARTED

## Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the back of the handle. Use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on the side of each battery.
4. Install 2 new AAA batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
5. Replace the battery cover and tighten the screw to secure.

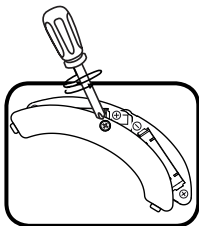

### **WARNING:**

Adult assembly required for battery installation.  
Keep batteries out of reach of children.



### **ATTENTION :**

Les piles ou accumulateurs doivent être installés par un adulte.  
Tenir les piles ou accumulateurs hors de portée des enfants.

### **IMPORTANT: BATTERY INFORMATION**

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.

- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

## **RECHARGEABLE BATTERIES**

- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

## **IMPORTANT : INFORMATIONS CONCERNANT LES PILES**

- Mettre en place les piles ou les accumulateurs en respectant les polarités + et –.
- Ne pas mélanger des piles ou des accumulateurs neufs avec des usagés.
- Ne pas mélanger différents types de piles : alcalines, zinccarbone et rechargeables.
- Seules des piles du type recommandé doivent être utilisées.
- Ne pas mettre les bornes d'une pile ou d'un accumulateur en court-circuit (en reliant directement le + et le –).
- Retirer les piles ou les accumulateurs en cas de non-utilisation prolongée.
- Enlever les piles ou les accumulateurs usagés du jouet.
- Ne les jeter ni au feu ni dans la nature.

## **PILES RECHARGEABLES**

- Enlever, lorsque c'est possible, les accumulateurs du jouet pour les recharger.
- Les accumulateurs ne doivent être chargés que sous la surveillance d'un adulte.
- Ne pas tenter de recharger des piles non rechargeables.

# ASSEMBLY INSTRUCTIONS

With the **Bounce & Discover Llama™** safety comes first. To ensure your child's safety, adult assembly is required. This package contains four screws. For your child's safety, do not let them play with this toy until it is fully assembled.

1. Insert the bottom of the Support Post into the slot on the top of the Support Base. You will hear a click to indicate that the Support Post is attached securely to the Support Base.



2. Insert the bottom of the Llama onto the top of the Support Post. You will hear a click to indicate that the Llama is attached securely to the Support Post.



 
3. Insert the Handle behind the Llama's ears. Insert and tighten the four included screws.



# PRODUCT FEATURES

## 1. On/Off/Volume Selector

To turn the unit **On**, slide the **On/Off/Volume Selector** to the Low volume ◀ or High volume ▶ position. You will hear a song, a welcoming phrase and sounds. To turn the unit **Off**, slide the **On/Off/Volume Selector** to the **Off** ● position.

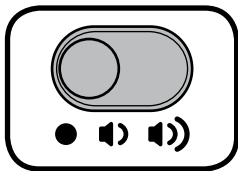

## 2. Automatic Shut-Off

To preserve battery life, the **Bounce & Discover Llama™** will automatically shut off after approximately 30 seconds without input. The unit can be turned on again by pressing any button.

### NOTE

If the unit powers down or if the light fades out during play, please install a new set of batteries.

# ACTIVITIES

## 1. Shape Buttons

Press the **Shape Buttons** to learn about numbers, colors and shapes as well as hear fun sounds, melodies and songs. When a song or melody is playing, bounce up and down on the llama to add fun sounds and phrases over the music. The lights will flash with the sounds.



## 2. Bouncing Llama

Bounce up and down on the llama to hear fun sounds and phrases. Bouncing up and down continuously for several seconds will activate songs or melodies. When a song is playing, bounce the llama to add fun sounds over the songs. If a melody is playing and the bouncing stops, the melody will also stop. Continue bouncing to hear the melody continue. The lights will flash with the sounds.



## MELODY LIST

1. Bingo
2. Little Miss Muffet
3. The Green Grass Grew All Around
4. Yankee Doodle
5. Looby Loo
6. Ride a Cock Horse to Banbury Cross
7. Toyland
8. Skip to My Lou
9. Old MacDonald
10. Hey, Diddle, Diddle



# SONG LYRICS

## Song 1

Bounce, bounce, up and down,  
bouncing all day long!  
Bouncing, bouncing, bouncing, bouncing,  
It's fun to bounce along!

## Song 2

I'm a little llama, I love to count,  
One, two, three. One, two, three!  
Let's count and bounce together!

# CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on a hard surface and do not expose the unit to excess moisture.

# TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to play again.
5. If the unit still does not work, install a new set of batteries.

**IMPORTANT NOTE:**

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S. or **1-877-352-8697** in Canada, or by going to our website at **vtechkids.com** and filling out our **Contact Us** form located under the **Customer Support** link. Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions that you might have. A service representative will be happy to help you.

**CAUTION**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Supplier's Declaration of Conformity

47 CFR § 2.1077 Compliance Information

Trade Name: VTech®  
Model: 5477  
Product Name: Bounce & Discover Llama™  
Responsible Party: VTech Electronics North America, LLC  
Address: 1156 W. Shure Drive, Suite 200  
Arlington Heights, IL 60004  
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.



### **CAUTION:**

This package contains small parts.  
ADULT ASSEMBLY REQUIRED.

For your child's safety, do not let your child play with the toy until it is fully assembled.



### **ATTENTION :**

Ce jouet contient des petites vis.

CE JOUET DOIT ÊTRE ASSEMBLÉ PAR UN ADULTE.

Pour la sécurité de votre enfant, ne pas le laisser jouer avec le jouet tant que ce dernier n'est pas complètement assemblé par un adulte.

**Visit our website for more  
information about our products,  
downloads, resources and more.**

***vtechkids.com***  
***vtechkids.ca***

Read our complete warranty policy online at  
***vtechkids.com/warranty***  
***vtechkids.ca/warranty***

