

vtech[®]
Baby

User's Manual

Snuggle & Sleep Musical Sheep™



© 2016 VTech
Printed in China
91-002775-005-006 ^{US}

Dear Parent,

Ever notice the look on your baby's face when they learn something new through their own discovery? These self-accomplished moments are a parent's greatest reward. To help fulfill them, **VTech**[®] created the **Infant Learning**[®] series of toys.

These unique interactive learning toys directly respond to what children do naturally – play! Using innovative technology, these toys react to baby's interactions, making each play experience fun and unique as they learn age-appropriate concepts like first words, numbers, shapes, colors and music. More importantly, **VTech**[®]'s **Infant Learning**[®] toys develop baby's mental and physical abilities by inspiring, engaging and teaching.

At **VTech**[®], we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting **VTech**[®] with the important job of helping your child learn and grow!

Sincerely,


Your friends at **VTech**[®]

To learn more about **VTech**[®] toys, visit vtechkids.com

INTRODUCTION

Thank you for purchasing the **VTech® Snuggle & Sleep Musical Sheep™**.

The **Snuggle & Sleep Musical Sheep™** is soft and cuddly plush sheep with 40 melodies and 5 lullabies! The sheep plays melodies, nature sounds and sings lullabies to soothe your baby. The sheep also includes a sound sensor that triggers music and nature sounds when your baby cries. You can also personalize the **Snuggle & Sleep Musical Sheep™** through **VTech®'s Learning Lodge™** with your child's name, favorite stories and so much more!

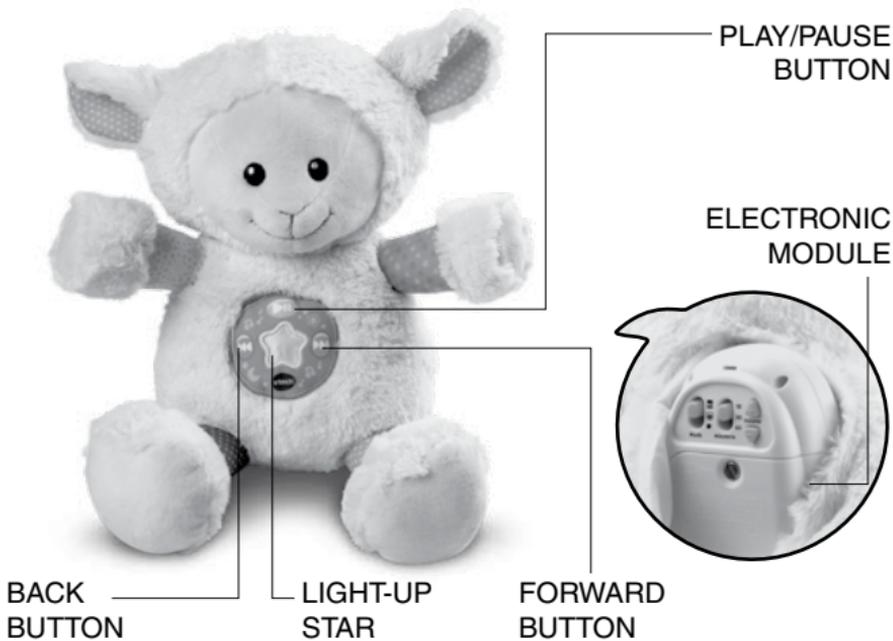

INCLUDED IN THIS PACKAGE

- One VTech® Snuggle & Sleep Musical Sheep™
- One user's manual

WARNING:

All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

ATTENTION:

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.


NOTE:

Please keep this user's manual as it contains important information.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the electronic module inside the sheep. Use a coin or a screwdriver to loosen the screw.
3. Install 3 new 'AA' (AM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure the battery cover.

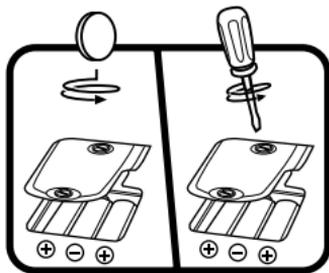

SD CARD

- For maximum performance, we recommend the use of a new SD card dedicated solely to the **VTech® Snuggle & Sleep Musical Sheep™**.
- An SD card with a memory size of 8G or higher is recommended.

WARNING

- If the electronic module is being used as a stand alone MP3 player without the plush sheep, please avoid direct eye contact with the light.





BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

ASSEMBLY INSTRUCTIONS

To ensure your child's safety, this product should only be assembled by an adult. Please remove the electronic module from the sheep before washing.

1. To remove the electronic module, open the hook and loop closure on the back of the sheep. Press and hold the blue button on the bottom left of the electronic module and pull out the electronic module.
2. To insert the electronic module, connect the rounded part of the electronic module to the rounded piece inside the sheep. A click indicates that the electronic module is correctly attached. Close and secure the hook and loop closure.
3. To install an SD card, remove the electronic module from the sheep and open the battery compartment. Insert the SD card into the slot on the right side of the electronic module. To remove the SD card, press on the SD card to eject it from the electronic module.
4. To add MP3 music files to the SD card, you can copy the files directly to the SD card. You do not need to create a specific folder.

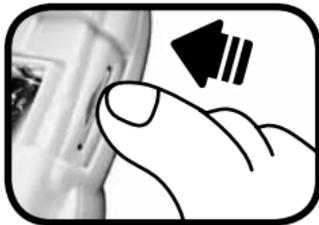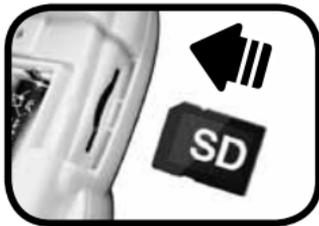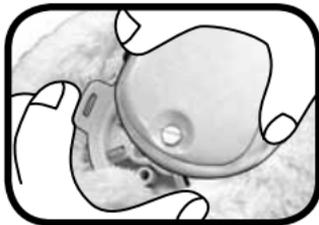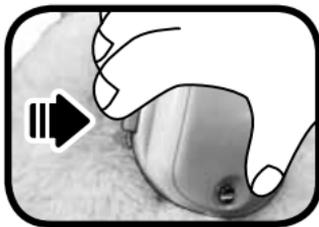


PRODUCT FEATURES

1. ON/OFF/MODE SELECTOR SWITCH


To play music from an SD card, slide the **ON/OFF/MODE SELECTOR SWITCH** to the SD mode (). The music will play in the same order the music was added to the SD card.

Slide the **ON/OFF/MODE SELECTOR SWITCH** to the sheep mode () to listen to the pre-programmed songs and melodies. To turn the unit **OFF**, slide the **ON/OFF/MODE SELECTOR SWITCH** to the **OFF** () position.

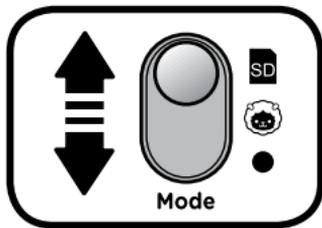


2. TIMER SWITCH

Slide the **15 MIN/30 MIN/60 MIN SWITCH** to choose the corresponding time setting.

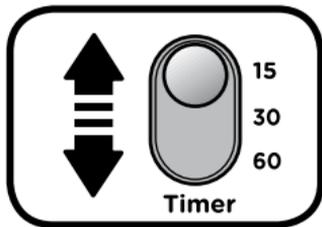


3. VOLUME CONTROL

Press the **+ BUTTON** to increase the volume or press the **- BUTTON** to decrease the volume.

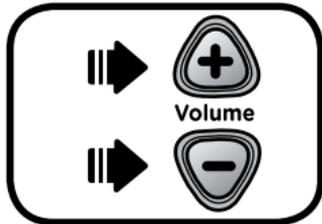

4. HOW TO PLAY

To play a melody or song, press the **PLAY/PAUSE BUTTON** (). Press the **PLAY/PAUSE BUTTON** while a song or melody is playing to pause the music. To jump to the previous song or melody, press the **BACK BUTTON** (). To jump to the next song or melody, press the **FORWARD BUTTON** ().

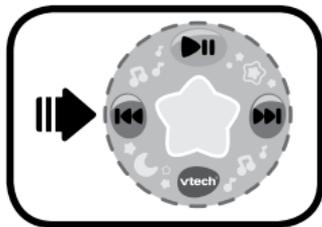

5. SOUND SENSOR

The **Snuggle & Sleep Musical Sheep™** is equipped with a special sound sensor. Once the selected time setting has ended, the unit will automatically power-down. The sensor will reactivate the program when it detects baby's cry for approximately 4 seconds without interruption. The unit will reactivate and play lullabies and nature sounds.


6. AUTOMATIC SHUT-OFF

To preserve battery life, the **Snuggle & Sleep Musical Sheep™** will automatically power down after the selected time. The unit can be turned on again by pressing any button or when the sound sensor detects baby's cry.

NOTE: This product is in try-me mode in the packaging. After opening the package, turn the sheep off then on again to proceed with normal play.

ACTIVITIES

- Slide the **on/off/mode selector switch** to turn the unit on. In the sheep mode () you will hear sounds, songs and music. In the SD card mode () you will hear a friendly voice. The light will flash with the sound.

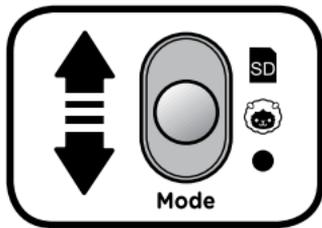

2. PERSONALIZING YOUR SHEEP

You can personalize your **Snuggle & Sleep Musical Sheep™** with the first name of your child, favorite songs, stories and more by connecting to the **VTech® Learning Lodge™**.

3. LEARNING LODGE SOFTWARE

Before you can connect the **VTech® Snuggle & Sleep Musical Sheep™** to your computer, you need to install the **VTech® Snuggle & Sleep Musical Sheep™** software on your computer. To obtain the **VTech® Snuggle & Sleep Musical Sheep™** software, please go to the **VTech® Snuggle & Sleep Musical Sheep™** download site at <http://www.vtechkids.com/download> and download the setup file. Once the setup process is complete, prepare an SD card and insert it into the card reader, then follow the online instructions.

SONG LYRICS

SONG 1

Beautiful dreamer, wake unto me,
Starlight and dewdrops are waiting for thee;
Sounds of the rude world, heard in the day,
Lull'd by the moonlight have all pass'd away!

SONG 2

Lullaby and goodnight, with roses bedight.
With lilies o'er spread is baby's wee bed.

SONG 3

Rock-a-bye, baby.
In the treetop.
When the wind blows.
The cradle will rock.

SONG 4

Hey, diddle, diddle, the cat and the fiddle.
The cow jumped over the moon.
The little dog laughed to see such sport.
And the dish ran away with the spoon.

SONG 5

Row, row, row your boat,
Gently down the stream.
Merrily, merrily, merrily, merrily!
Life is but a dream.

MELODY LIST

1. Clair de lune (Debussy)
2. Frère Jacques
3. Au Clair de la lune
4. Turkish March (Mozart)
5. Swan Lake (Tchaikovsky)
6. New World Symphony (Dvorak)
7. Berceuse (Chopin)
8. Four Seasons Spring, 3rd movement (Vivaldi)
9. Hungarian Dances (Brahms)
10. Badinerie (Bach)
11. To a Wild Rose (MacDowell)
12. Berceuse (Brahms)
13. Menuet Minuet (Mozart)
14. Fur Elise (Beethoven)
15. Home Sweet Home
16. Jesu Joy of Man's Desiring (Bach)
17. Greensleeves
18. Canon in D (Pachelbel)
19. Minuet in G (Bach)
20. Ode to Joy (Beethoven)
21. Sleeping Beauty Waltz Op. 66 (Tchaikovsky)
22. Eine Kleine Nachtmusik (Mozart)
23. All Through the Night

24. Moonlight Sonata (Beethoven)
25. Air (Bach)
26. Sweet and Low
27. Klipp Klapp Gallop (Strauss)
28. Lavender's Blue
29. Spring Song (Mendelssohn)
30. Minuet (Boccherini)
31. Rondo a Capriccio (Beethoven)
32. Nocturne in Eb No.2 Op. 9 (Chopin)
33. Piano Concerto A, 3rd Movement (Mozart)
34. Four Seasons Winter, 2nd movement (Vivaldi)
35. The Magic Flute, K620, Papageno Arias No2 and 20 (Mozart)
36. Waltz of the Flowers (The Nutcracker, Tchaikovsky)
37. Morning (Peer Gynt Suite, Grieg)
38. Cradle Song (Mozart)
39. Prelude in A (Chopin)
40. Irish Lullaby

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
5. The sheep is hand washable. Please remove the electronic module and follow the care instructions on the label.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit sit for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our web site at www.vtechkids.com and filling out our Contact Us form located under the Customer Support link. A service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **Infant Learning** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our web site at www.vtechkids.com and filling out our Contact Us form located under the Customer Support link with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:
(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

CAN ICES-3 (B)/NMB-3(B)



PRODUCT WARRANTY

This Warranty is applicable only to the original purchaser, is non-transferable and applies only to "VTech" products or parts. This product is covered by a 3-month Warranty from the original purchase date, under normal use and service, against defective workmanship and materials. This Warranty does not apply to (a) consumable parts, such as batteries; (b) cosmetic damage, including but not limited to scratches and dents; (c) damage caused by use with non-VTech products; (d) damage caused by accident, misuse, unreasonable use, immersion in water, neglect, abuse, battery leakage, or improper installation, improper service, or other external causes; (e) damage caused by operating the product outside the permitted or intended uses described by VTech in the owner's manual; (f) a product or part that has been modified (g) defects caused by normal wear and tear or otherwise due to the normal aging of the product; or (h) if any VTech serial number has been removed or defaced.

Prior to returning a product for any reason, please notify the VTech Consumer Services Department by going to our web site at www.vtechkids.com, filling out our Contact Us form located under the Customer Support link or calling 1-800-521-2010.

If the service representative is unable to resolve the issue, you will be provided instructions on how to return the product and have it replaced under Warranty. Return of the product under Warranty must adhere to the following rules: If VTech believes that there may be a defect in the materials or workmanship of the product and can confirm the purchase date and location of the product, we will at our discretion replace the product with a new unit or product of comparable value. A replacement product or parts assumes the remaining Warranty of the original product or 30 days from the date of replacement, whichever provides longer coverage.

THIS WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL, WRITTEN, STATUTORY, EXPRESS OR IMPLIED. IF VTECH CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY AND TO THE REPLACEMENT SERVICE AS DETERMINED BY VTECH IN ITS SOLE DISCRETION.

To the extent permitted by law, VTech will not be responsible for direct, special, incidental or consequential damages resulting from any breach of Warranty.

This Warranty is not intended to persons or entities outside the United States of America. Any disputes resulting from this Warranty shall be subject to the final and conclusive determination of VTech.