

vtech[®]

User's Manual

Bright Lights Phone™



Bilingual!
Play in
English
or
Spanish

© 2009 VTech
Printed in China

91-001552-010-000 (美)

 
Dear Parent,

Ever notice the look on your baby's face when they learn something new through their own discovery? These self-accomplished moments are a parent's greatest reward. To help fulfill them, **VTech**[®] created the **Infant Learning**[®] series of toys.

These unique interactive learning toys directly respond to what children do naturally – play! Using innovative technology, these toys react to baby's interactions, making each play experience fun and unique as they learn age-appropriate concepts like first words, numbers, shapes, colors and music. More importantly, **VTech**[®]'s **Infant Learning**[®] toys develop baby's mental and physical abilities by inspiring, engaging and teaching.

At **VTech**[®], we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting **VTech**[®] with the important job of helping your child learn and grow!

Sincerely,




Julia Fitzgerald
Vice President, Marketing
VTech Electronics, NA

To learn more about the **Infant Learning**[®] series and other **VTech**[®] toys, visit www.vtechkids.com

INTRODUCTION

Thank you for purchasing the **VTech® Bright Lights Phone™** learning toy!

With the **VTech® Bright Lights Phone™**, babies can take part in a favorite role-play activity with their very own phone! With the press of a button, the screen magically changes images and activities. Realistic phone sounds and conversational phrases make baby talk even more fun! What's more, your child can play in English or Spanish for twice the learning!

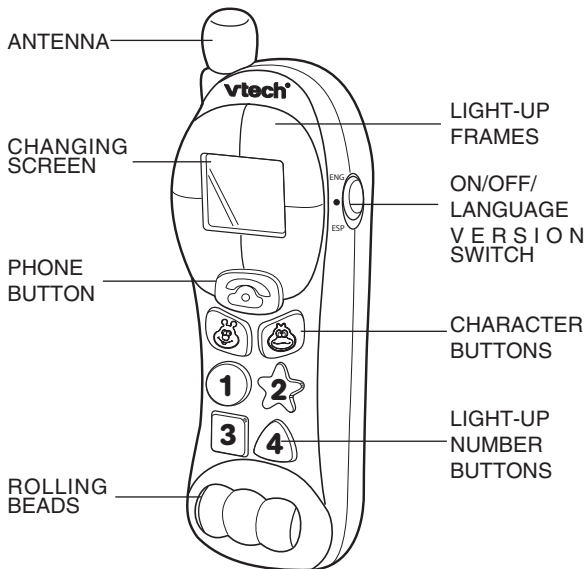

INCLUDED IN THIS PACKAGE


- One VTech® Bright Lights Phone™ learning toy
- One instruction manual

WARNING: All packing materials, such as tape, plastic sheets, wire ties and tags are not part of this toy, and should be discarded for your child's safety.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the unit. Use a coin or screwdriver to loosen the screw.
3. Install 3 new “AAA” (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure the battery cover.

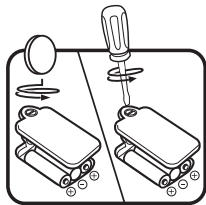


BATTERY NOTICE

- The use of new alkaline batteries is recommended for maximum performance.
- Install batteries correctly observing the polarity (+, -) signs to avoid leakage.
- Do not mix old and new batteries.
- Do not mix batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Remove the batteries from the equipment when the unit will not be used for an extended period of time.
- Always remove exhausted batteries from the equipment.
- Do not dispose of batteries in fire.
- Do not attempt to recharge ordinary batteries.
- The supply terminals are not to be short-circuited.
- Only batteries of the same and equivalent type as recommended are to be used.


WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES.

PRODUCT FEATURES


1. To turn the unit **ON**, slide the **ON/OFF/ LANGUAGE VERSION SWITCH** to the **ENGLISH (ENG)** or **SPANISH (ESP)** position.

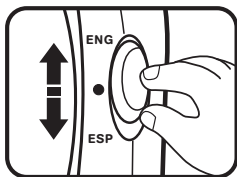


2. To choose a mode, locate the **MODE SELECTOR** on the back of the unit. Slide the **MODE SELECTOR** to the **TALKING MODE (☺)** or the **MUSIC MODE (🎵)** position.

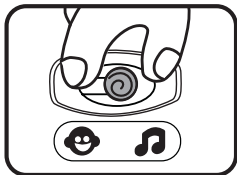

3. Once you have selected between the **TALKING MODE** and the **MUSIC MODE**, press the phone button to flip through the three screen images. Changing the screen images will change the response of all the buttons and beads.

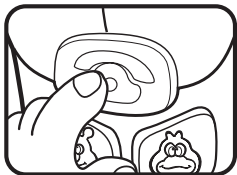


4. To turn the unit **OFF**, slide the **ON/OFF/ LANGUAGE VERSION SWITCH** to the **OFF (●)** position.

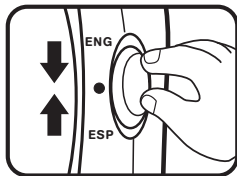

ACTIVITIES


A. TALKING MODE

1. Slide the **MODE SELECTOR** on the back of the unit to the **TALKING MODE** (☺) position. You will hear a dialing and ringing sound effect, followed by "Hello!" The number buttons and frames will flash with the sound.

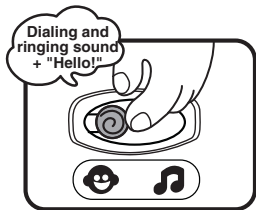


Number Screen


1. Press the **PHONE BUTTON** to flip through the three screens, stopping on the number screen. You will hear a dialing and a ringing sound effect. The number buttons and frames will flash with the sound.

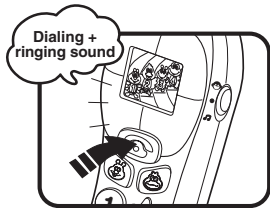


2. Press the **LIGHT-UP NUMBER BUTTONS** to hear the numbers identified followed by the corresponding number of piano notes. The number button will light up when the number is identified and the frames will flash with the piano notes.

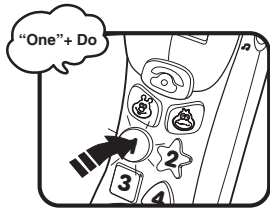

3. Press the **CHARACTER BUTTONS** to hear the characters identified. The number buttons will flash with the sound.

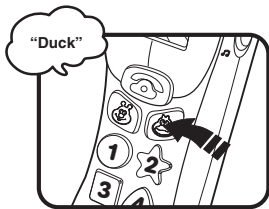


4. Roll the **BEADS** to hear numbers identified. The corresponding number button will light up with the sound.

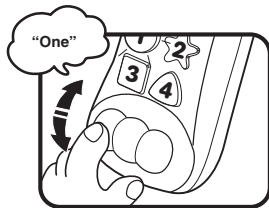


Character Screen


1. Press the **PHONE BUTTON** to flip through the three screens, stopping on the character screen. You will hear "Hello!" The number buttons will flash with the sound.

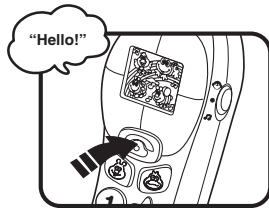


2. Press the **LIGHT-UP NUMBER BUTTONS** to hear the button colors identified. The corresponding number button and frame will light up with the sound.

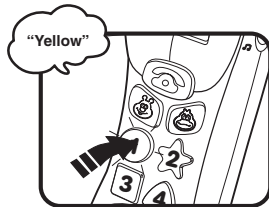

3. Press the **CHARACTER BUTTONS** to hear the colors and character names identified. The corresponding frame will light up with the sound.

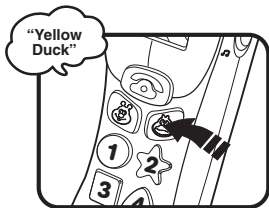


4. Roll the **BEADS** to hear the bead colors identified. The corresponding number button and frame will light up with the sound.

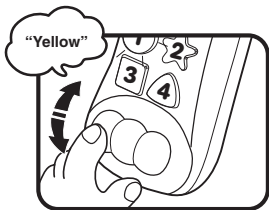


Mirror Screen


1. Press the **PHONE BUTTON** to flip through the three screens, stopping on the mirror screen. You will hear "Peek-a-boo!" The number buttons will flash with the sound.

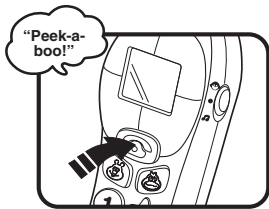


2. Press the **LIGHT-UP NUMBER BUTTONS** to hear short tunes. The number buttons or the frames will flash with the sound.

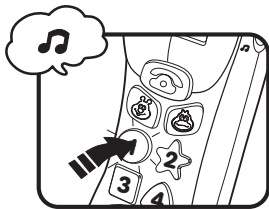

3. Press the **CHARACTER BUTTONS** to hear sound effects. The number buttons will flash with the sound.

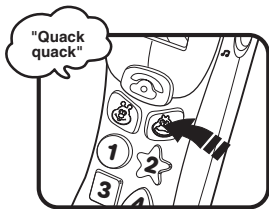

4. Roll the **BEADS** to hear individual piano notes. The frames will light up with the sound.

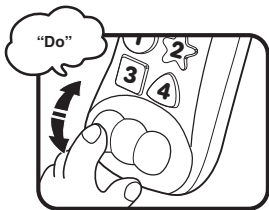

5. If there is no input to the unit after approximately 15 seconds, you will hear a dialing and a ringing sound effect. If there is no input after another 15 seconds, you will hear a ringing sound effect followed by "Hello!" The unit will automatically power-down. The unit can be turned on again by pressing any button.


B. MUSIC MODE

1. Slide the **MODE SELECTOR** to the **MUSIC MODE** (🎵) position. You will hear a short tune. The number buttons and frames will flash with the sound.




Number Screen


1. Press the **PHONE BUTTON** to flip through the three screens, stopping on the number screen. You will hear a dialing sound effect. The number buttons will flash with the sound.

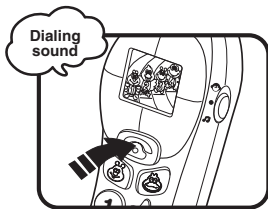


2. Press the **LIGHT-UP NUMBER BUTTONS** to hear sound effects played the corresponding number of times. The corresponding number button will light up with the sound.

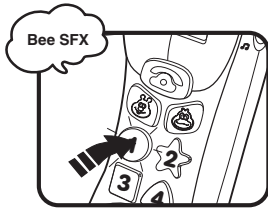

3. Press the **CHARACTER BUTTONS** to hear sound effects. The frames on the right side will flash with the duck sound and the frames on the left side will flash with the bug sound.

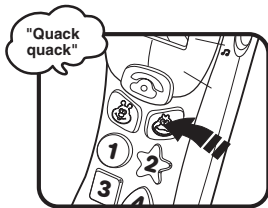


4. Roll the **BEADS** to hear individual piano notes. The frames will light up with the sound.

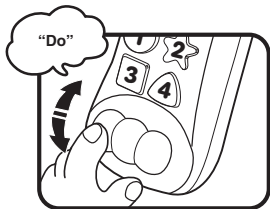


Character Screen


1. Press the **PHONE BUTTON** to flip through the three screens, stopping on the character screen. You will hear a ringing sound effect. The frames will flash with the sound.

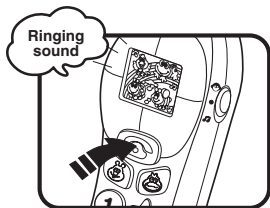


2. Press the **LIGHT-UP NUMBER BUTTONS** to hear sound effects followed by short tunes. The corresponding number button will flash with the sound effect. The number buttons or frames will flash with the short tunes.

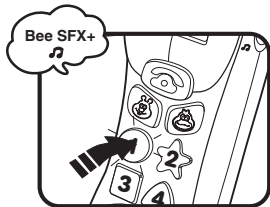

3. Press the **CHARACTER BUTTONS** to hear melodies. The number buttons and frames will flash with the sound. Press the character buttons while a melody is playing to hear the character sound effect take over playing the melody.

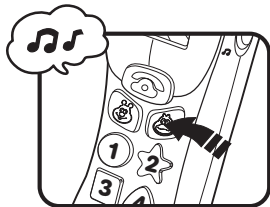


4. Roll the **BEADS** to hear melodies. The number buttons and frames will flash with the sound. Roll the beads while a melody is playing to hear random sound effects play over top of the melody.

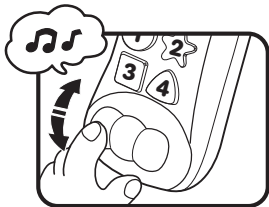


Mirror Screen


1. Press the **PHONE BUTTON** to flip through the three screens, stopping on the mirror screen. You will hear “Peek-a-boo!” The number buttons will flash with the sound.

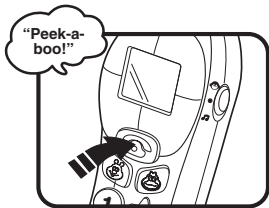


2. Press the **NUMBER BUTTONS** to hear melodies. The number buttons and frames will flash with the sound.

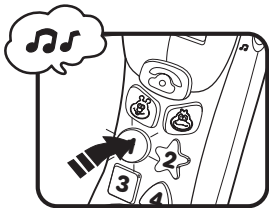

3. Press the **CHARACTER BUTTONS** to hear sound effects. The frames on the right side will flash with the duck sound effect and the frames on the left side will flash with the bug sound effect. Press the character buttons while a melody is playing to hear the character sound effect take over playing the melody.

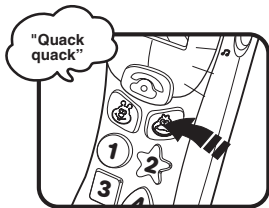

4. Roll the **BEADS** to hear random short tunes. The number buttons and frames will flash with the sound.

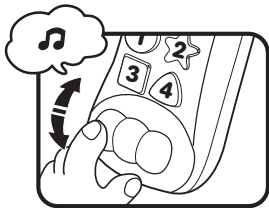

5. If there is no input to the unit after approximately 15 seconds, you will hear a random melody. If there is no input after another 15 seconds, you will hear a random short tune. The unit will automatically power-down. The unit can be turned on again by pressing any button.

MELODIES:

- | | |
|-------------------------|----------------------------|
| 1. A-Tisket, A-Tasket | 2. London Bridge |
| 3. Yankee Doodle | 4. Hickory Dickory Dock |
| 5. Pop! Goes the Weasel | 6. Row, Row, Row Your Boat |
| 7. Looby Loo | 8. Good Night, Ladies |

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

For information on this product's warranty, please call **VTech**® at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada.

IMPORTANT NOTE:

Creating and developing **Infant Learning** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES-003.

CET APPAREIL NUMÉRIQUE DE LA CLASSE B EST CONFORME À LA NORME NMB-003 DU CANADA.

Caution : Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

vtech[®]

Manual de
Instrucciones

Bright Lights Phone™



Bilingual!

**Play in
English
or
Spanish**

© 2009 VTech
Printed in China

91-001552-010-000 (美)

QUERIDOS PADRES

En VTech® sabemos que los niños tienen la capacidad de hacer grandes cosas. Esta es la razón por la que nuestros juguetes electrónicos educativos se diseñan de tal modo que ayudan a desarrollar y estimular la inteligencia de los niños y les permiten aprender y ejercitar numerosas habilidades. Ya sea para aprender letras o números, identificar colores y figuras, o estimular los sentidos con música y luces, todos los productos educativos de VTech® incorporan avanzadas tecnologías y están adaptados al currículo escolar para motivar a los niños de todas las edades a alcanzar su máximo potencial.


Para más información sobre nuestros productos visite:

www.vtechkids.com

INTRODUCCIÓN

Gracias por comprar **Bright Lights Phone™** de **VTech®**. En **VTech®** nos comprometemos a desarrollar los mejores juguetes posibles para entretener y educar a su hijo.

Bright Lights Phone™ es un divertido teléfono móvil para niños de 6 meses en adelante. Tiene luces, sonidos, música y llamativos colores, todo lo que los críos de esta edad necesitan para potenciar y desarrollar sus sentidos. Cada vez que jueguen con él, descubrirán cosas nuevas y serán capaces de aprovechar todo su potencial.

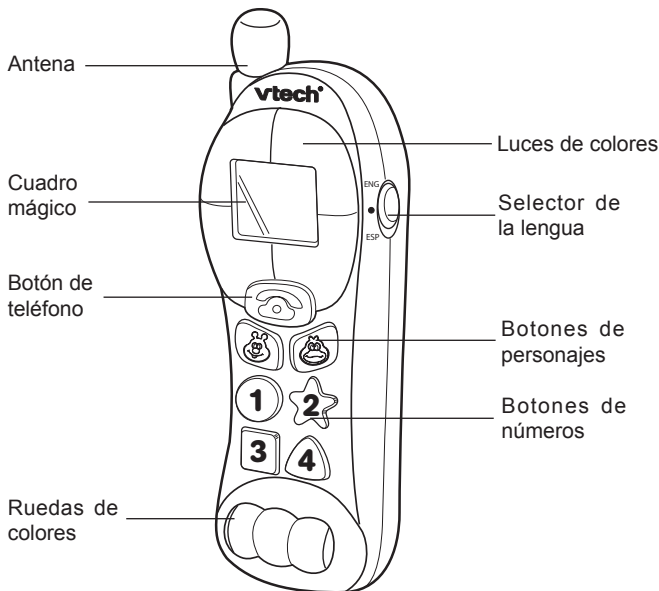


INCLUIDO EN ESTE EMBALAJE

- Un **Bright Lights Phone™** de VTech®.
- Un manual de instrucciones.

ADVERTENCIA: Todos los materiales de este embalaje, tales como cintas, hojas de plástico, alambres y etiquetas, no son parte de este juguete y deberían ser desechados para la seguridad de su hijo.

INSTALACIÓN DE LAS PILAS

1. Asegúrese de que el juguete esté apagado.
2. Localice el compartimento de las pilas en la parte trasera del mismo. Utilice una moneda o un destornillador para abrir la tapa.
3. Coloque 3 pilas “AAA” (AM-4/LR03) como muestra el dibujo.
4. Coloque de nuevo la tapa y apriete el tornillo para cerrar el compartimento.

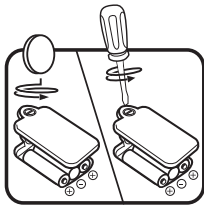

ADVERTENCIA

- Se recomienda el uso de pilas alcalinas de alto rendimiento específicas para productos tecnológicos.
- Instale las pilas correctamente respetando los signos de polaridad (+, -) para evitar cualquier tipo de fuga.


- Reemplace todas las pilas cada vez que se cambien.
- No mezcle pilas nuevas y viejas.
- No utilice pilas de diferentes tipos.
- Extraiga las pilas cuando no se vaya a utilizar el juguete durante un largo periodo de tiempo.
- No intente recargar pilas normales.
- No acerque las pilas al fuego.
- No se debe provocar cortocircuitos en los bornes de una pila.
- Las pilas deben ser instaladas por un adulto o bajo su supervisión.
- Retire las pilas usadas del juguete.
- Retire las pilas recargables del juguete para su carga.
- Debe recargar las pilas siempre bajo la vigilancia de un adulto.
- Ayúdenos a cuidar nuestro entorno, es responsabilidad de todos. Este símbolo indica que este producto y sus pilas no deben tirarse a la basura al final de su vida útil, sino que deben ser depositados en contenedores especiales, para poder reciclarlos adecuadamente y así evitar daños en el medio ambiente o efectos perjudiciales para la salud. Por favor, respete la normativa vigente y recurra a un Punto Limpio o a los servicios destinados para tal fin en su localidad.



NO RECOMENDAMOS EL USO DE PILAS RECARGABLES CON ESTA UNIDAD. SU UTILIZACIÓN PODRÍA ALTERAR EL FUNCIONAMIENTO NORMAL DEL JUGUETE.

CARACTERÍSTICAS


1. Para girar la unidad, resbale el **selector de la lengua** hacia la posición **inglesa** (ENG) o **española** (ESP).

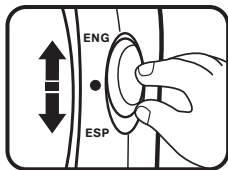


2. Para elegir un modo, sitúe el **selector de modo** en la parte posterior de la unidad. Resbale el selector de modo hacia el **modo voz** (🗣️) o la posición del **modo música** (🎵).



3. Presione el **botón de teléfono** para cambiar la pantalla y con ello el modo de juego.

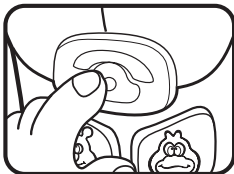

4. Para apagar la unidad, resbale el selector de la lengua hacia la posición de **reposo** (●).

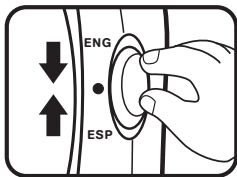


NOTA: Para ahorrar energía, el juguete se apagará automáticamente después de unos minutos de inactividad. Para volver a jugar, sólo hará falta presionar cualquier botón.

ACTIVIDADES


MODO VOZ (🗣)

Pantalla de Números


1. Pulsando las **teclas de números**, escuchará los números seguidos de tantas notas como le correspondan.

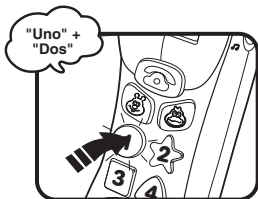

2. Pulsando los **personajes**, éstos se identificarán a la vez que se encienden las luces.

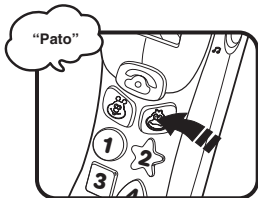


3. Al girar las **bolitas** se identificarán los números con cada una de ellas.

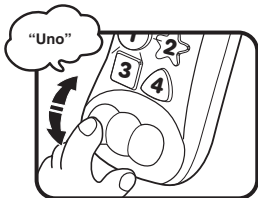

Pantalla de Personajes


1. Pulsando las **teclas de números**, escuchará los colores y se encenderán sus luces correspondientes.

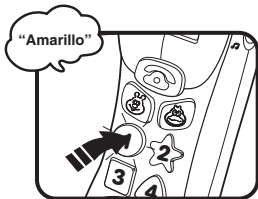

2. Pulsando los **personajes**, se identificarán por su nombre y color correspondiente.




3. Al girar las **bolitas** se escucharán los colores y se encenderán las luces que le corresponden

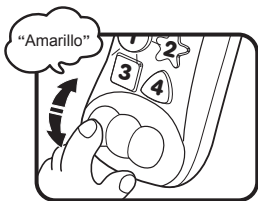


Pantalla de Espejo


1. Pulsando las **teclas de números** escuchará cortas melodías y se encenderán las luces alrededor de la pantalla.

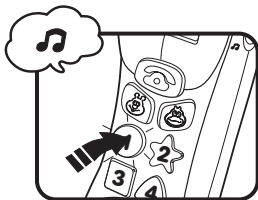

2. Pulsando los **personajes**, escuchará sus sonidos característicos.

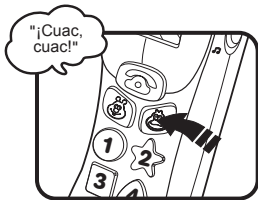


3. Al girar las **bolitas** se escucharán notas musicales y se encenderán las luces que le corresponden.

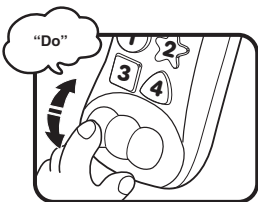


MODO MÚSICA (🎵)

Pantalla de Números


1. Pulsando las **teclas de números**, escuchará diferentes efectos de sonido.

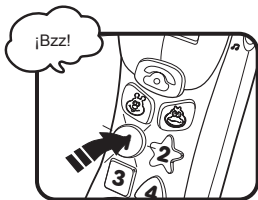

2. Pulsando los **personajes** escuchará su sonido característico.

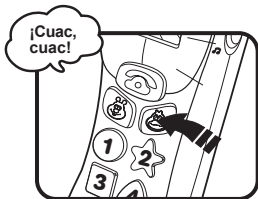


3. Al girar las **bolitas** se escucharán notas musicales y se encenderán las luces que le corresponden.

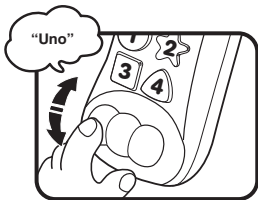


Pantalla de Personajes

 
1. Pulsando las **teclas de números**, escuchará los efectos de sonido seguido de melodías cortas.

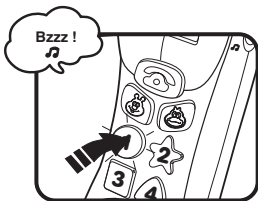

2. Pulsando los **personajes** escuchará divertidas melodías, si los pulsa una segunda vez oírás cómo cantan.

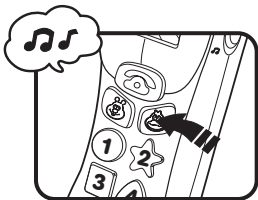


3. Al girar las **bolitas** se escucharán melodías, si las pulsa por segunda vez escuchará efectos de sonido.

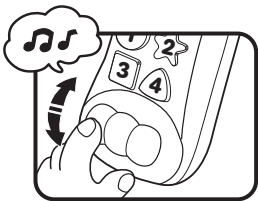


Pantalla de Espejo


1. Pulsando las **teclas de números** escuchará melodías y se encenderán todas las luces. Si a la vez pulsa los animales, escuchará cómo cantan.

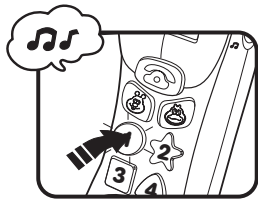

2. Pulsando los **personajes**, escuchará sus sonidos característicos.

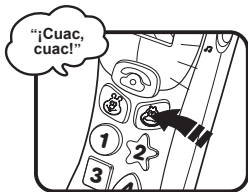

3. Al girar las **bolitas** se escucharán melodías cortas.

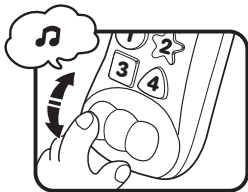

CUIDADO Y MANTENIMIENTO

1. Limpie el juguete con un paño suave ligeramente húmedo. No utilice disolventes ni abrasivos.
2. Manténgalo lejos de la luz directa del sol o de cualquier otra fuente de calor.
3. Quite las pilas cuando el juguete no vaya a ser utilizado durante un largo periodo de tiempo.
4. No deje caer la unidad sobre superficies duras, ni la esponja a la humedad o al agua.
5. No trate de reparar la unidad ni desmontar el producto.

SOLUCIÓN DE PROBLEMAS

Si por alguna razón la unidad deja de funcionar o lo hace con irregularidad, por favor, siga estos pasos:

1. Apague el juguete.
2. Quite las pilas.
3. Deje que la unidad repose durante unos minutos, después, vuelva a poner las pilas.
4. Encienda el juguete, ahora debería funcionar.
5. Si el producto sigue sin funcionar, utilice pilas nuevas.

Si el problema continúa, por favor, póngase en contacto con nuestro Servicio de Atención al Cliente a través del teléfono 1-800-521-2010 en los Estados Unidos, 1-877-352-8697 en Canadá o del correo electrónico: www.vtechkids.com