 


vtech®

 
Instruction Manual

Kidi★Star™
ROCKSTAR GUITAR™

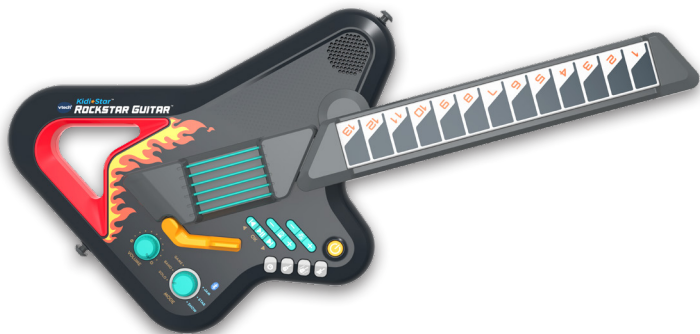

INTRODUCTION

Thank you for purchasing the **VTech® Kidi Star™ Rockstar Guitar™!** Strike a chord and own the stage with the **Kidi Star™ Rockstar Guitar™!** Play in 6 different modes, including an exciting rhythm game. Connect wirelessly to your own music and play along to your favorite songs. Use the whammy bar or tilt the guitar to trigger crowd-pleasing effects. The stage is set for a sold-out show – let's rock!

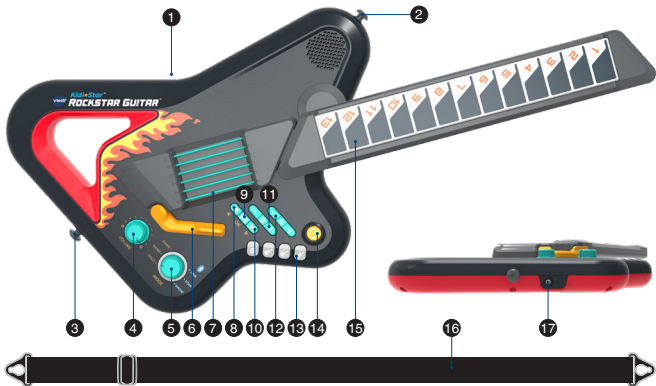

1	Motion Sensor	10	Next Button
2	Top Guitar Knob	11	Tempo Buttons
3	Bottom Guitar Knob	12	Key Select Buttons
4	Volume Dial	13	Guitar Selection Buttons (Electric, Rock, Acoustic, Fun)
5	Mode Dial		
6	Whammy bar	14	Power Button
7	Strings	15	Fret Buttons
8	Previous Button	16	Guitar Strap
9	Play/Pause/OK Button	17	Audio-out Jack (Headphone Jack)

INCLUDED IN THE PACKAGE

- One VTech® Kidi Star™ Rockstar Guitar™
- One Guitar Strap
- Quick Start Guide

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE:

Please save this Instruction Manual as it contains important information.

ATTENTION :

 
Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

NOTE :

Il est conseillé de sauvegarder ce manuel d'utilisation car il comporte des informations importantes.

Activate Normal Play Mode

Unlock the Packaging Locks and Active the Normal Play Mode:

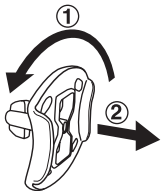

① Rotate the packaging locks 90 degrees counter-clockwise.

② Pull out the packaging locks; the unit will exit the **Try-Me Mode**.

 
 
 
GETTING STARTED

FOLDABLE GUITAR

Adult assembly is required. For your child's safety, do not let them play with this toy until it is fully assembled.



If the **Fretboard** is folded, unfold it before playing.

Use a screwdriver to tighten the screw (located on the back of the unit) to secure the **Fretboard** in its unfolded position.

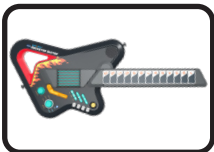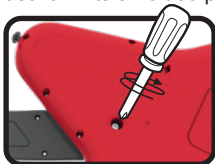
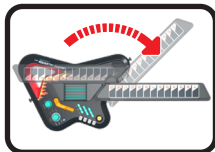


GUITAR STRAP INSTALLATION

  A. Install one end of the strap to the guitar knob on the top:

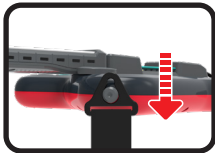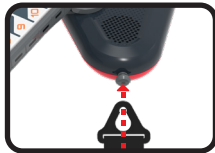

  B. Then install the other end of the strap to the knob at the bottom:

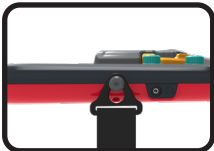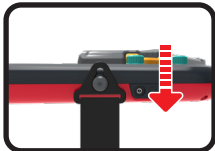

C. Make sure each end of the strap is snapped into place and is not loose.

⚠ WARNING:

 
Adult assembly required for battery installation.
Keep batteries out of reach of children.

⚠ ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.
Tenir les piles ou accumulateurs hors de portée des enfants.

Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the back of the unit and use a screwdriver to loosen the screw, then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 4 new 1.5V AA (LR6) batteries, following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

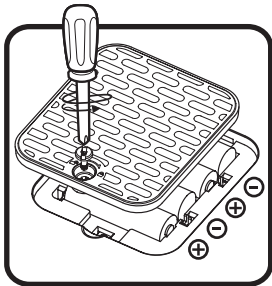

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

IMPORTANT : INFORMATIONS CONCERNANT LES PILES

Les piles fournies avec le produit permettent de tester le jouet en magasin mais ne sont pas des piles longue durée.

- Mettre en place les piles ou les accumulateurs en respectant les polarités + et –.
- Ne pas mélanger des piles ou des accumulateurs neufs avec des usagés.
- Ne pas mélanger différents types de piles : alcalines, zinc-carbone et rechargeables.
- Seules des piles du type recommandé doivent être utilisées.
- Ne pas mettre les bornes d'une pile ou d'un accumulateur en court-circuit (en reliant directement le + et le –).
- Retirer les piles ou les accumulateurs en cas de non-utilisation prolongée.
- Enlever les piles ou les accumulateurs usagés du jouet.
- Ne les jeter ni au feu ni dans la nature.

PILES RECHARGEABLES

- Les accumulateurs ne doivent être chargés que sous la surveillance d'un adulte.
- Ne pas tenter de recharger des piles non rechargeables.

PRODUCT FEATURES

1. Power Button

Press the **Power Button** to turn the unit **ON**. Press it again to turn the unit **OFF**.



2. Mode Dial

 
Turn the **Mode Dial** to choose from 6 modes: Solo, Band, Game, Jam (with **Bluetooth**[®] wireless technology), Star (with **Bluetooth**[®] wireless technology), Show (with **Bluetooth**[®] wireless technology).



3. Fret Buttons


Solo, Jam and Star modes: Press and hold the **Fret Buttons** while you strum the **Strings** to play different chords.

Band mode: Press the **Fret Buttons** to add or remove instruments to the melody that's playing.

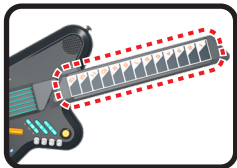

4. Strings

 Strum the **Strings** to play music notes. (See the Play Modes section below for how to use the **Strings** in the different modes.)

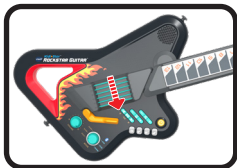


5. Whammy Bar

Move the **Whammy Bar** to hear guitar sound effects. (See the Play Modes section below for how to use the **Whammy Bar** in the different modes.)



6. Motion Sensor

 
Tilt the guitar neck up to hear excited crowd-cheering effects. (See the Play Modes section below for how to use the **Motion Sensor** in the different modes.)

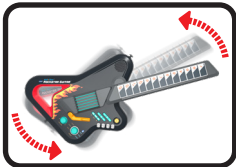

7. Guitar Selection Buttons


Press the **Guitar Selection Buttons** to choose among 4 different guitar styles: Electric (🎸), Rock (🎸), Acoustic (🎸) and Fun (🎸).

 The Guitar Selection button will light up when selected.

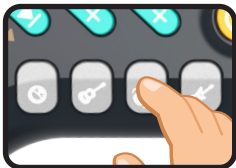

8. Key Select Buttons

 Press the **Key Select Buttons** to change the key of the guitar when using the **Fret Buttons** and **Strings** in Solo, Jam and Star modes.

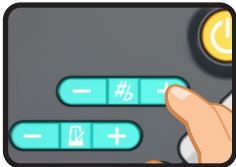

9. Tempo Buttons

Press the **Tempo Buttons** to change the music tempo in Band mode.



- 10. Previous Button** ;
Play/Pause/OK Button ;
Next Button 

Use these buttons to select music or Game levels.



 
11. Volume Dial

Use the **Volume Dial** to adjust the volume.



12. Audio-out Jack (Headphone Jack)

Use a 3.5mm audio cable (not included) to connect the guitar to an external speaker. For silent play, connect the guitar to headphones (not included).

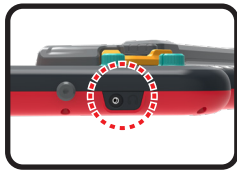

13. Automatic Shut Off

To preserve battery life, the unit will automatically power **OFF** after several minutes without input. The unit can be turned **ON** again by pressing the **Power Button**.

When the batteries are low, the lights of **Fret Button 13** and the **Mode Dial** will flash three times in red and then the guitar will automatically turn off. Please install new batteries and try again.

PLAY MODES

Solo

Hold the **Fret Buttons** and strum the **Strings**; press the **Whammy Bar** and tilt the guitar neck up to create your own music. Press the **Key Select Buttons** to change the key of the **Fret Buttons** and the **Strings** when you play.

See the Music Sheets section below for guides to play some classic songs.

Band

Build your own band. Press the **Fret Buttons** to add and remove instruments to the song that's playing.

Mix and match from:

Fret Buttons 1 to 3 (blue lights) - three percussion tracks

Fret Buttons 4 to 6 (green lights) - three bass tracks

Fret Buttons 7 to 13 (yellow lights) - seven other instruments/tracks

Strum the **Strings** to play the main melody. Press the **Previous Button** and the **Next Button** to choose different songs. Press the **Tempo Buttons** to adjust the tempo of the music.

There are five melodies each for the Electric, Rock and Acoustic guitar styles. (All 15 melodies can be found in Fun guitar style.)

Game

Different colored lights (blue, orange, pink) will fall from the top of the **Fret Buttons**. Time the notes as they fall and play the correct control when the note reaches the white light at the bottom.

Blue lights: Strum the **Strings**.

Orange lights: Move the **Whammy Bar**.

Pink lights: Tilt the guitar neck up.

When you see a row of blue lights, keep strumming the **Strings** until all the blue lights have passed the white light.

When you see a row of orange lights, move and hold the **Whammy Bar** until all the orange lights have passed the white light.

The white light at the bottom will change to green when you catch the lights on time.

The game has four levels to choose from: Tutorial, Beginner, Semi-Pro, and Expert. Press the **Left**, **Right**, and **OK Buttons** to choose a level; then press the **Left**, **Right**, and **OK Buttons** to select a song. When selecting a song, you can change the level by pressing and holding the **OK Button** for 2 seconds or pressing any **Tempo Buttons**.

Each of the 3 guitar styles (Acoustic, Electric, Rock) have five melodies. (All 15 melodies can be played in the Fun guitar style.)

Jam (with *Bluetooth*[®] wireless technology)

Choose music from your connected device to play along. Hold the **Fret Buttons** and strum the **Strings**, press the **Whammy Bar**, or tilt the guitar neck up to jam.

Star (with *Bluetooth*[®] wireless technology)

Choose music from your connected device to play along. When you strum the **Strings** and press the **Fret Buttons**, the vocals of the streaming music will be lowered in volume so you can hear the guitar notes as you play.


NOTE:

This feature may not work with all songs that are streamed wirelessly.



Show (with *Bluetooth*[®] wireless technology)

Choose music from your connected device to pretend-play like a rock star. The music will be silent when you don't press the **Fret Buttons**, strum the **Strings** or press the **Whammy Bar**, then come to life when you play them!

Connect to *Bluetooth*[®] wireless technology (Jam, Star and Show modes)

1. Turn the **Mode Dial** to Jam, Star or Show to connect wirelessly to a nearby device. As it searches for your device, the **Mode Dial** light will flash blue.
2. Go to the **Bluetooth**[®] settings on your device and select “VTech 5910 Guitar”.
3. When the pairing request appears on your device, select “Pair” to continue. (A passcode is not required to connect the guitar to your wireless device. If you see a passcode displayed in your device’s **Bluetooth**[®] settings, simply select “Pair” to continue.)
4. On the guitar, press and hold the **OK Button**  for several seconds to confirm.
5. When the connection is successful, the **Mode Dial** light will remain **ON** in blue.
6. To disconnect from your wireless device, turn the **Mode Dial** to Solo, Band or Game.
7. **VTech**[®] **Kidi Star**[™] **Rockstar Guitar**[™] will automatically search for and connect to the most-recent wireless device it was paired with. You do not need to repeat this process next time when you want to use the same device.


NOTE:

Press and hold the **Tempo +**  and **Previous Buttons**  for 3 seconds to forget the last device that was paired with **VTech**[®] **Kidi Star**[™] **Rockstar Guitar**[™].



MUSIC SHEETS

See the music sheets on the following pages to play some classic songs in **Solo** mode.

To play, press the fret number shown and strum the **Strings** at the same time. For wider notes , let the note play for a longer time.

Twinkle, Twinkle Little Star

Twin - kle, twin - kle, lit - tle star,
      

How I won - der what you are.
      

Up a - bove the world so high,
      

Like a dia - mond in the sky,
      

Twin - kle, twin - kle, lit - tle star,
      

How I won - der what you are.
      

Itsy Bitsy Spider

The i - tsy bit - sy spi - der

5 8 8 8 9 10 10

Climbed up the wa - ter spout.

10 9 8 9 10 8

Down came the rain

10 10 11 12

And washed the spi - der out.

12 11 10 11 12 10

Out came the sun

13 13 13 12

And dried up all the rain

12 11 10 11 12 10

And the i - tsy bit - sy spi - der

5 5 8 8 8 9 10 10

Climbed up the spout a gain.

10 9 8 9 10 8

Bingo

There was a far - mer had a dog,

5 8 8 5 5 6 6 5

and Bin - go was his name - o.

5 8 8 9 9 10 8

B - I - N - G - O

10 10 11 11 11

B - I - N - G - O

9 9 10 10 10

B - I - N - G - O

8 8 9 9 9

And Bin - go was his name - o.

8 7 5 6 7 8 8

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to excess moisture.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

If there is problem pairing with your device with **Bluetooth**[®] wireless technology, please follow these steps:

1. On your wireless device, go to the **Bluetooth**[®] settings. If “VTech 5910 Guitar” is found in the list of connected, paired or saved devices, select “Forget” or “Unpair.”
2. Disable and enable **Bluetooth**[®] or restart your device.
3. Turn the unit **OFF** and **ON** again and repeat the pairing process.

IMPORTANT NOTE

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S., **1-877-352-8697** in Canada, or visit our website **vtechkids.com** and fill out our **Contact Us** form located under the **Customer Support** link. Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- 1) L'appareil ne doit pas produire de brouillage;
- 2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Bluetooth® Statement

The **Bluetooth®** word mark and logos are registered trademarks owned by the **Bluetooth®** SIG, Inc. and any use of such marks by **VTech®** is under license. Other trademarks and trade names are those of their respective owners.

RF Warning Statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Supplier's Declaration of Conformity

47 CFR § 2.1077 Compliance Information

Trade Name: VTech®
Model: 5910
Product Name: Kidi Star™ Rockstar Guitar™
Responsible Party: VTech Electronics North America, L.L.C.
Address: 1156 W. Shure Drive, Suite 200
Arlington Heights, IL 60004
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.
CAN ICES(B)/NMB(B)

**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com

vtechkids.ca

Read our complete warranty policy online at
vtechkids.com/warranty
vtechkids.ca/warranty

