

Disney
Stitch



Instruction Manual

Learning Phone



INTRODUCTION

Thank you for purchasing the **VTech® Disney Stitch Learning Phone**. Join Stitch and friends on a Hawaiian island adventure.

This pretend play phone includes 6 exciting activities and features that test your skills with problem solving, math, matching, memory and more. You can also use voice-activated play to make pretend phone calls!



INCLUDED IN THE PACKAGE

- One VTech® Disney Stitch Learning Phone
- One Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.

 
ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

NOTE

Il est conseillé de sauvegarder ce manuel d'instructions car il comporte des informations importantes.

Unlock the Packaging Locks:


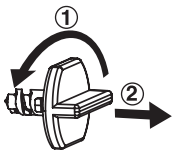


- ① Turn the packaging locks counterclockwise several times.
- ② Pull out and discard the packaging locks.

GETTING STARTED

BATTERY REMOVAL AND INSTALLATION

  1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 2 new 1.5V AA (LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

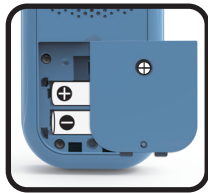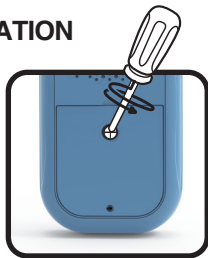

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.



ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.

Tenir les piles ou accumulateurs hors de portée des enfants.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

IMPORTANT : INFORMATIONS CONCERNANT LES PILES

- Mettre en place les piles ou les accumulateurs en respectant les polarités + et –.
- Ne pas mélanger des piles ou des accumulateurs neufs avec des usagés.
- Ne pas mélanger différents types de piles : alcalines, zinc-carbone et rechargeables.
- Seules des piles du type recommandé doivent être utilisées.
- Ne pas mettre les bornes d'une pile ou d'un accumulateur en court-circuit (en reliant directement le + et le –).
- Retirer les piles ou les accumulateurs en cas de non-utilisation prolongée.
- Enlever les piles ou les accumulateurs usagés du jouet.
- Ne les jeter ni au feu ni dans la nature.

PILES RECHARGEABLES :

- Les accumulateurs ne doivent être chargés que sous la surveillance d'un adulte.
- Ne pas tenter de recharger des piles non rechargeables.

PRODUCT FEATURES

1. On/Off Button

To turn the unit **On**, press the **On/Off Button**. Press the **On/Off Button** again to turn the unit **Off**.

2. Character Buttons

Press one of the 6 **Character Buttons**--Stitch, Angel, Lilo, Nani, Pleakley and Jumba--to play fun interactive mini games with them.



3. Activity Buttons



Press the **Activity Buttons** directly to play one of the 4 activities.

4. Number Buttons

Press the **Number Buttons** to learn numbers or to answer number-related questions.



5. Call Stitch and Friends Button



Press the **Call Stitch and Friends Button** to make pretend play phone calls and leave virtual messages for Stitch and his friends.

6. OK Button



Press the **OK Button** to confirm your choice.

7. Left/Right Buttons



Press the **Left/Right Buttons** to make a selection in activities or menus.

8. Phone Call Button



Press the **Phone Call Button** to make a pretend phone call. You will hear the phone ringing and can then pretend to leave a message on the answering machine.

9. Cancel Call Button



Press the **Cancel Call Button** at any time to exit the current activity.

10. Microphone



The **Microphone** is used for the voice activation feature. Be sure to keep the **Microphone** about 4 inches/10 centimeters from your mouth for best results.



11. Settings Button



Press the **Settings Button** to turn background music **On/Off**, adjust screen contrast, or select a ringtone.

12. Backlight On/Off Button



Press the **Backlight On/Off Button** to turn the backlight **On/Off**.

13. Light Bar

The **Light Bar** will flash or light up in one of 6 colors during gameplay responses.



14. Automatic Shut-Off

To preserve battery life, the **Disney Stitch Learning Phone** will automatically turn **Off** after several minutes of inactivity. The unit can be turned **On** again by pressing the **On/Off Button**. The unit will also automatically turn **Off** when the batteries are very low. A warning will be displayed on the screen as a reminder to change the batteries.

 
Note: This toy phone has reduced volume to adhere to safety regulations for close-to-the-ear toys.

ACTIVITIES

The **Disney Stitch Learning Phone** offers a total of 6 activities and features to play.


1. Playing with Stitch and His Friends

Press any of the 6 **Character Buttons**--Stitch, Angel, Lilo, Nani, Pleakley and Jumba--to play fun interactive mini games with them.

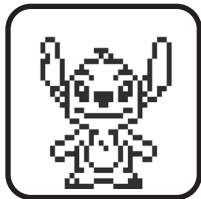


2. Odd and Even Numbers

 Help Stitch select the cakes with odd or even numbers. Press the **Left or Right Button** to choose the cakes and then press the **OK Button** to confirm.

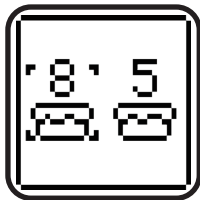

3. Lilo's Equation

 Lilo is teaching Stitch how to do math. Help Stitch solve simple addition and subtraction equations. Press the numbers then press **OK** to confirm.

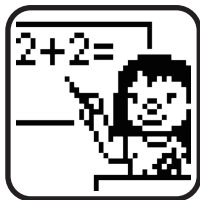

4. Making Sandwiches

Help Stitch find the fillings he wants to make sandwiches with. Press the **Left or Right Button** to choose then press **OK** to confirm.



 
5. Stitch's Dance

Help Stitch learn to dance the hula. Follow the numbers shown at the top of the screen and press the **Number Buttons** in order to dance.



6. Call Stitch and His Friends

Make role play phone calls and leave virtual messages for Stitch and his friends. Press the numbers to dial.

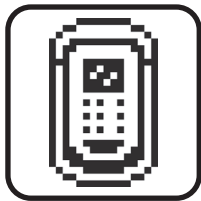

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IMPORTANT NOTE:

If the problem persists, please contact our **Consumer Services Department** at **1-800-521-2010** in the U.S. or **1-877-352-8697** in Canada, or by going to our website at **vtechkids.com** and filling out our **Contact Us** form located under the **Customer Support** link. Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Supplier's Declaration of Conformity 47 CFR § 2.1077 Compliance Information

Trade Name:	VTech®
Model:	5860
Product Name:	Disney Stitch Learning Phone
Responsible Party:	VTech Electronics North America, L.L.C.
Address:	1156 W. Shure Drive, Suite 200 Arlington Heights, IL 60004
Website:	vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.
CAN ICES(B)/NMB(B)

**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com
vtechkids.ca

Read our complete warranty policy online at
vtechkids.com/warranty
vtechkids.ca/warranty

