

INTRODUCTION

Unlock a world of fun and secrets with **My Mini Locker™** by VTech®! Keep your treasures safe with your very own 4-digit passcode, reveal hidden messages with the **Secret Message Light**, and customize your locker with stickers and glowing frame lights. Set the time and use it as an alarm clock. Connect your music player via **Bluetooth®** to listen to your own music or enjoy 40 built-in melodies and cool games.



Memo Pad



Invisible Ink Pen



4 Pegboard Hooks

NOTE

Il est conseillé de sauvegarder ce manuel d'utilisation car il comporte des informations importantes.



WARNING:

CHOKING HAZARD—Small parts.
Not for children under 3 yrs.



AVERTISSEMENT:

RISQUE DE SUFFOCATION—Petites pièces. Ne convient pas aux enfants de moins de 3 ans.

GETTING STARTED

IMPORTANT! Exiting from Try-Me mode

My Mini Locker is in Try-Me (demo) mode in packaging. To exit Try-Me mode:

1. Open the battery compartment
2. Locate the **Reset Button**
3. Using a pen tip or other small object, press and hold the **Reset Button** for about 2 seconds. You will enter the Time Set-Up page after exiting Try-Me mode.



INITIAL SET-UP

1. TIME SET-UP






When you first use the **My Mini Locker**, or change the batteries, you will need to set the time. Press the **Left** or **Right Button** to select 12- or 24-hour time format and press the **OK Button** to confirm, then press the **Number Buttons** to input the time, then press the **OK Button** to confirm.

2. PASSCODE SET-UP

Press the **Number Buttons** to create a 4-digit passcode, then press the **OK Button** to confirm. Remember your passcode! If you lose it, you can reset it using the **Reset Button** (see Product Features below).


Quick Operation Guide

When **My Mini Locker** is **Off**, press any button (except the Secret Message Light Button) to turn it **On** and display the time.

1. To open the locker, press the **Unlock Button**  and enter the passcode.
2. Press the **Home Button**  to enter the menu, then use the **Left/Right Buttons** to navigate to the correct section and press the **OK Button**  :
 - Games Menu
 - Music Menu
 - Alarm Clock and Timer Settings
 - Device Settings
3. To read secret messages written with the **Invisible Ink Pen**, press the **Secret Message Light Button**  to turn on the UV light and hold the message under the light.
4. Press the **Bluetooth Button**  to connect your music player to listen to your favorite music.
5. To change the clock face, press the **Clock Button** and use the **Left/Right Buttons** to select it.



6. The device will automatically power off after several minutes without input, or you can press the **Clock Button** twice to enter sleep mode immediately.

Bluetooth® Pairing

1. Press the **Bluetooth Button**  or select the Bluetooth Icon in Music Mode to enter Bluetooth mode. The **Bluetooth Connection Light** will flash blue on **My Mini Locker** while waiting for a connection.
2. Enter the Bluetooth interface of your device and search for Bluetooth devices.
3. On your device, select “**VTech 5944 Locker**”.
4. Enter the PIN number from **My Mini Locker**’s display screen on your device.
5. While in Bluetooth mode, the **Bluetooth Connection Light** will remain **On**.
6. To exit Bluetooth mode, press the **Bluetooth Button** again.
7. The Locker will automatically search and connect to the last Bluetooth device that it was connected to before. You do not need to repeat this process the next time you want to use the same device.

Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 4 new AA (AM-3/LR6) batteries following the diagram inside the battery box (for best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).

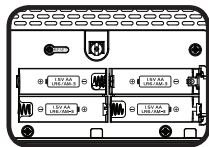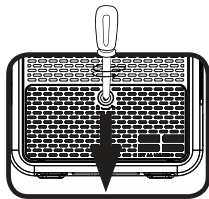

5. Replace the battery cover and tighten the screw to secure.



WARNING:

Adult assembly required for battery installation.

Keep batteries out of reach of children.



ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.

Tenir les piles ou accumulateurs hors de portée des enfants.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

IMPORTANT : INFORMATIONS CONCERNANT LES PILES

- Mettre en place les piles ou les accumulateurs en respectant les polarités + et –.
- Ne pas mélanger des piles ou des accumulateurs neufs avec des usagés.
- Ne pas mélanger différents types de piles : alcalines, zinc-carbone et rechargeables.
- Seules des piles du type recommandé doivent être utilisées.
- Ne pas mettre les bornes d'une pile ou d'un accumulateur en court-circuit (en reliant directement le + et le –).
- Retirer les piles ou les accumulateurs en cas de non-utilisation prolongée.
- Enlever les piles ou les accumulateurs usagés du jouet.
- Ne les jeter ni au feu ni dans la nature.

PILES RECHARGEABLES :

- Les accumulateurs ne doivent être chargés que sous la surveillance d'un adulte.
- Ne pas tenter de recharger des piles non rechargeables.

PRODUCT FEATURES

1. BUTTONS AND OPERATIONS

HOME BUTTON

- Press the **Home Button** to return to the Main Menu from any function or activity.

CLOCK BUTTON

- Press the **Clock Button** to display the time. Press the **Left** or **Right Buttons** to change the clock style.
- Press the **Clock Button** again to enter sleep mode.

OK BUTTON

- Press the **OK Button** to confirm selections and settings.

LEFT/RIGHT BUTTONS

- Press the **Left** or **Right Buttons** to scroll through the menu options on the Main Menu and select an activity or setting.

NUMBER BUTTONS (0-9)

- Press the **Number Buttons** to set or enter the time and passcode.
- Some games use the **Number Buttons**.
- While listening to music, press the **Number Buttons** to add your own silly sound effects!



STAR BUTTON

- Press the **Star Button** to directly enter volume settings. Press the **Left** or **Right Button** to adjust the volume, and press the **OK Button** to confirm.

UNLOCK BUTTON

- Press the **Unlock Button** then enter the passcode to unlock and open the locker.
- Close the locker door to relock it.

SECRET MESSAGE LIGHT BUTTON

- Press the **Secret Message Light Button** to turn on the UV light and reveal secret messages written with the invisible ink marker.

BLUETOOTH BUTTON

- Press the **Bluetooth Button** or select the Bluetooth icon in Music mode, then follow the instructions in the “Bluetooth Connection” section above to connect your device.
- After connecting, play your favorite music!

RESET BUTTON

- Press and hold the **Reset Button** inside the battery compartment to clear all settings and restore factory settings.
- You will return to the INITIAL SET-UP page to set the time and passcode.

2. CUSTOMIZE YOUR LOCKER

Use the included stickers to make your locker even more unique by decorating the appearance and interior.



3. LOCKER INTERIOR

Use the **Adjustable Spacer** to adjust your compartment space.



4. ACCESSORIES

Install the **Pegboard Hooks** on the pegboard and use them to hang up things like jewelry and keychains (not included). You can store the **Invisible Ink Pen** and **Memo Pad** in the locker.



5. AUTOMATIC POWER-OFF

To preserve battery life, **My Mini Locker** will automatically power-off after several minutes without input. If Bluetooth is connected, it will automatically power-off after about 15 minutes without input. **My Mini Locker** can be turned on again by pressing any button (except the Secret Message Light Button).

6. BATTERY STATUS

The unit will automatically turn **Off** when the battery power is very low. If you see the Low Battery icon appear on the screen, please replace the batteries.



ACTIVITIES

1. Enchanted Activities

1) Mystical Word

Choose 3 potions to pour into the magical bowl and mix them to reveal secret words. Press the **OK Button** when the potion you want is shown on the screen.



2) Number Challenge

Remember the sequence of numbers before they disappear, then press the **Number Buttons** to repeat the sequence. There are 3 difficulty levels. When you manage to repeat 5 sequences correctly you will level up automatically.



3) Miraculous Rating

Press the **Left** or **Right Button** to choose one topic from friendship, luckiness, charm, strength and caring. Then select 3 of the 15 magic cards to discover your powerful combo rating!



4) Color Charm

Solve addition, subtraction or multiplication questions to unlock sparkling gem colors that will shine in the frame light. Press the **Left/Right Button** to switch the answer and press the **OK Button** to answer the question. There are 3 difficulty levels. Correctly answer 5 questions to unlock the gem color and level up automatically. Once you have unlocked a level you can choose a level you would like to play next.



5) Fairy Yes or No

Ask the fairy a question and press the **OK Button**. She will give you her magical answers!



6) Hide & Seek

The fairy will randomly jump out of one of the nine holes. Press the corresponding **Number Button** as quickly as possible to catch the fairy before she disappears. There are 3 difficulty levels. Level up by finding the fairy as many times as possible and getting two or three hearts. Once you have unlocked a level you can choose a level you would like to play next.



2. Music Mode

1) Built-in 4 Music Albums

Enjoy 40 built-in melodies in 4 different music styles!

- Dance
- Jazz
- Rock
- Soothing Music



Press the **Left** and **Right Buttons** to select a music style and press the **OK Button** to play the melody. Press the **Left** or **Right Button** to change the melody. Press the **Number Buttons** to add fun sounds to the melodies. Press the **Pound Button (#)** to loop all the melodies in the album 3 times.

2) Bluetooth

Connect your music player (not included) with Bluetooth to listen to your own music. See the “Bluetooth Connection” section above.



3. Time Tools

1) Alarm

Enter this setting to set an alarm. Press the **Left** or **Right Button** to:

- Turn the alarm **On/Off**.
- Set the alarm time.
- Select an alarm tone.

Press the **OK Button** to confirm and save the current setting. When the alarm sounds, press any button to stop it. If no button is pressed, the alarm will stop after approximately 60 seconds.



2) Timer

Enter this setting to set a countdown timer. Press the **OK Button** to enter the setting, then press the **Left** or **Right Button** to set the timer. Press the **OK Button** to confirm the duration and start the countdown timer.

While the timer is running, you can press the **OK Button** to pause/resume it. When the bell rings, press any button to stop it. If no button is pressed, the alarm will stop after approximately 60 seconds.



01:00

4. Settings

1) Time Settings

Select this option to set the time. Press the **Left** or **Right Button** to select the time format and press the **OK Button** to confirm. Then press the **Left** or **Right Button** and **Number Buttons** to set the time. Then press the **OK Button** to confirm and save.



08:00^{AM}

◀ 12H ▶

2) Volume

Press the **Left** or **Right Buttons** to change the volume and press the **OK Button** to confirm.



3) Frame Light Color

Press the **Left** or **Right Button** to select the frame light color and press the **OK Button** to confirm.



◀ 18 ▶

4) Frame Light Pattern

Press the **Left** or **Right Buttons** to select the frame light pattern and press **OK Button** to confirm.



◀ 15 ▶

5) Clock Face Design

Choose your favorite sticker to create the sixth clock face.



6) Backlight Control

Press the **Left** or **Right Button** to turn the backlight **On** or **Off**.



7) Passcode Setup

To change the passcode, enter the original passcode and press the **OK Button**, then enter the new 4-digit passcode twice to complete passcode setup.



MELODIES

Jazz Music

Joplin - The Easy Winners

Joplin - Elite Syncopations

Schubert - Allegro Moderato

Lincke - Glühwürmchen-Idyll

Johnson - Dill Pickles Rag

Fisher - That Todd'lin Town

Winner - Oh Where, Oh Where Has My Little Dog Gone

Daniel Alomía Robles - El Condor Pasa

Beethoven - Rondo a Capriccio

Saint-Saens - The Swan from Carnival of the Animals

Rock Music

For He's a Jolly Good Fellow
The Man on the Flying Trapeze
Mozart - Piano Sonata in C, K545 1st Movement
Sanz - Espagnoletas
Schumann - The Wild Horseman
Tarrega - Malaguena
Brahms - Hungarian Dance No. 5
Mozart - Magic Flute Overture
Beethoven - Sonata
Auld Lang Syne

Soothing Music

Chopin - Nocturne Op. 9 No. 2
Pachelbel - Canon
Tchaikovsky - Sleeping Beauty Overture
Strauss - Blue Danube Waltz
Teddy Bears' Picnic
Litszt - Rêve d'amour
Chopin - Prélude No. 7 Op. 28
Bach - Air on G
Foster - Hard Times Come Again No More
Bach - Sheep May Safely Graze

Bluetooth® Statement

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth® SIG, Inc. and any use of such marks by VTech® is under license. Other trademarks and trade names are those of their respective owners.

RF Warning Statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

IMPORTANT NOTE

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S., **1-877-352-8697** in Canada, or visit our website **vtechkids.com** and fill out our **Contact Us** form located under the **Customer Support** link. Creating and developing VTech products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- 1) L'appareil ne doit pas produire de brouillage;
- 2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Supplier's Declaration of Conformity
47 CFR § 2.1077 Compliance Information

Trade Name: VTech®
Model: 5944
Product Name: My Mini Locker
Responsible Party: VTech Electronics North America, L.L.C.
Address: 1156 W. Shure Drive, Suite 200
Arlington Heights, IL 60004
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com
vtechkids.ca

Read our complete warranty policy online at
vtechkids.com/warranty
vtechkids.ca/warranty

