

vtech[®]
Baby

User's Manual

Lil' Critters Musical Glow Gym™



© 2016 VTech
All rights reserved
Printed in China
91-003252-001 

Dear Parent,

Ever notice the look on your baby's face when they learn something new through their own discovery? These self-accomplished moments are a parent's greatest reward. To help fulfill them, VTech® created the **Infant Learning**® series of toys.

These unique interactive learning toys directly respond to what children do naturally – play! Using innovative technology, these toys react to baby's interactions, making each play experience fun and unique as they learn age-appropriate concepts like first words, numbers, shapes, colors and music. More importantly, VTech®'s **Infant Learning**® toys develop baby's mental and physical abilities by inspiring, engaging and teaching.

At VTech®, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting VTech® with the important job of helping your child learn and grow!

Sincerely,

 
Your friends at VTech®

To learn more about VTech® toys, visit vtechkids.com

INTRODUCTION

Thank you for purchasing the **VTech® Lil' Critters Musical Glow Gym™** learning toy!

The **VTech® Lil' Critters Musical Glow Gym™** is the perfect grow-with-me toy that transitions from a play gym to a tummy time playmat to an activity centre. The modes of play also grow and develop along with baby, starting out with basic music and progressing to teaching about colors, shapes and animals to asking simple questions that toddlers can answer with the chunky piano keys. With so much to do your child will surely get a work-out in this learning gym!

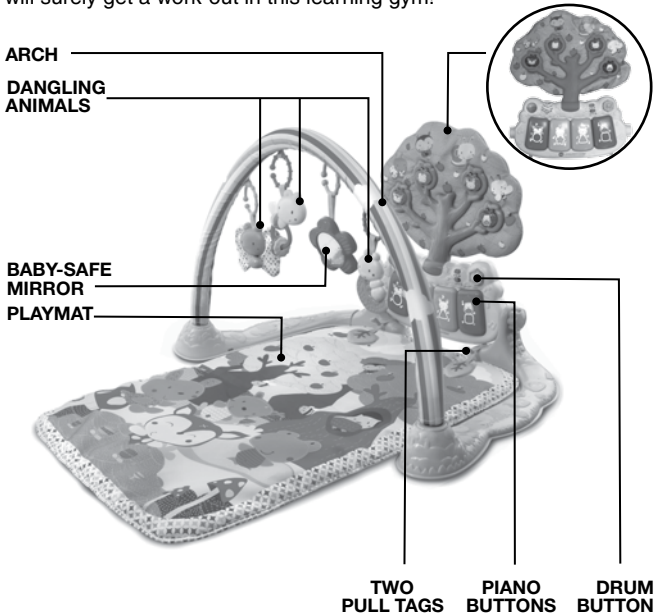

INCLUDED IN THIS PACKAGE

- One user's manual
- 18 screws
- One playmat



Two activity panel supports &
two activity panel support bases



Two gym support legs



One dangling
baby-safe flower mirror



One dangling bee rattle



One dangling
caterpillar teether



One arch



 
One **Lil' Critters Musical Glow Gym™** activity panel



One dangling butterfly



Four
activity Links

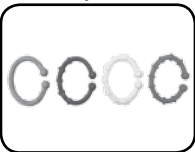


WARNING: All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

ATTENTION: Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.

NOTE: Please keep this user's manual as it contains important information.

 Unlock the packaging locks:

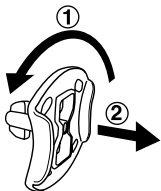


① Rotate the packaging locks 90 degrees counter-clockwise.

② Pull out the packaging locks.

GETTING STARTED

BATTERY INSTALLATION

 1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the activity panel. Use a screwdriver to loosen the screw.
3. Install 2 new 'AA' (AM-3/LR6) batteries following the diagram inside the battery box. (The use of a new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure.

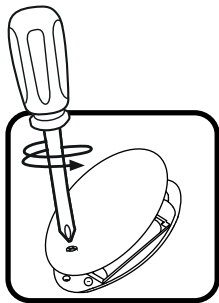

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

ASSEMBLY INSTRUCTIONS


With the **VTech® Lil' Critters Musical Glow Gym™**, safety comes first. To ensure your child's safety, adult assembly is required.

WARNING! This unit contains 18 screws (small part). For your child's safety, do not let your child play with the toy until it is fully assembled.


1. Attach the two activity panel support posts to the top of the two activity panel support bases. Use four screws to attach each post to the base, tighten the screws until secure.



 
2. Insert the two gym support legs to the two activity panel support bases. Use four screws to attach each of the legs to the activity panel support bases, tightening the screws until secure.

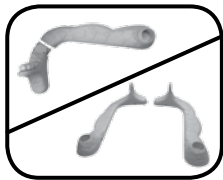

 
3. Insert the activity panel between the two activity panel support posts. Use the two big plastic screws to attach the activity panel to the activity panel support posts. The activity panel can be attached in three different positions to suit baby's needs.

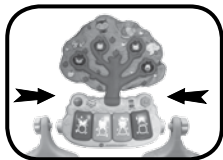

 
4. Insert the gym arch to the two support legs until you hear them click into place. Make sure the arch is securely attached to the base. Once the arch is attached to the base, it cannot be removed.

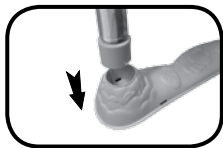

 
5. To adjust the angle of the tree. Slide the two purple tabs on the back of the activity panel and adjust the tree to suit baby's needs.

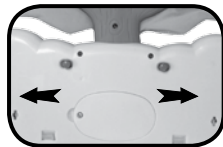

6. Attach the dangling animal characters and the mirror to the arch, threading the activity links through the loops on the arch.

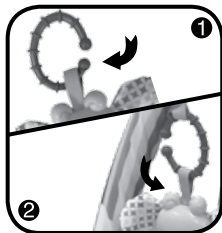 

 
7. To secure the playmat to the gym support legs, thread the 6 fabric tags on the playmat through the slots on the gym support legs and the activity panel. Make sure the playmat is securely attached to the support legs.

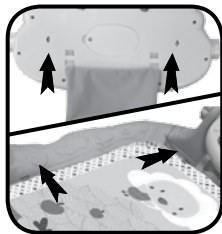

PRODUCT FEATURES


1. ON/OFF/MODE SELECTOR SWITCH

 To turn the unit **ON**, slide the **ON/OFF/MODE SELECTOR SWITCH** to the **MUSIC MODE** (🎵), **ANIMAL MODE** (🐻) or the **COLORS & SHAPES MODE** (🎨). To turn the unit **OFF**, slide the **ON/OFF/MODE SELECTOR SWITCH** to the **OFF** (●) position.

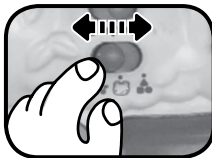

2. VOLUME CONTROL SWITCH

 To adjust the volume, slide the **VOLUME CONTROL SWITCH** to the **LOW VOLUME** (🔊) or **HIGH VOLUME** (🔊)) position.

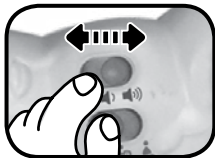


3. AUTOMATIC SHUT-OFF

To preserve battery life, the VTech® Lil' Critters Musical Glow Gym™ will automatically power-down after approximately 30 seconds without input. The unit can be turned on again by pressing any button or pulling on the pull tabs.


Note: If the unit repeatedly powers down, we suggest changing the batteries.

ACTIVITIES

 1. Slide the **on/off/mode selector switch** to turn the unit on. You will hear a song and a welcoming phrase in the Music Mode and the Animal Mode. In the Colors & Shapes Mode you will hear a sound, a phrase and a short tune. The lights will flash with the sounds.
2. Press the **piano buttons** to hear piano notes in the Music Mode, learn about animals, colors and shapes in the Animal Mode and hear fun sing-along songs, phrases and short tunes in the Colors & Shapes Mode. The lights will flash with the sounds.
3. Press the **drum button** to hear drum sounds in the Music Mode and the Animal Mode. In the Colors & Shapes Mode you will be asked to answer simple questions. The lights will flash with the sounds.

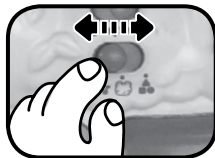

 4. Pull the **leaf tags** to hear variety of melodies in the Music Mode, short tunes and sounds in the Animal Mode and short tunes in the Colors & Shapes Mode. The lights will flash with the sounds.

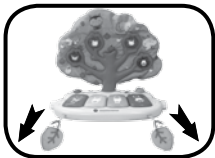

MELODY LIST:

1. Clementine
2. Animal Fair
3. Alouette
4. Aiken Drum
5. Alphabet Song
6. Shoo Fly
7. Bicycle Built for Two
8. Bingo
9. Did You Ever See a Lassie?
10. Farmer in the Dell
11. Froggie Went a Courtin'
12. Hickory Dickory Dock
13. Humpty Dumpty
14. Little Miss Muffet
15. Pop! Goes the Weasel
16. Where Has My Little Dog Gone?
17. Old MacDonald
18. This Old Man
19. Three Blind Mice
20. Yankee Doodle

SUNG SONG LYRICS

SONG 1

Crawl under your tree,
What do you see?
Some bugs and the bee,
And lights all twinkle-ee

SONG 2

We went to the animal fair,
The owl and fox were there,
The frog sat in the clear blue pond.
And the bunny was bouncing around.

SONG 3

Splish, splash! Ribbit-ribbit!
The frog likes splashing in the pond.

SONG 4

The happy fox likes to play at night,
When there is little light.

SONG 5

Hip and hop, up and down,
The bunny likes to hop around.


SONG 6

The wise owl is perched up high,
Looking at the stars in the sky.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.

 4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
5. The tree, arch and the butterfly are surface washable only. The playmat is machine washable. Follow the care instructions below.



TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our web site at www.vtechkids.com and filling out our Contact Us form located under the Customer Support link. A service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **VTech**[®] products is accompanied by a responsibility that we at **VTech**[®] take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our web site at www.vtechkids.com and filling out our Contact Us form located under the Customer Support link with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

CAN ICES-3 (B)/NMB-3(B)

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



CAUTION:
Adult assembly required.



ATTENTION !
Ce jouet doit être assemblé
par un adulte.



PRODUCT WARRANTY

This Warranty is applicable only to the original purchaser, is non-transferable and applies only to "VTech" products or parts. This product is covered by a 3-month Warranty from the original purchase date, under normal use and service, against defective workmanship and materials. This Warranty does not apply to (a) consumable parts, such as batteries; (b) cosmetic damage, including but not limited to scratches and dents; (c) damage caused by use with non-VTech products; (d) damage caused by accident, misuse, unreasonable use, immersion in water, neglect, abuse, battery leakage, or improper installation, improper service, or other external causes; (e) damage caused by operating the product outside the permitted or intended uses described by VTech in the owner's manual; (f) a product or part that has been modified (g) defects caused by normal wear and tear or otherwise due to the normal aging of the product; or (h) if any VTech serial number has been removed or defaced.

Prior to returning a product for any reason, please notify the VTech Consumer Services Department, by sending an email to vtechkids@vtechkids.com or calling 1-800-521-2010. If the service representative is unable to resolve the issue, you will be provided instructions on how to return the product and have it replaced under Warranty. Return of the product under Warranty must adhere to the following rules:

If VTech believes that there may be a defect in the materials or workmanship of the product and can confirm the purchase date and location of the product, we will at our discretion replace the product with a new unit or product of comparable value. A replacement product or parts assumes the remaining Warranty of the original product or 30 days from the date of replacement, whichever provides longer coverage.

THIS WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL, WRITTEN, STATUTORY, EXPRESS OR IMPLIED. IF VTECH CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY AND TO THE REPLACEMENT SERVICE AS DETERMINED BY VTECH IN ITS SOLE DISCRETION.

To the extent permitted by law, VTech will not be responsible for direct, special, incidental or consequential damages resulting from any breach of Warranty.

This Warranty is not intended to persons or entities outside the United States of America. Any disputes resulting from this Warranty shall be subject to the final and conclusive determination of VTech.