

vtech[®]


Instruction Manual

SWITCH & GO[®] **RACE & ROAR RC T-REX[™]**



INTRODUCTION

Introducing the **Switch & Go® Race & Roar RC T-Rex™** by **VTech®**! Engage your imagination with this powerful T-Rex that switches into a speedy battle buggy! Use the remote control for movement, sound effects, phrases, and launching projectiles for thrilling action and adventures! Let's Switch & Go!

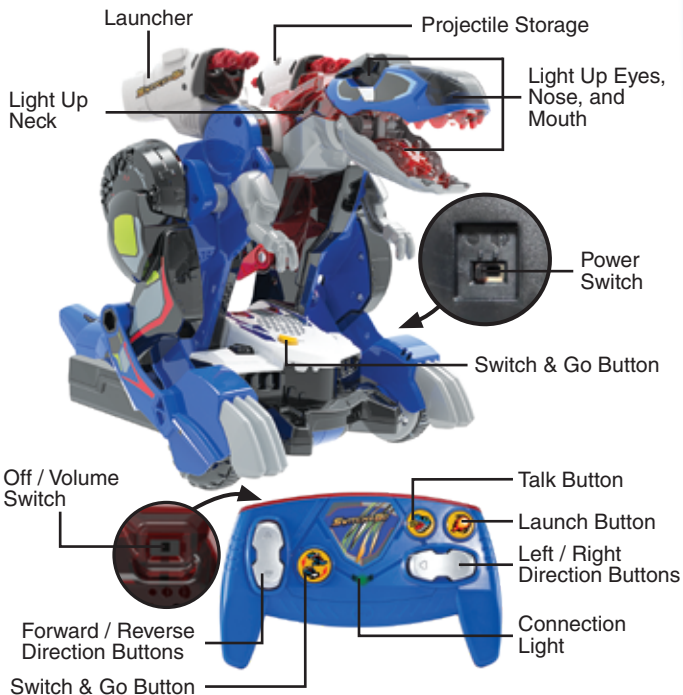

INCLUDED IN THE PACKAGE

- One VTech® Switch & Go® Race & Roar RC T-Rex™
- One Remote Control
- One Quick Start Guide
- Four Meteoroid Projectiles

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE:

Please save this Instruction Manual as it contains important information.


ATTENTION :

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.


NOTE :

Il est conseillé de sauvegarder ce manuel d'utilisation car il comporte des informations importantes.

Unlock the Packaging Locks:

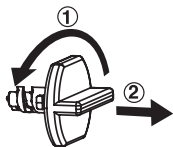


- ① Turn the packaging locks anticlockwise several times.
- ② Pull out and discard the packaging locks.

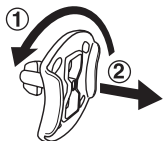

- ① Rotate the packaging locks 90 degrees anticlockwise.
- ② Pull out the packaging locks and discard.

IMPORTANT NOTE:

1. For optimal performance, please play on a flat surface.
2. When exposed to electrostatic discharge and radio interference, the **Race & Roar RC T-Rex** may malfunction. Please turn both the T-rex and the remote control off and on again to reset them.
3. For your child's safety, do not put the **Race & Roar RC T-Rex** in either configuration on your clothing, body or hair.
4. For your child's safety, do not touch or pick up the **Race & Roar RC T-Rex** when it is switching modes.

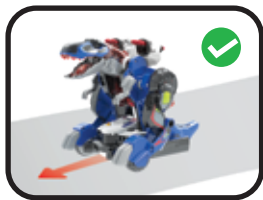

GETTING STARTED

Exit Try-Me Mode

The unit is in try-me mode in the packaging. To exit try-me mode, insert any projectile into the launcher or power the T-rex **Off** and **On** again. Before playing for the first time, please install 6 new AA batteries into the T-rex and 2 new AAA batteries into the Remote Control.

INSTRUCTIONS

WARNING: Do not aim at eyes or face.

WARNING: Do not discharge any object other than the projectiles provided with this toy.



WARNING:

Adult assembly required for battery installation.

Keep batteries out of reach of children.



ATTENTION :


Les piles ou accumulateurs doivent être installés par un adulte.

Tenir les piles ou accumulateurs hors de portée des enfants.

BATTERY REMOVAL AND INSTALLATION


Race & Roar RC T-Rex

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 6 new 1.5V AA (LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

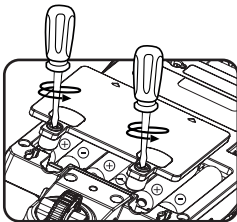

Remote Control

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 2 new 1.5V AAA (LR03) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

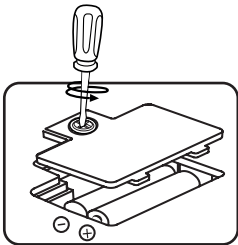

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Note:

If the unit repeatedly powers down while playing or the lights fade out, we suggest changing the batteries.

IMPORTANT : INFORMATIONS CONCERNANT LES PILES

- Mettre en place les piles ou les accumulateurs en respectant les polarités + et –.
- Ne pas mélanger des piles ou des accumulateurs neufs avec des usagés.
- Ne pas mélanger différents types de piles : alcalines, zinc-carbone et rechargeables.
- Seules des piles du type recommandé doivent être utilisées.
- Ne pas mettre les bornes d'une pile ou d'un accumulateur en court-circuit (en reliant directement le + et le –).
- Retirer les piles ou les accumulateurs en cas de non-utilisation prolongée.
- Enlever les piles ou les accumulateurs usagés du jouet.
- Ne les jeter ni au feu ni dans la nature.

PILES RECHARGEABLES

- Les accumulateurs ne doivent être chargés que sous la surveillance d'un adulte.
- Ne pas tenter de recharger des piles non rechargeables.

Product Features

Race & Roar RC T-Rex:

1. Power Switch

Locate this switch on the bottom of the T-rex. To power the T-rex on, slide the **Power Switch** to the **ON** position ☐. To power the T-rex off, slide the **Power Switch** to the **OFF** position ●.



2. Switch & Go Button

Press the **Switch & Go Button** to switch between a **T-Rex** and a speedy battle buggy automatically.

NOTE: Do not switch between the T-Rex and a speedy battle buggy manually, otherwise the unit may get damaged.



3. Auto Sleep Mode

To preserve battery life, the Race & Roar RC T-Rex will automatically turn off after several minutes without input. The Remote Control cannot control the T-Rex during this period.

4. Quick Wake Up

The T-Rex can be powered on again by pressing the **Switch & Go Button** on the T-Rex, or by sliding the **Power Switch** from the OFF position to the ON position.

5. Low Battery

The lights on the T-rex's neck will flash red three times and then automatically turn off when battery power is low. Once this occurs, please install a brand new set of batteries and try switching the T-rex off and on again.

6. Launcher (Holds 2 projectiles)

A projectile will be launched out from the **Launcher** for each press of the Launch Button on the Remote Control. Manually insert the projectiles into the **Launcher** if both projectiles have been launched.

NOTE: For safety, do not aim projectiles towards eyes or other body parts.



7. Storage (Holds 2 projectiles)

For more launching fun, take out projectiles from the **Storage** and insert them into the **Launcher**.



Remote Control:

1. Off/Volume Switch


Locate this switch on the back of the **Remote Control**. To turn the **Remote Control** on and adjust the volume, slide the **Off/Volume Switch** to the **Low Volume** position or the **High Volume** position. To turn the **Remote Control** off, slide the **Off/Volume Switch** to the **OFF** position.



2. Connection Light

When the power switch on the remote control is turned on, pressing any button on the remote control will make the connection light turn green. If the connection fails between the T-rex and the controller, switch both the Remote Control and the T-rex Off for a few seconds, and then switch them both back on again. If the connection fails again, check whether any of the units have low batteries.

NOTE: If pressing any button on the remote control makes the green connection light flash twice and then turn off, it indicates low batteries. Turn the unit off, replace the new batteries, and switch it on again.

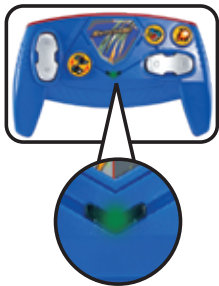

3. Direction Buttons

Hold the **Direction Buttons** to move the **T-rex** forwards, backwards, left or right.



4. Talk Button

Press the **Talk Button** to hear cool phrases, fun facts and lively sound effects in **Dino Mode**. Press the **Talk Button** to hear fun phrases and exciting sound effects in **Vehicle Mode**.



5. Launch Button

Press the **Launch Button** to launch one projectile at a time.

NOTE: When pressing the **Launch Button**, do not aim projectiles towards eyes or other body parts.



6. Switch & Go Button

Press the **Switch & Go Button** to switch between a **T-Rex** and a speedy battle buggy automatically.

NOTE: Do not switch between the T-Rex and a speedy battle buggy manually, otherwise the unit may get damaged.



CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.
6. When the remote control cannot control the T-Rex successfully, the remote control may need to establish connection with the T-Rex again. Please try the following steps:

Pair up T-Rex & Remote Control

- Make sure both the T-Rex and the Remote Control brand new batteries installed.
- Make sure the T-Rex is in Dino Mode.
- Make sure both the T-Rex and the Remote Control are powered OFF ●.

Step 1: Dino mode: Get ready for pairing

1. Press and hold the Auto-Switch button on the T-Rex, then slide the Power switch from OFF to ON at the same time.

2. The T-Rex will beep with the sound 'Di Di' and the LED eyes will light up green. Now the T-Rex is ready for pairing.

Step 2: Remote Control: Get ready for pairing

1. Slide the Off/Volume Switch on the remote control from OFF to any of the Volume positions  & .
2. Press and hold the Launch Button for 3 seconds, the remote control will connect with the T-Rex.
3. Operate point 1 & point 2 of Step 2 within 10 seconds.

Step 3: Complete Pairing

1. If pairing is successful, the T-Rex will beep with the sound 'Du Du Du', the LED eyes will flash green three times, and then it will enter Auto-sleep mode.
2. Press the Auto-Switch Button on the T-Rex to wake it up, or slide the Power switch from OFF to ON.
3. Both the Remote Control and the T-Rex should now work normally.

IMPORTANT NOTE

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S., **1-877-352-8697** in Canada, or visit our website **vtechkids.com** and fill out our **Contact Us** form located under the **Customer Support** link. Creating and developing VTech products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF warning statement:

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

Supplier's Declaration of Conformity
47 CFR § 2.1077 Compliance Information

Trade Name: VTech®
Model: 5908
Product Name: Race & Roar RC T-Rex™
Responsible Party: VTech Electronics North America, L.L.C.
Address: 1156 W. Shure Drive, Suite 200
Arlington Heights, IL 60004
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.
CAN ICES(B)/NMB(B)

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- 1) L'appareil ne doit pas produire de brouillage;
- 2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com
vtechkids.ca

Read our complete warranty policy online at
vtechkids.com/warranty
vtechkids.ca/warranty

