 


**vtech**<sup>®</sup>


# Instruction Manual
 
## **SWITCH & GO**<sup>®</sup> SCORPION DUNE BUGGY



# INTRODUCTION

Switch into fun with **Switch & Go® Scorpion Dune Buggy!**  
Transform this monstrous scorpion into a tough desert roadster and back again in just a few simple steps! It's time to sting. Here we go!

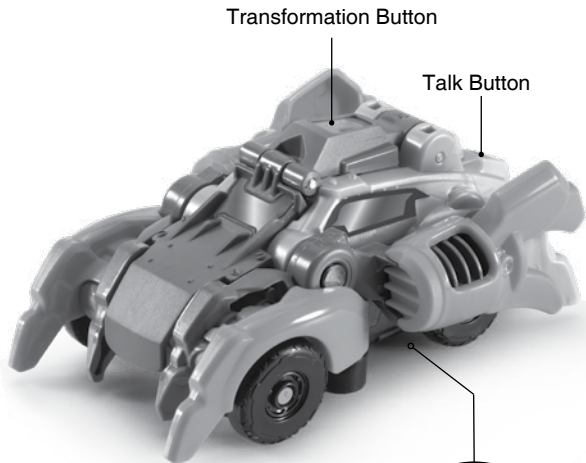

Transformation Button

Talk Button



Off/Low/High Volume Selector

# INCLUDED IN THE PACKAGE

- Switch & Go® Scorpion Dune Buggy
- Quick Start Guide

## WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

## NOTE

Please save this manual as it contains important information.

## ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes et vis d'emballage. Ils ne font pas partie du jouet.

## NOTE

Il est conseillé de sauvegarder ce manuel car il comporte des informations importantes.

## WARNING

 
Do not aim at eyes and face.

## ATTENTION

Ne viser ni les yeux ni le visage.

## Removing the Packaging Locks


1. Rotate the packaging lock counterclockwise several times.
2. Pull out the packaging lock and discard.

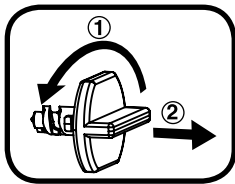

# GETTING STARTED

## Battery Removal and Installation

 1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the back of the unit, use a screwdriver to loosen the screw, and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 1 new AAA (LR03/AM-4) battery following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

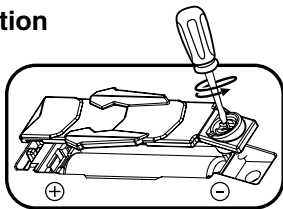

**Note:** If there is no response when the scorpion is switched on, please install brand new batteries and try switching the scorpion on again.



### WARNING:

Adult assembly required for battery installation.  
Keep batteries out of reach of children.



### ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.  
Tenir les piles ou accumulateurs hors de portée des enfants.

## IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

## RECHARGEABLE BATTERIES

- Remove rechargeable batteries (if removable) from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

## NOTE

This product is in Try-Me mode in the packaging. After opening the package, turn the **Switch & Go® Scorpion Dune Buggy** off and on again to proceed with normal play. If the unit powers down or if the light fades out during play, please install a new set of batteries.

## **IMPORTANT : INFORMATIONS CONCERNANT LES PILES**

Les piles fournies avec le produit permettent de tester le jouet en magasin mais ne sont pas des piles longue durée.

 


- Mettre en place les piles ou les accumulateurs en respectant les polarités + et -.
- Ne pas mélanger des piles ou des accumulateurs neufs avec des usagés.
- Ne pas mélanger différents types de piles : alcalines, zinc-carbone et rechargeables.
- Seules des piles du type recommandé doivent être utilisées.
- Ne pas mettre les bornes d'une pile ou d'un accumulateur en court-circuit (en reliant directement le + et le -).
- Retirer les piles ou les accumulateurs en cas de non-utilisation prolongée.
- Enlever les piles ou les accumulateurs usagés du jouet.
- Ne les jeter ni au feu ni dans la nature.

## **PILES RECHARGEABLES**

- Enlever, lorsque c'est possible, les accumulateurs du jouet pour les recharger.
- Les accumulateurs ne doivent être chargés que sous la surveillance d'un adulte.
- Ne pas tenter de recharger des piles non rechargeables.

# PRODUCT FEATURES

## 1. Off/Low/High Volume Selector

To turn the unit **On** or to adjust the volume, slide the switch to the Low  or High  Volume position. To turn the unit **Off**, slide the switch to the **Off**  position.



## 2. Talk Button

Press the **Talk Button** to hear fun phrases and cool scorpion sounds with light effects in Scorpion mode or to hear fun phrases and great vehicle sounds in Vehicle mode.



## 3. Transformation Button

 
In Vehicle mode, push the **Transformation Button** to trigger automatic switching from Vehicle mode to Scorpion mode.




## 4. Automatic Shut-Off

To preserve battery life, the **Scorpion Dune Buggy** will automatically shut off after approximately 20 seconds without input. The unit can be turned on again by pressing the **Talk Button** or by switching between Scorpion and Vehicle modes.


# TRANSFORMATION

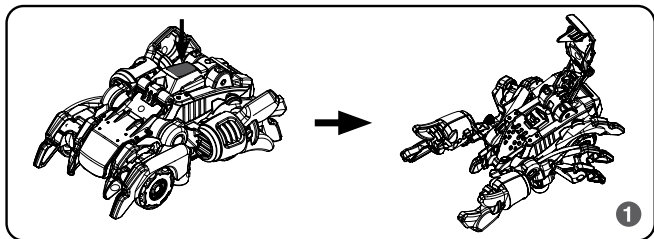

 1. Push the Transformation Button to trigger automatic switching from Vehicle to Scorpion mode.

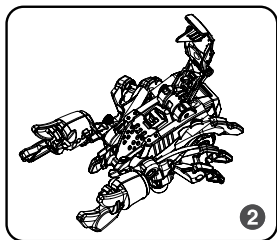


 2. To switch from scorpion back to vehicle, begin in Scorpion mode.

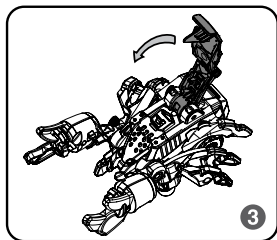


 3. Flip the tail down towards the scorpion's body.




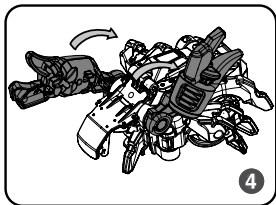

 4. Flip the front claw up and toward the scorpion's body.

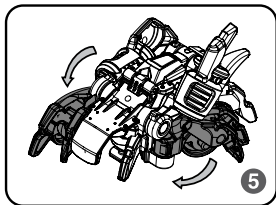

 5. Flip the rear legs out and forward.

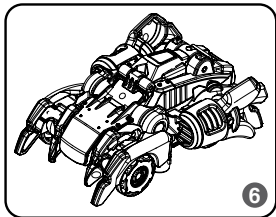

6. The dune buggy is now in Vehicle mode.

# CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

# TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

## **IMPORTANT NOTE:**

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S. **1-877-352-8697** in Canada, or visit our website **vtechkids.com** and fill out our Contact Us form located under the Customer Support link. Creating and developing VTech products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

## **NOTE**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## **CAUTION**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## **Supplier's Declaration of Conformity**

### **47 CFR § 2.1077 Compliance Information**

Trade Name: VTech®  
Model: 5511  
Product Name: Switch & Go® Scorpion Dune Buggy  
Responsible Party: VTech Electronics North America, L.L.C.  
Address: 1156 W. Shure Drive, Suite 200  
Arlington Heights, IL 60004  
Website: vtechkids.com

**THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.**

**CAN ICES-003(B)/NMB-003(B)**

**Visit our website for more  
information about our products,  
downloads, resources and more.**

***vtechkids.com***

***vtechkids.ca***

Read our complete warranty policy online at  
***vtechkids.com/warranty***  
***vtechkids.ca/warranty***

