

**vtech**<sup>®</sup>  
Baby

User's Manual

# Adora-Birdie Activity Rattle™



© 2016 VTech  
Printed in China  
91-003145-000 US

*Dear Parent,*

*Ever notice the look on your baby's face when they learn something new through their own discovery? These self-accomplished moments are a parent's greatest reward. To help fulfill them, VTech® created the Infant Learning® series of toys.*

*These unique interactive learning toys directly respond to what children do naturally – play! Using innovative technology, these toys react to baby's interactions, making each play experience fun and unique as they learn age-appropriate concepts like first words, numbers, shapes, colors and music. More importantly, VTech®'s Infant Learning® toys develop baby's mental and physical abilities by inspiring, engaging and teaching.*

*At VTech®, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting VTech® with the important job of helping your child learn and grow!*

*Sincerely,*


*Your friends at VTech®*

*To learn more about VTech® toys, visit [vtechkids.com](http://vtechkids.com)*

# INTRODUCTION

Thank you for purchasing the **VTech® Adora-Birdie Activity Rattle™** learning toy.

Shake, sing and learn with the **VTech® Adora-Birdie Activity Rattle™**. Shake the bird for fun bird sounds or press the two light-up buttons to learn about the bird and hear fun music, songs and sounds. Removable electronics allow the plush bird to be machine washable.

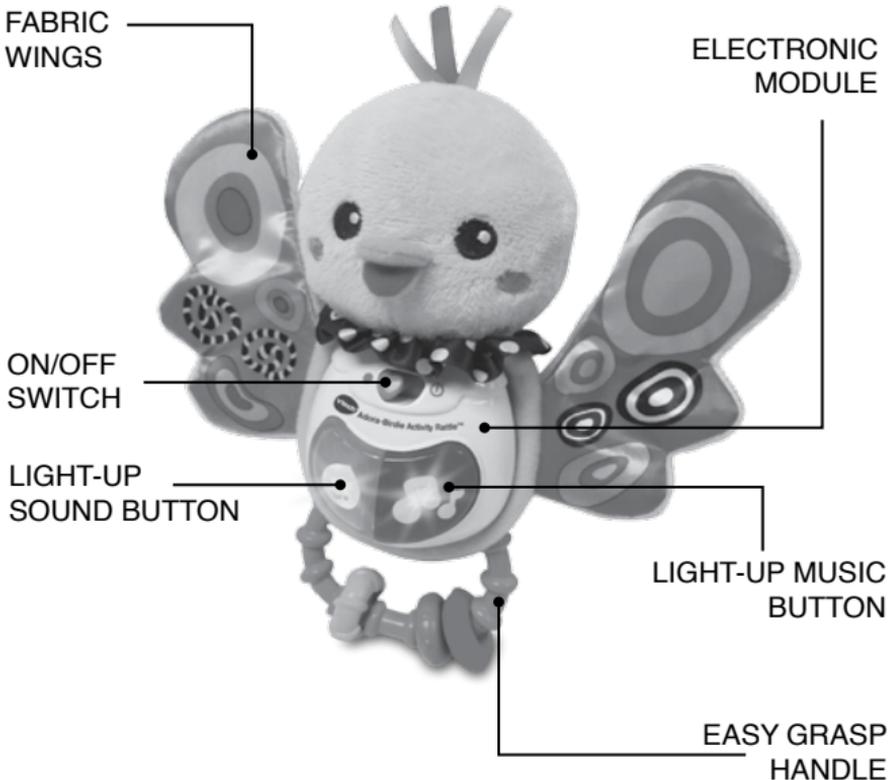

# INCLUDED IN THIS PACKAGE

- One VTech® Adora-Birdie Activity Rattle™ learning toy
- One user's manual


**WARNING:** All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

**ATTENTION :** Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.

**NOTE:** Please keep this instruction manual as it contains important information.

## BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the electronic module. Use a screwdriver to loosen the screw.
3. Install 1 new 'AAA' (LR03/AM-4) battery following the diagram inside the battery box. (The use of a new alkaline battery is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure.

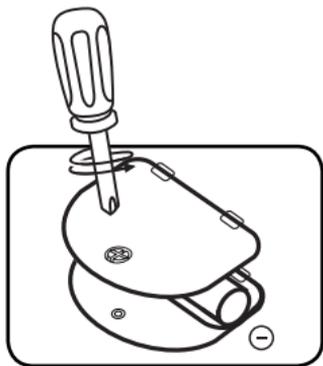

## BATTERY NOTICE


- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.

- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

## PRODUCT FEATURES


### 1. ON/OFF SWITCH

To turn the unit **ON**, slide the **ON/OFF SWITCH** to the **ON** (  ) position. To turn the unit **OFF**, slide the **ON/OFF SWITCH** to the **OFF** (  ) position.

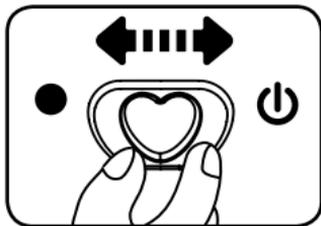

### 2. ELECTRONIC MODULE

The electronic module is removable so the plush portion of the **VTech® Adora-Birdie Activity Rattle™** can be washed in a washing machine. **REMOVE** the electronic module before washing the plush rattle. Place the plush rattle in a pillow case and tie the end closed. Machine wash in warm water, gentle cycle, mild detergent, no bleach, air dry.

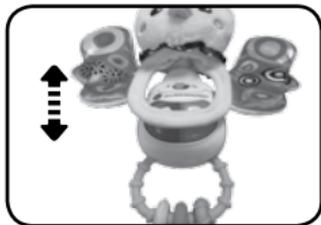


### 3. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® Adora-Birdie Activity Rattle™** will automatically power-down after approximately 30 seconds without input. The unit can be turned on again by pressing any button. Activating the motion sensor will not turn the unit back on.

## ACTIVITIES

1. Slide the **on/off switch** to turn the unit on. You will hear a sound, a fun phrase and a song. The lights will flash with the sound.

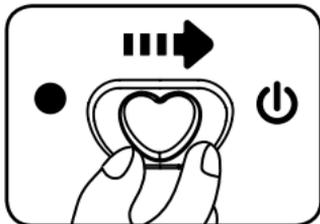

2. Press the **light-up sound button** to hear a variety of phrases and sounds. The lights will flash with the sound.



3. Press the **light-up music button** to hear songs and melodies. The lights will flash with the sound.



4. Activate the **motion sensor** to hear a variety of sounds and melodies. When a melody is playing, shake the rattle to hear the sounds play over the melody. The lights will flash with the sound.



## MELODY LIST

1. Alouette
2. Go Tell Aunt Rody
3. Sing a Song of Sixpence
4. Jack & Jill
5. Little Robin Red Breast
6. Little Boy Blue
7. Mary, Mary Quite Contrary
8. She'll Be Comin' Round the Mountain
9. Teddy Bears' Picnic
10. Polly Put the Kettle On

## SUNG SONG LYRICS

### SONG 1

I'm a birdie, a cute fluffy birdie.  
Chirping, cheeping, tweeting songs for you.

### SONG 2

I like to fly and soar through the sky.  
I like to see the world from way up high.

### SONG 3

I feel so happy when I am flying,  
I fly here, there and everywhere!

# CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. The plush birdie is machine washable. Please remove the electronic module from the birdie and follow the care instructions on the tag.
3. Keep the unit out of direct sunlight and away from any direct heat source.
4. Remove the batteries when the unit will not be in use for an extended period of time.
5. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

# TROUBLESHOOTING

If for some reason the program/activity stops working, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

## IMPORTANT NOTE:

Creating and developing **Infant Learning** products is accompanied by a responsibility that we at **VTech**® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

## Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged

to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

*CAN ICES-3 (B)/NMB-3(B)*

**Caution:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.