


INTRODUCTION

Thank you for buying the **VTech® Touch Tablet™**. The **VTech® Touch Tablet™** is the coolest way to take your learning on the go - just detach the hi-tech touch screen and go! Cruise through 121 arcade-style activities that sharpen your skills in English, Spanish, math, science, social studies, and more. There's even a cool recording feature you can use to practice speaking Spanish. The **Touch Tablet™** is loaded with other cool features, such as tools to store personal info, bonus activity cartridges, a CD-ROM with expansion activities, and even a USB cable for PC connection. Plus, the Progress Report lets you know how much you've learned. With the **Touch Tablet™**, you can take your learning fun to a whole new level!

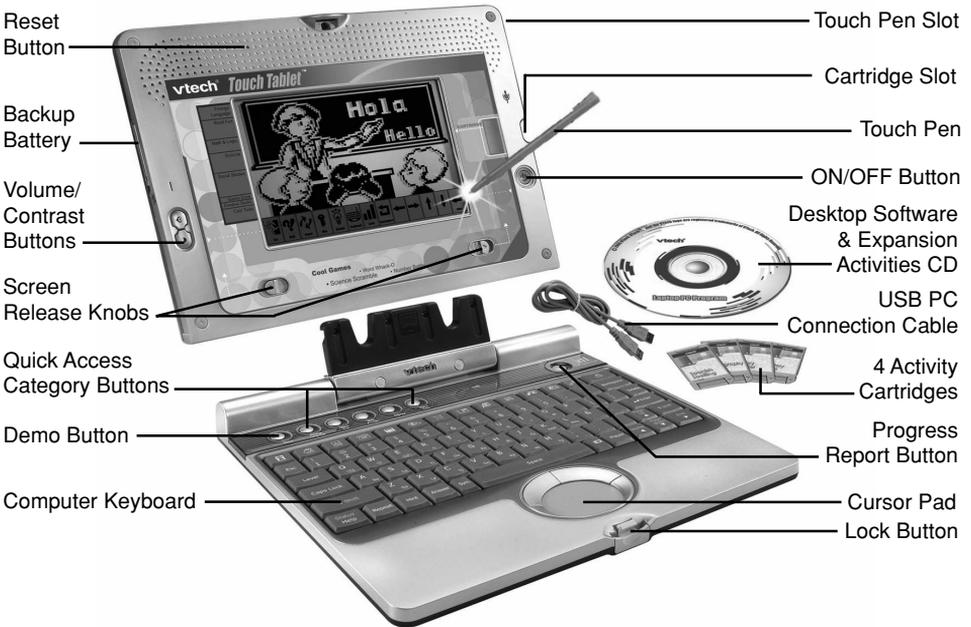

INSTRUCTIONS & ACTIVITIES

INCLUDED IN THIS PACKAGE

- **VTech® Touch Tablet™**
- 4 bonus activity cartridges: Geography Quiz, History Hints, Spanish Spelling and Story Teller
- User's manual
- USB PC connection cable
- Desktop software & expansion activities CD-ROM
- Touch pen

WARNING:

All packing materials such as tape, plastic sheets, wire ties and tags are not part of this product and should be discarded for your child's safety.

GETTING STARTED

POWER SOURCE

The **Touch Tablet™** operates on 4 "AA" size batteries (UM-3/LR6) or a **VTech®** 9V adaptor (sold separately).

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the detachable screen and open it.
3. Insert 4 new "AA" batteries (UM-3/LR6) as illustrated.



RECHARGEABLE BATTERIES ARE NOT RECOMMENDED.

4. Close the battery cover.

NOTE: For best performance, remove all factory-installed batteries and use new, alkaline batteries.

Important: When replacing the 4 “AA” size batteries, make sure the backup batteries are in the unit. Otherwise you will lose any information stored on the unit.

BACKUP BATTERY INSTALLATION

Your **Touch Tablet™** comes with a backup battery already installed. To avoid damage to the unit from leaky batteries, replace the backup battery at least once a year.

TO REPLACE THE BACKUP BATTERY

1. Make sure the unit is **OFF**.
2. Using a small cross-head screwdriver, loosen the battery cover.
3. Insert 1 **CR2032** size battery as illustrated.
4. Close the battery cover and tighten the screws to secure it.

Important: While replacing the backup battery, the 4 “AA” size batteries must be kept in the unit. Otherwise, you will lose any saved information.



STANDARD FOR BATTERY TOYS

- Do not try to recharge non-rechargeable batteries;
- Rechargeable batteries are to be removed from the toy before being charged;
- Rechargeable batteries are only to be charged under adult supervision;
- Do not mix different types of batteries; Do not mix new and used batteries;
- Only use batteries of the recommended or equivalent type;
- Always insert batteries properly matching the plus (+) and minus (-) signs;
- Batteries that have run out of energy must be removed from the toy;
- Do not short-circuit the supply terminals;
- Do not use more batteries than recommended;
- Remove batteries from the toy if it will not be used for an extended period of time.

AC-DC ADAPTOR



Use a **VTech®** adaptor or any other standard adaptor that complies with EN61558 DC 9V
 300mA  center-positive adaptor.

CONNECTING THE ADAPTOR

1. Make sure the unit is **OFF**.
2. Locate the adaptor jack on the side of the unit.
3. Insert the adaptor plug into the unit's adaptor jack.
4. Plug the adaptor into a wall outlet.
5. Turn the unit **ON**.

NOTE: When the toy is not going to be in use for an extended period of time, unplug the adaptor.

STANDARD FOR TOYS WITH ADAPTORS


- The toy is not intended for use by children under 3 years old;
- Use only the recommended adaptor with the toy;
- The adaptor is not a toy;
- Never clean a plugged-in toy with liquid;
- Never use more than 1 adaptor;
- Do not leave the toy plugged in for extended periods of time.

NOTICE TO PARENTS

Regularly examine the adaptor, checking for damage to the cord, plug, transformer or other parts. Do not use the adaptor if there is any damage to it. The demo tag should detach automatically when the product is taken out of the packaging. If the demo tag is still in position when you begin play, please remove it from the bottom of the unit to activate normal play mode.

CARTRIDGE

To play one of the included cartridge games, turn the unit **ON** and insert the cartridge into the cartridge slot on the right side of the unit.

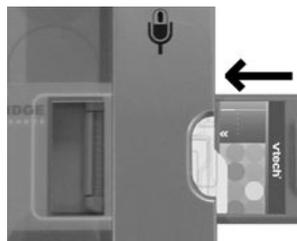

DETACHABLE SCREEN

Your **Touch Tablet™** features a detachable screen that can be used as a portable tablet, along with the touch pen. To detach the screen, grasp the two screen release knobs on the bottom front of the screen, and slide them away from each other in the direction of the arrows. Pull the screen upward to remove it from the keyboard.

PRODUCT FEATURES

PLAY MODES

In the **Touch Tablet™** you can choose from 8 different categories of play and learning:

- Foreign Language (Spanish)
- Word Fun
- Math & Logic
- Science
- Social Studies
- Game Zone
- Creative Studio
- Cool Tools

Press  on the keyboard to switch between one-player and two-player modes.

The activities that can be played with two players are:

Dots & Boxes

Balloon Blow Out

 
Number Battle

TURNING THE UNIT ON AND OFF

Pressing  will turn the unit **ON**. Pressing  again will turn the unit **OFF**.

ACTIVITY SELECTION:

When the unit is turned **ON**, you will see a short opening scene and enter the Main Menu. Here, activities will cycle onto and off the screen automatically. You can choose an activity in one of these ways:

- 1) Press  when you see an activity you like.
- 2) Use the cursor pad to cycle through the activities by clicking on the arrows on the right side of the screen. Press  or the left cursor button to choose an activity.
- 3) Use the touch pen to cycle through the activities by touching the arrows on the right side of the screen. To select an activity, press  or touch the activity title with the pen.
- 4) Type the activity number and press .

If you press a category key (such as 'Word Fun'), the menu will jump to the first activity of that category. An activity can then be chosen in the above ways.

LEVEL SELECTION

Pressing  will take you to the level selection screen. Use the arrow keys, cursor pad, touch pen or keyboard to select level 1 (easy), 2 (medium) or 3 (hard).

ANSWER

In most activities, the answer will be provided after a certain number of tries.

CONTRAST BUTTON



To adjust the darkness of the screen, press the **Contrast Button** and use the touch pen, cursor pad, or arrow keys to choose the desired level.

VOLUME BUTTON




To adjust the volume, press the **Volume Button** and use the touch pen, cursor pad, or arrow keys to choose the desired level.

CURSOR PAD

Use the cursor pad to control the movement of the cursor on the screen. To select an object, press the left cursor pad button.

KEYBOARD LAYOUT

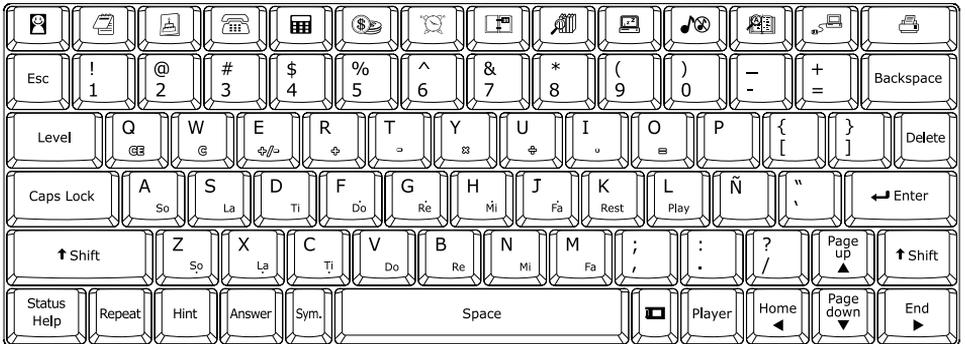

Your **Touch Tablet™** has a full typing keyboard that doubles as a music keyboard. It also features the function keys described below.

FUNCTION KEYS:



Demo

 
Press this button to see a short preview of your **Touch Tablet™**.




Press this button to see how you're doing in each learning category.



Foreign Language



Word Fun

 

Math & Logic



Science



Game Zone


Press one of these buttons to jump to the first activity of the selected category.

- Esc:** Press this key to exit an activity.
- Level:** Press this key to set the difficulty level (easy, medium or hard).
- Caps Lock:** Press this key to type in capital letters. Press it again to switch to small letters.
- Shift:** Hold this key down to type capital letters. You can also use this key to use the alternate functions of certain keys. These functions are marked on the keys in a different color.
- Status/Help:** Press this key for information about the current activity.
- Answer:** Press this key to see the correct answer to a question.
- Repeat:** Press this key to repeat an instruction or a question.
- Hint:** Press this key for help with a question. Your score will be lowered when you use this key.
- Sym.:** Press this key to use the symbol menu. Use the touch pen to click on a symbol.
- Space Bar:** Press this key to type a space between words or characters.

Cartridge : Press this key to play cartridge games: **Spanish Spelling, Story Teller, Geography Quiz and History Hints.**

- Player:** Press this key to select one- or two-player mode.
- Arrow Keys:** Press these keys to move the cursor up, down, right or left.
- Enter:** Press this key to enter an answer or choice.
- Delete:** Press this key to delete the last action, letter or character.
- Backspace:** Press this key to erase the character to the left of the cursor.
- Letter Keys:** Press these keys to enter letters in letter and word-related activities.
- Number Keys:** Press these keys to enter numbers in number activities.

Musical Note Keys: Press these keys to enter music notes in music-related activities.

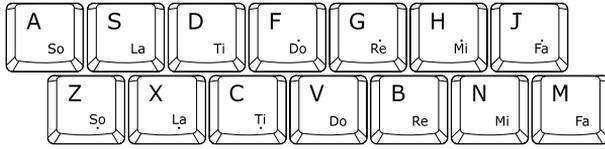

HOT KEYS



Press this key to enter the Personal Profile activity.



Press this key to enter the Word Processor activity.



Press this key to enter the Card Maker activity.



Press this key to enter the Phone Book activity.



Press this key to enter the Calculator activity.



Press this key to enter the Saving Calculator activity.



Press this key to enter the Alarm Clock activity.



Press this key to enter the Calendar activity.



Press this key to enter the Book Finder activity.



Press this key to access the Screen Saver function.



 
Press this key to turn the Background Music On and Off.



Press this key to enter the Word Translator activity.




Press this key to enter the CD Download function.



Press this key to connect to a printer and print files.

TOUCH STRIP

 Your **Touch Tablet™** has an LCD screen with a touch strip at the bottom. You can access certain activities and functions by touching the touch strip with the touch pen.



Touch this space to exit an activity.



Touch this space for information about the current activity.



Touch this space to repeat an instruction or a question.



Touch this space to get help with a question.



Touch this space to see the correct answer to a question.



Touch this space to see the onscreen keyboard.



Touch this space to set the difficulty level (easy, medium or hard).



Touch this space to move the cursor back a space.



Touch this space to move the cursor to the left.



Touch this space to move the cursor to the right.



Touch this space to move the cursor up.



Touch this space to move the cursor down.



Touch this space to enter an answer or choice.

VOICE MATE

Your **Touch Tablet™** is equipped with the Voice Mate feature, a built-in recording system that provides a great way to improve your foreign language skills and express your creativity. Voice Mate appears automatically in certain foreign language activities. Click the onscreen “Record” icon  to try your hand at Spanish pronunciation, and compare your recording to the given pronunciation. To hear your recording, click the onscreen “Play” icon .

AUTO POWER OFF

To preserve battery power, the **Touch Tablet™** will automatically shut off after several minutes of inactivity. You can turn the unit back **ON** by pressing .

ACTIVITIES

Your **Touch Tablet™** offers a total of 125 activities including 4 activities from bonus cartridges.



Activity No.	Activity Name	Category	Activity Description
1	Spanish Letters	Foreign Language	Choose a letter to hear its Spanish pronunciation. You can also click the Record icon to record your own reading and compare.
2	Spanish Words	Foreign Language	Choose an English word to learn what it means in Spanish. You can also click the Record icon to record your own reading and compare.
3	Word Match	Foreign Language	Choose the English word that matches the Spanish word at the top of the screen. Use the cursor pad, arrow keys, or touch pen to answer.
4	Phrase Teacher	Foreign Language	Choose a short English sentence to learn what it means in Spanish. You can also click the Record icon to record your own reading and compare.
5	Phrase Match	Foreign Language	Match each Spanish sentence with its English translation. Use the cursor pad, arrow keys, or touch pen to answer.
6	Spanish Chat	Foreign Language	Choose a chat and watch the pictures to learn what is being said. Click the translator key to switch between English and Spanish. You can also click the Record icon to record your own reading and compare.
7	Let's Chat	Foreign Language	You will see part of a chat in Spanish. Use the chats you learned in the "Spanish Chat" activity to choose the phrase that comes next.
8	Spanish Singular	Foreign Language	Find the singular form of the plural Spanish word at the top of the screen.
9	Spanish Plural	Foreign Language	Find the plural form of the singular Spanish word at the top of the screen.
10	Spanish Strikeout	Foreign Language	
15	Word Strikeout	Word Fun	



16	Grammar Blanks	Word Fun	Read the clue, and type the answer. Correct letters will appear on the screen, and incorrect ones will use up your chances to answer. Press the Repeat key to see the clue again. Press the Symbol key to type Spanish characters.
56	Nature Blanks	Science	
69	Earth Strikeout	Science	
70	Science Strikeout	Science	
79	Land Traveler	Social Studies	
80	Globe Guess	Social Studies	
81	History Strikeout	Social Studies	
82	History Blanks	Social Studies	
11	Language Quiz	Foreign Language	Use the touch pen, arrow keys, or number keys to answer each question. Press Enter to enter your answer.
17	Word Quiz	Word Fun	
18	Grammar Quiz	Word Fun	
57	Earth Trivia	Science	
58	Science Smarts	Science	
59	Creature Quiz	Science	
83	Word Trivia	Social Studies	
84	World Whiz	Social Studies	
85	History Quiz	Social Studies	
19	Syllable Sort	Word Fun	
20	Grammar Syallables	Word Fun	
50	Space Syllables	Science	
51	Science Syllables	Science	
52	Syllable Whiz	Science	
71	Geography Syllables	Social Studies	
72	Find the Syllable	Social Studies	
73	History Syllables	Social Studies	
74	World Syllables	Social Studies	
12	Spanish Scramble	Foreign Language	Use the clue at the top of the screen to unscramble the word. Type the letters of the word in the right order, and press Enter . Hurry, there is a time limit! Press the Symbol key to type Spanish characters.
21	Word Scramble	Word Fun	
53	Nature Knowledge	Science	
54	Science Scramble	Science	
55	Earth Scramble	Science	
75	Globe Scramble	Social Studies	
76	History Mix-Up	Social Studies	
77	History Scramble	Social Studies	
78	Land Scramble	Social Studies	

13	Magic Pixels	Foreign Language	Read each clue, and type each answer before it fades in. Hurry, time is running out! Press the Symbol key to type Spanish characters.
22	Word Dots	Word Fun	
23	Grammar Pix	Word Fun	
60	Earth Pix	Science	
61	Science Bits	Science	
62	Nature Dots	Science	
86	Geography Pix	Social Studies	
87	History Bits	Social Studies	
88	History Hodgepodge	Social Studies	
89	Geography Dots	Social Studies	
24	Vocabulary Clues	Word Fun	Read each clue and guess the answer. Each puzzle has three to five clues. Type the answer using the keyboard.
63	Space Clues	Science	
64	Science Sleuth	Science	
65	Nature Hints	Science	
90	Geography Clues	Social Studies	
91	Globe Facts	Social Studies	
92	History Detective	Social Studies	
25	Meaning Match	Word Fun	Find the correct match for the word at the top of the screen. Use the arrow keys to find an answer, and press Enter . How many can you answer before time runs out?
66	Science Match	Science	
67	Creature Match	Science	
68	Earth Match	Science	
93	Geography Match	Social Studies	
94	Geography Galore	Social Studies	
95	History Match	Social Studies	
96	History Pair-Up	Social Studies	
35	Alphabet Racer	Word Fun	Click on the word that comes next in alphabetical order. The more correct words you choose, the more points you score!
26	Word Whack-O	Word Fun	Use the touch pen to click the letters that complete the word, or the numbers that complete the equation. Click fast, before the answers disappear!
44	Math Whack-O	Math and Logic	

27	Spelling Snake	Word Fun	Use the arrow keys to control the snake. Eat only the letters that complete the word, or the numbers that complete the equation. If the snake touches the wall, itself or a wrong answer, you lose a turn. You have three turns to get as many correct answers as possible.
36	Math Snake	Math and Logic	
14	Letter Lander	Foreign Language	Use the arrow keys to move the cart left and right. Catch only the letters that complete the word, or the numbers that complete the equation.
28	Spelling Catch	Word Fun	
37	Math Grabber	Math and Logic	
29	Antonym Match	Word Fun	Click on the cards to flip them over, and match up the pairs. When you match all six cards, a new board will appear. Hurry, there is a time limit!
30	Synonym Match	Word Fun	
31	Homonym Match	Word Fun	
32	Verb Tense Match	Word Fun	
33	Grammar Match	Word Fun	
38	Math Memory	Math and Logic	
34	What's Missing?	Word Fun	The same letter or letters are missing from all three words. Type the letter(s), and press the Enter key. Press the Hint key to see one of the correct letters.
39	Which Sign?	Math and Logic	Use the touch pen or arrow keys to choose the right sign: greater than (>), less than (<), or equals (=). How many equations can you complete before time runs out?
40	Dial-a-Sign	Math and Logic	Turn each set of numbers into a correct equation by using the dials. Use the left and right arrow keys to choose a dial; then use the up and down arrow keys to turn it. Time is limited, so act fast!
41	Clever Bricks	Math and Logic	Click on bricks that are next to each other and add up to the target sum. Hurry, this is a timed game!

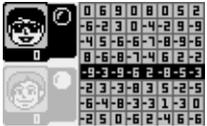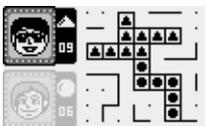

42	Logic Sequence	Math and Logic	<p>Type the letter or number that completes each pattern.</p>
43	Number Battle	Math and Logic	<p>This is a 2-player game. You can play against a friend or the computer. Player 1 picks a number from the highlighted row. Player 2 chooses a number from the same column as the number picked by player 1. The game goes on until all the numbers have been picked. The player with the most points wins!</p> 
45	Dots & Boxes	Math and Logic	<p>This is a 2-player game. You can play against a friend or the computer. Take turns drawing a line by clicking on two dots. A player who completes the fourth side of a box earns a point, and gets an extra turn. The player who makes the most boxes wins.</p> 
46	Balloon Blow Out	Math and Logic	<p>This is a 2-player game. You can play against a friend or the computer. Take turns popping 1 to 4 balloons. Click on the Pass icon  or the Space bar to skip your turn. The one who pops the last balloon loses.</p> 
47	Shape Finder	Math and Logic	<p>How many triangles, circles, squares, or rectangles you can find in the picture? Hint: some shapes are inside other shapes!</p>

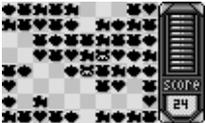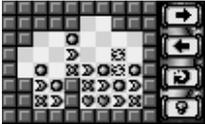48	Number Maze	Math and Logic	<p>Every space in the maze is marked with a number. When you are on a space, you can only move that number of spaces in any direction. You cannot move off the board. Can you leave the maze before time runs out?</p> 
49	Cluster Cubes	Math and Logic	<p>Click on cubes with the same pattern to make them disappear. When no more cubes can be grouped, the game is over.</p> 
97	Name That Tune	Game Zone	<p>Choose the correct name for each song.</p>
98	Chain Link	Game Zone	<p>Pair up blocks to make them disappear. Pairs must be next to each other, or you must be able to draw a line between them. See if you can clear the board!</p> 
99	Typing Tutor	Game Zone	<p>Get your typing skills in shape! Words will scroll out from right to left. Quickly type the whole word before it reaches the other side of the screen.</p>
100	Match Box	Game Zone	<p>Use the touch pen to slide the boxes down the screen. When you move matching boxes next to each other, they will disappear. Can you clear the board?</p> 

101	Apple Catch	Game Zone	<p>Use the arrow keys to help the little guy catch the falling apples. How many apples can you catch before time runs out?</p> 
102	Music Mixer	Creative Studio	<p>Choose a song, and use the on-screen icons to change the song's instruments and tempo.</p>
103	Music Composer	Creative Studio	<p>Use the music notes on the keyboard to create a song. Click on the arrows to change musical instruments.</p> 
104	Follow the Notes	Creative Studio	<p>Repeat the music notes you hear by pressing the note keys on the keyboard or clicking the notes on the screen.</p>
105	Face Maker	Creative Studio	<p>Click the on-screen icons to create a face. Save the face you created by clicking the middle icon at the bottom of the screen.</p> 
106	Card Maker	Creative Studio	<p>Press  to enter the Card Maker activity. Make your own greeting cards by choosing a picture and typing a greeting. Click on the Save icon  to save your file. Click on the Upload icon  to transfer files to a PC. Click on the Trash icon  to delete files. Click on the Print icon  to print files via your PC.</p>

107	Picture Fun	Creative Studio	Choose a picture. Shade in your picture by choosing from the palette on the right and clicking on the different areas of the picture.
108	Book Finder	Cool Tools	Press  to enter the Book Finder activity. Do you like to read? We have a whole list of reading suggestions you might enjoy. You can even choose them based on your favorite subject.
109	Calculator	Cool Tools	Press  to enter the Calculator activity. Use the on-screen keys or the keyboard to add, subtract, multiply, and divide. Store numbers in the memory with the on-screen memory keys.
110	Phone Book	Cool Tools	Press  to enter the Phone Book activity. Enter a name, phone number, birthday, and e-mail address for each of your friends. Choose a picture for each name. Click the Save icon to save your info. You can also upload your files to a PC or print them.
111	Personal Profile	Cool Tools	Press  to enter the Personal Profile activity. Type your name, phone number, email address, and choose a picture. Press the Esc key to save your info and return to the main menu. 
112	Progress Report	Cool Tools	The Progress Report shows how well you are doing in each learning category.

113	Saving Calculator	Cool Tools	<p>Press  to enter the Saving Calculator activity. The Saving Calculator helps plan your savings. Enter an amount of money to save, then enter an amount of time in days, weeks, or months. The calculator will tell you how much to save each day/ week/ month, to reach your goal.</p> 
114	CD Download	Cool Tools	<p>Press  to enter the CD Download activity. Use the USB cable to connect to a PC and download bonus activity data from the included CD-ROM.</p>
115	Screen Saver	Cool Tools	<p>Press  to access the Screen Saver function. Choose a screen saver for your laptop.</p> 
116	Calendar	Cool Tools	<p>Press  to enter the Calendar activity. You can set the date on your laptop.</p>
117	Alarm Clock	Cool Tools	<p>Press  to enter the Alarm Clock activity. In this activity you can set the notebook's time and alarm.</p>
118	Voice Message	Cool Tools	<p>Click the Record icon to record a voice message to play when your laptop starts up.</p> <p>Note: any recording in other activities will erase your start-up message.</p>

119	Word Processor	Cool Tools	Press  to enter the Word Processor activity. Use the keyboard to type text, and click on the Save icon  to save your file. Click on the Upload icon  to transfer files to a PC. Click on the Trash icon  to delete files after connecting to a PC. Click on the Print icon  to print files via your PC. You can also click on the New icon  to create a new file, and click on  to review files you have saved.	
120	Joke Fun	Cool Tools	Heard any good jokes lately? Try these! Read the joke and click on the “Answer” icon for a laugh.	
121	Word Translator	Cool Tools	Press  to enter the Word Processor activity. Choose a word to see its translation in Spanish or English.	
122	Cartridge	Geography Quiz History Hints Spanish Spelling Story Teller	Cool Tools	The unit offers 4 bonus cartridges with additional activities: Geography Quiz, History Hints, Spanish Spelling, and Story Teller.

PC CONNECTION

Your **VTech® Touch Tablet™** can connect to a personal computer through the included USB cable and PC connection program. You can use the PC connection to upload or print files created in the **Word Processor**, **Card Maker**, and **Phone Book** activities of your **Touch Tablet™**. You can also use the PC connection to download extra activity data from the included CD-ROM.

Note: Make sure to install the **VTech® Laptop PC Program** prior to making the USB cable connection.

Hardware Requirements

In order to use the PC connection feature, your PC must meet these minimum requirements:

Computer/Processor

Computer with a 486/66-megahertz (MHz) processor or higher (Pentium processor is recommended)

Memory (RAM requirements depend on the operating system used)

Windows 98:	16 MB of RAM minimum
Windows 98 Second Edition:	16 MB of RAM minimum
Windows 2000:	32 MB of RAM minimum
Windows Me Edition:	32 MB of RAM minimum
Windows XP:	64 MB of RAM minimum
Free Hard Disk Space	35MB
Drive	CD-ROM drive
Display	Super VGA (800 x 600) or higher-resolution monitor with 256 colors
Peripherals	Mouse or compatible pointing device
Operating System	Windows 98, Windows 98 SE, Windows Me, Windows 2000 or Windows XP

Installation

To install the PC connection program, insert the PC connection CD-ROM into your CD-ROM drive. If installation does not start automatically, please follow the following steps: select the Run option on the taskbar Start Menu and type: D:\setup.exe

(**Note:** If "D:" is not your CD-ROM drive, replace "D:" with your CD-ROM drive.)

Uninstall

To uninstall the PC connection program, click the Add/Remove Programs icon in the Control Panel, and choose "**VTech® Laptop PC Program**" to remove.

Operating Tips

1. Connect the USB cable to a USB port on your PC.
2. Connect the other end of the USB cable to the USB port on your **VTech® Touch Tablet™**. Make sure the USB cable is securely connected to both machines.
3. On your PC, run the **VTech® Laptop PC Program**. To upload files to your PC, use the onscreen icons in the **Word Processor**, **Card Maker**, and **Phone Book** activities of the **Touch Tablet™**. Please note that if you revise the files on your PC using other applications, you will not be able to download them back to your **Touch Tablet™**.
4. After you have uploaded files from your **Touch Tablet™** to your PC, you can download them back to the **Touch Tablet™** by using the "Download" icon at the bottom of the PC program window.
5. In the PC program window, click the "Delete" icon to delete any **Phone Book**, **Word Processor** and **Card Maker** files you no longer need.
6. Before printing files, make sure your printer is turned on and the page setup of the printer matches the files you want to print. To print files, use the onscreen "Print" icon in the **Word Processor**, **Card Maker** and **Phone Book** activities of your **Touch Tablet™**.

7. Click the Unplug or Eject Hardware icon on the bottom right to properly disconnect the USB connection on Windows 2000, Windows XP and Windows Me before turning off the **Touch Tablet™** or disconnecting the USB cable. As for Windows 98, close the **VTech® Laptop PC Program** before turning off the **Touch Tablet™** or disconnecting the USB cable.

CARE & MAINTENANCE

1. Keep your **Touch Tablet™** clean by wiping it with a slightly damp cloth. Never use solvents or abrasives.
2. Keep it out of direct sunlight and away from direct sources of heat.
3. Remove the batteries when not using it for an extended period of time.
4. Avoid dropping it. NEVER try to dismantle it.
5. Always keep the **Touch Tablet™** away from water.

TROUBLESHOOTING

1. If your Touch Tablet™ stops working or does not turn on:

- Check your batteries. Make sure the batteries are fresh and properly installed.
- Insert the tip of a paper clip (or a similar object without a sharp tip) into the small hole on the top left of the unit labeled “Reset.”

Note: After resetting, you will lose any stored data, and default settings will be restored.

- If you are still having problems, visit our website at www.vtechkids.com for troubleshooting tips.

2. If when pressing the On/Off button, nothing happens:

- Make sure your unit is plugged in.
- If you are using batteries, check to see that they are aligned correctly.

3. If you turn the unit on, but cannot see anything on the screen:

- Adjust the contrast switch to adjust the darkness of the screen.

4. If you can't hear any sound:

- Adjust the volume switch to adjust the sound level of the speaker.

5. If the screen is frozen and not responding to any input:

- Use the tip of a paper clip (or a similar object without a sharp tip) to gently press the Reset button.

6. If you experience a problem with the USB connection:

- Disconnect the USB cable from both the **Touch Tablet™** and the PC, and reconnect it again.
- If you continue to experience problems, turn off both the **Touch Tablet™** and PC, and restart them again.

TECHNICAL SUPPORT

If you have a problem that cannot be solved by using this manual, we encourage you to visit us online or contact our Consumer Services Department with any problems and/or suggestions that you might have. A support representative will be happy to assist you. Before requesting support, please be ready to provide or include the information below:

- The name of your product or model number (The model number is typically located on the back or bottom of your product.)
- The actual error message or problem you are experiencing.
- The actions you took right before the error message or problem occurred.

Internet: www.vtechkids.com

Phone: 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada

OTHER INFO

VTech® Electronics North America, L.L.C. and its suppliers assume no responsibility for any damage or loss resulting from the use of this handbook. **VTech**® Electronics North America, L.L.C. and its suppliers assume no responsibility for any loss or claims by third parties that may arise through the use of this software. **VTech**® Electronics North America, L.L.C. and its suppliers assume no responsibility for any damage or loss caused by deletion of data as a result of malfunction, dead battery, or repairs. Be sure to make backup copies of important data on other media to protect against data loss.

COMPANY: **VTech**® Electronics North America, L.L.C.

ADDRESS: 1155 W. Dundee Road, Suite 130, Arlington Heights, IL 60004, USA

TEL NO.: (847) 400-3600

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.