

User's Manual

Crazy Legs Learning Bugs™



© 2010 VTech Printed in China

91-002439-000-000(\$)

Dear Parent,

Ever notice the look on your baby's face when they learn something new through their own discovery? These self-accomplished moments are a parent's greatest reward. To help fulfill them, VTech® created the Infant Learning® series of toys.

These unique interactive learning toys directly respond to what children do naturally – play! Using innovative technology, these toys react to baby's interactions, making each play experience fun and unique as they learn age-appropriate concepts like first words, numbers, shapes, colors and music. More importantly, VTecho's Infant Learning toys develop baby's mental and physical abilities by inspiring, engaging and teaching.

At **VTech**®, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting **VTech®** with the important job of helping your child learn and grow!


sincerely,

Your friends at VTech®

INTRODUCTION


Thank you for purchasing the VTech[®] Crazy Legs Learning Bugs™ learning toy.

These learning bugs are crawling with fun! Six shape sorters connect with bendable legs so they don't get lost. Large buttons teach shapes, numbers and nature objects. Baby bug spins with delight and encourages play. Pulling cord stores inside until baby is ready to use it. Rolling design promotes crawling and walking.

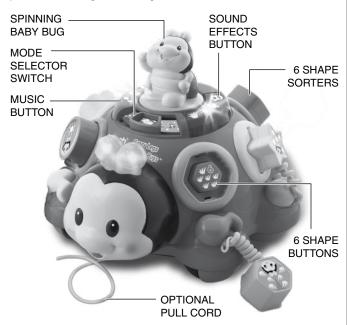

INCLUDED IN THIS PACKAGE

- One VTech® Crazy Legs Learning Bugs™ learning toy
- One spinning baby bug

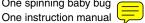


WARNING:

All packing materials, such as tape, plastic sheets, wire ties and tags are not part of this toy, and should be discarded for your child's safety.

GETTING STARTED

BATTERY INSTALLATION

- Make sure the unit is turned OFF.
- 2. Locate the battery cover on the bottom of the unit. Use a coin or a screwdriver to loosen the screw.
- 3. Install 2 new 'AA' (AM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
- 4. Replace the battery cover and tighten the screw to secure the battery cover.

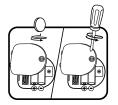

BATTERY NOTICE

- Install batteries correctly observing the polarity (+, -) signs to avoid leakage.
- Do not mix old and new batteries.
- Do not mix batteries of different types: alkaline, standard (carbonzinc) or rechargeable (nickel-cadmium).
- Remove the batteries from the equipment when the unit will not be used for an extended period of time.

- Always remove exhausted batteries from the equipment.
- Do not dispose of batteries in fire.
- Do not attempt to recharge ordinary batteries.
- The supply terminals are not to be short-circuited.
- Only batteries of the same and equivalent type as recommended are to be used.

WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES.

With the VTech® Crazy Legs Learning Bugs™ safety comes first:

To ensure your child's safety, the assembly of this product is an adult activity, not a child's activity.

Please ensure the small ladybug is locked i bosition before giving this toy to a child.



Assembly Instructions

 Please remove the baby bug label and the two pieces of clear plastic beneath it to expose the hole in the unit, and keep them out of child's reach.



2. Align the bottom of the baby bug with the hole in the unit. Push the baby bug into the hole until it clicks into place.



Please cut the thin thread that attaches the block to the bug. The cut thread can be removed from the bottom of the bug. Discard the thread for your child's safety.



PRODUCT FEATURES

1. MODE SELECTOR SWITCH


To turn the unit ON, slide the MODE SELECTOR SWITCH to the Learning (♠) or the Music (♠¾) mode position.

To turn the unit OFF, slide the MODE SELECTOR SWITCH to the OFF (●) position.



2. PULL-ALONG CORD

To convert the unit from a push toy to a pull toy, remove the pull cord from the battery compartment and thread it through the eyelet on the bottom of the bug. For your child's safety, we suggest you store the pull cord in the compartment until your child is walking.

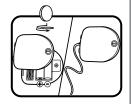

3. AUTOMATIC SHUT-OFF

To preserve battery life, the VTech® Crazy Legs Learning Bugs™ will automatically power-down after approximately 45 seconds without input. The unit can be turned on again by pressing any button. Pulling the unit or spinning the baby bug does not turn it on.

ACTIVITIES

 Press the spinning baby bug to hear talking phrases and fun sound effects in learning mode, and hear sing-along songs, talking phrases and fun sound effects in music mode. The baby bug will spin as the unit is pulled along. The lights will flash with the sounds.



Press the shape buttons to learn shapes, numbers and nature objects in learning mode, and hear sound effects and melodies in music mode. The lights will flash with the sounds



 Press the music button to hear fun sound effects, talking phrases and questions about shapes or nature objects in learning mode, and hear melodies in music mode. The lights will flash with sounds.



4. Press the sound effects button to hear fun sound effects, talking phrases and questions about shapes or nature objects in learning mode, and hear fun sound effects and short tunes in music mode. The lights will flash with the sounds.



MELODY LIST

1. The Glow Worm 7. I've Been Working on the Railroad

2. London Bridge 8. Pop! Goes the Weasel

3. Shoo, Fly 9. Twinkle, Twinkle, Little Star

4. Mary Had a Little Lamb 10. Hickory Dickory Dock

5. Old MacDonald Had a Farm 11. Hey, Diddle Diddle

6. Polly Wolly Doodle 12. Frere Jacques

SUNG SONG LYRICS

SONG 1 (to the tune of 'Mulberry Bush')

Let's roll around, there's so much to see!

There's so much to learn, come learn with me!

Let's learn our shapes and numbers, too.

Let's take a learning journey!

SONG 2 (to the tune of 'Yankee Doodle')

Come, let's roll and play around.

Let's take a learning journey!

Shapes and numbers all around,

We have so much to see!

CARE & MAINTENANCE

- 1. Keep the unit clean by wiping with a slightly damp cloth.
- Keep the unit out of direct sunlight and away from any direct heat source.
- Remove the batteries when the unit is not in use for an extended period of time.
- Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

- 1. Please turn the unit OFF.
- 2. Interrupt the power supply by removing the batteries.
- 3. Let the unit stand for a few minutes, then replace the batteries.
- 4. Turn the unit **ON**. The unit should now be ready to play again.
- If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

For information on this product's warranty, please call **VTech®** 1-800-521-2010 in the U.S., or 1-877-352-8697 in Canada.

IMPORTANT NOTE:

Creating and developing **Infant Learning** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S., or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

FCC Notice:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES-003.

CET APPAREIL NUMÉRIQUE DE LA CLASSE B EST CONFORME À LA NORME NMB-003 DU CANADA.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.