 


vtech[®]

 
Instruction Manual

SWITCH & GO[®] T-REX TERRAIN TRUCK

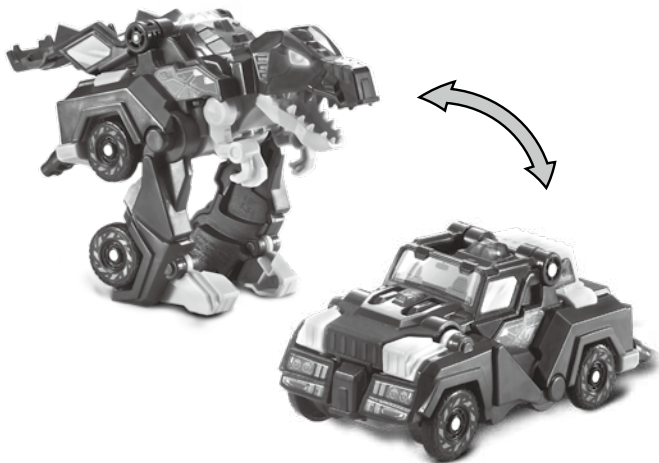

INTRODUCTION

Time for some roaring fun with **Switch & Go® T-Rex Terrain Truck**. One touch transformation switches this rugged off road vehicle into a tough and cool T-Rex. Press the Voice Button to hear fun phrases and cool sound effects.

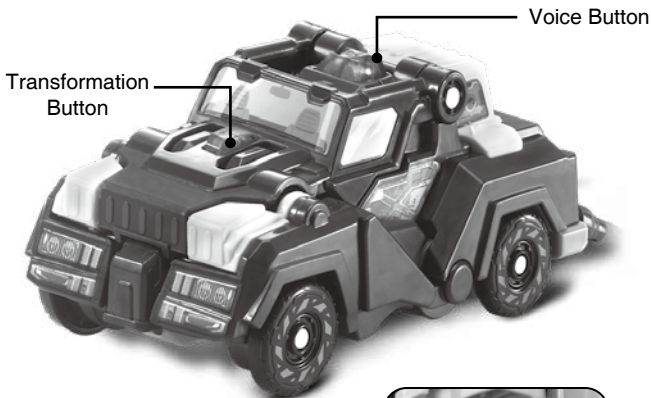

Off / Low Volume /
High Volume Switch

INCLUDED IN THE PACKAGE

- One **Switch & Go® T-Rex Terrain Truck**
- One Quick Start Guide

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE:

Please save this Instruction Manual as it contains important information.

ATTENTION :

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

 
NOTE :

Il est conseillé de sauvegarder ce manuel d'utilisation car il comporte des informations importantes.

GETTING STARTED

Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the bottom of the unit, use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old battery by pulling up on one end of each battery.
4. Install 1 new AAA (LR03/AM-4) battery following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

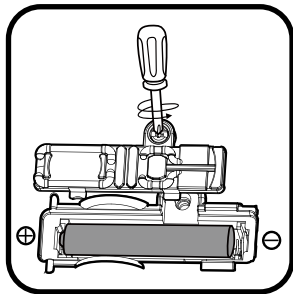

Note: If there is no response when the T-Rex is switched on, please install brand new battery and try switching the T-Rex on again.



WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.



ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.
Tenir les piles ou accumulateurs hors de portée des enfants.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries (if removable) from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

IMPORTANT : INFORMATIONS CONCERNANT LES PILES

Les piles fournies avec le produit permettent de tester le jouet en magasin mais ne sont pas des piles longue durée.




- Mettre en place les piles ou les accumulateurs en respectant les polarités + et -.
- Ne pas mélanger des piles ou des accumulateurs neufs avec des usagés.
- Ne pas mélanger différents types de piles : alcalines, zinc-carbone et rechargeables.
- Seules des piles du type recommandé doivent être utilisées.
- Ne pas mettre les bornes d'une pile ou d'un accumulateur en court-circuit (en reliant directement le + et le -).
- Retirer les piles ou les accumulateurs en cas de non-utilisation prolongée.
- Enlever les piles ou les accumulateurs usagés du jouet.
- Ne les jeter ni au feu ni dans la nature.

 
PILES RECHARGEABLES

- Enlever, lorsque c'est possible, les accumulateurs du jouet pour les recharger.
- Les accumulateurs ne doivent être chargés que sous la surveillance d'un adulte.
- Ne pas tenter de recharger des piles non rechargeables.

PRODUCT FEATURES


1. OFF / LOW VOLUME / HIGH VOLUME SWITCH

To turn the unit **On** or to adjust the volume, slide the switch to the Low  or High  Volume position. To turn the unit **Off**, slide the switch to the **Off**  position.

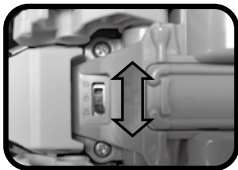


2. VOICE BUTTON

 Press **Voice Button** to hear fun phrases and cool dinosaur sounds in Dino mode. In Vehicle mode, press **Voice Button** to hear fun phrases and great vehicle sounds.

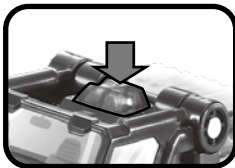

3. TRANSFORMATION BUTTON

 In Vehicle mode, push the **Transformation Button** to trigger automatic switching from Vehicle mode to Dino mode.

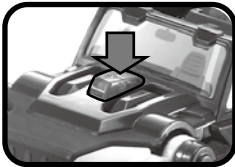

4. LED LIGHTS

 
The **LED Lights** will flash along with the sounds in Dino mode and Vehicle mode.

5. AUTOMATIC SHUT-OFF


To preserve battery life, the unit will automatically shut off after approximately 20 seconds without input. T-Rex Terrain Truck can be woken up again by pressing the Voice Button.

Note: If the unit powers down or if the light flashes 3 times without sounds during play, please install a new battery.


SWITCHING FROM DINO TO VEHICLE

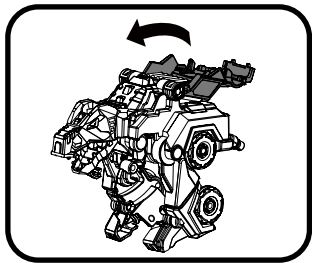

 
1. In Dino mode, flip the tail up toward the head.

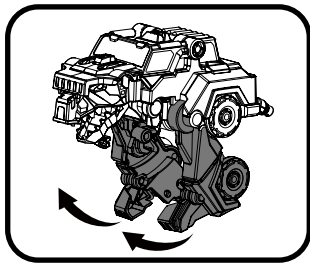

 2. Flip the feet up.

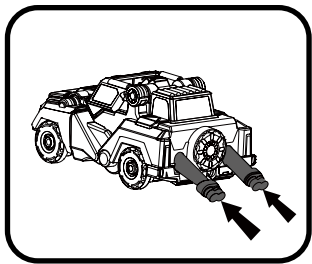


 3. Simultaneously push both exhaust pipes firmly into the body until you hear a click.

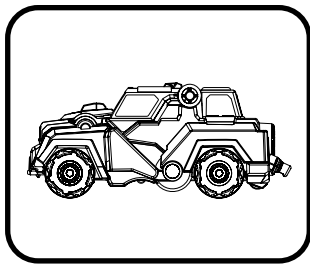

4. The unit is now in Vehicle mode.

 SWITCHING FROM VEHICLE TO DINO

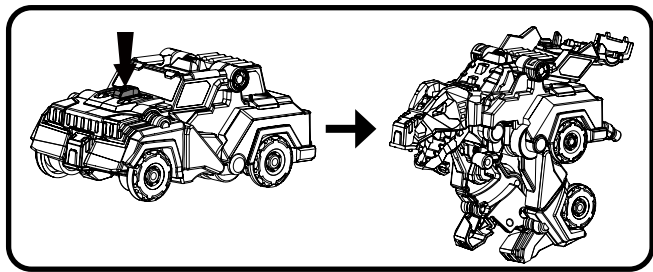

Push the **Transformation Button** to switch automatically from Vehicle to Dino mode.

Note : For optimal transformation from Vehicle to Dino mode, please ensure that the exhaust pipes have been pushed into the vehicle body until you hear a clicking sound.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the battery if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
5. If the unit is not working properly, install a new battery.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the battery.
3. Let the unit stand for a few minutes, then replace the battery.
4. Turn the unit back **On**. The unit should now be ready to use again.
5. If the unit still does not work, insert a new battery.

IMPORTANT NOTE:

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S., **1-877-352-8697** in Canada, or by going to our website **vtechkids.com** and filling out our **Contact Us** form located under the **Customer Support** link. Creating and developing VTech products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.
CAN ICES-3 (B)/NMB-3(B)

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Supplier's Declaration of Conformity 47 CFR § 2.1077 Compliance Information

| | |
|--------------------|---|
| Trade Name: | VTech® |
| Model: | 5693 |
| Product Name: | Switch & Go® T-Rex Terrain Truck |
| Responsible Party: | VTech Electronics North America, L.L.C. |
| Address: | 1156 W. Shure Drive, Suite 200 Arlington Heights, IL 60004 |
| Website: | vtechkids.com |

**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com

vtechkids.ca

Read our complete warranty policy online at
vtechkids.com/warranty
vtechkids.ca/warranty

