

vtech[®]
baby

Instruction Manual

3-in-1 Starry Skies Sheep Soother™



INTRODUCTION

Thank you for purchasing the **3-in-1 Starry Skies Sheep Soother™**.

Let this sweet lamb soothe your child to sleep with soft music, peaceful nature sounds and softly pulsing lights. Three light discs provide a night light, starry night effect or party light projections. Choose among three timer options, and rest assured—if your child awakens crying, the soother responds with comforting sounds. Remove the electronic module to create a plush lovey for your child to cuddle when they wake up.

Volume Control Buttons — Sound Sensor

Lullaby Button

Sound Button

Nursery Rhyme Button

Light Control Button

On/Off Switch

Time Selector Switch



INCLUDED IN THE PACKAGE

- 3-in-1 Starry Skies Sheep Soother™
- Electronic module
- Three light discs
- Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.

ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

 
NOTE

Il est conseillé de sauvegarder ce manuel d'utilisation car il comporte des informations importantes.

NOTE

This product is in Try-Me mode in the packaging. After opening the package, please remove the demo tag from the bottom of the electronic module, then turn the unit off and on again to proceed with normal play. If the unit repeatedly powers down or if the light fades out during play, please install a new set of batteries.


The cord is not part of this toy. For your child's safety, please cut and discard the cord before using the product.

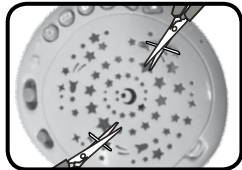

GETTING STARTED

Battery Removal and Installation

 1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the bottom of the electronic module. Use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on the end of each battery.
4. Install 2 new AA batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

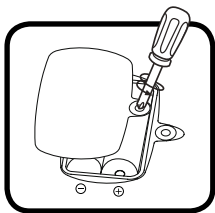

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.



ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.
Tenir les piles ou accumulateurs hors de portée des enfants.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.

- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES

- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

IMPORTANT : INFORMATIONS CONCERNANT LES PILES

- Mettre en place les piles ou les accumulateurs en respectant les polarités + et –.
- Ne pas mélanger des piles ou des accumulateurs neufs avec des usagés.
- Ne pas mélanger différents types de piles : alcalines, zinc-carbone et rechargeables.
- Seules des piles du type recommandé doivent être utilisées.
- Ne pas mettre les bornes d'une pile ou d'un accumulateur en court-circuit (en reliant directement le + et le –).
- Retirer les piles ou les accumulateurs en cas de non-utilisation prolongée.
- Enlever les piles ou les accumulateurs usagés du jouet.
- Ne les jeter ni au feu ni dans la nature.

PILES RECHARGEABLES

- Enlever, lorsque c'est possible, les accumulateurs du jouet pour les recharger.
- Les accumulateurs ne doivent être chargés que sous la surveillance d'un adulte.
- Ne pas tenter de recharger des piles non rechargeables.

PRODUCT FEATURES

1. On/Off Switch

To turn the unit **On**, slide the **On/Off Switch** to the **On** ☺ position. You will hear a soothing song, two nursery rhymes and 10 melodies. To turn the unit **Off**, slide the **On/Off Switch** to the **Off** ● position.



 
2. Timer Switch

Slide the **Timer Switch** to select the length of time the unit will play. When the time is up, the unit will automatically shut off.



3. Volume Control Buttons


Press the **▲**) Button to increase the volume or the **▼**) Button to decrease the volume. There are seven volume levels, with the default volume set to level three.

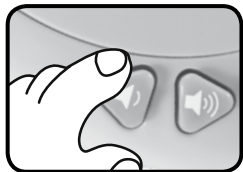

NOTE:

The default volume level is set to level three when the unit is first turned on or when the batteries are changed. Select a preferred volume level, and the unit will use this as its new default volume level (excluding level one, which is silent mode). If silent mode is selected, the unit will default to volume level two when reactivated after automatically powering down.

 4. **Light Control Button**
Press the **Light Control Button** to select one of six light effects, including a no-light setting.

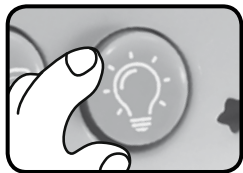

5. **Sound Sensor**
The **3-in-1 Starry Skies Sheep Soother™** is equipped with a special sound sensor. Once the selected time setting has ended, the unit will automatically shut off. The sensor will reactivate the program if it detects that your baby's cry has continued for approximately four seconds without interruption. The unit will reactivate and play lullabies. The sound sensor will be disabled after 12 hours of inactivity.
6. **Light Discs**
Three **Light Discs** are included with the sheep, each giving a different light effect. Snap the star pattern disc on to project a starry night sky. The refractor pattern projects fun party lights. Insert the plain disc cover to give a soft, glowing night-light effect.
7. **Automatic Shut Off**
To preserve battery life, the **3-in-1 Starry Skies Sheep Soother™** will automatically shut down after the selected time has ended. The unit can be turned on again by pressing any button. It will also turn on automatically when the sound sensor detects your baby's cry.

ASSEMBLY INSTRUCTIONS

With the **3-in-1 Starry Skies Sheep Soother™**, safety comes first. To ensure your child's safety, adult assembly is required.

 
1. To change the **Light Disc**, pull on the tab with one hand while removing the disc with your other hand. To attach the **Light Disc**, insert the disc tab into the slot on the electronic module, pressing it down until it snaps into place.
2. Store the light discs under the electronic module, inside the **3-in-1 Starry Skies Sheep Soother™**.
3. To remove the electronic module from the sheep, simply pull out the electronic module and seal the hook and loop closure. To insert the electronic module, open the hook and loop closure and spread and reshape material to make a large enough opening for the electronic module to fit inside.



ACTIVITIES


1. Sound Button

Press the **Sound Button** to hear a combination of soothing nature sounds or white noise. Press the **Sound Button** again to hear the next sound. The light pattern will fade in and fade out slowly with the sounds if the **Light Control Button** has not been pressed.

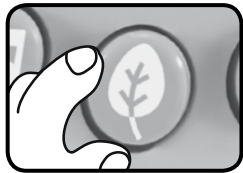

2. Nursery Rhyme Button

 Press the **Nursery Rhyme Button** to hear five nursery rhymes with fun sounds followed by soft melodies. Press the **Nursery Rhyme Button** again to hear the next rhyme or melody. The light pattern will fade in and fade out slowly with the sounds if the **Light Control Button** has not been pressed.

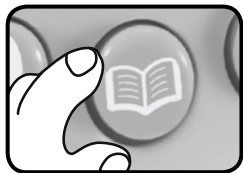

3. Lullaby Button

Press the **Lullaby Button** to hear three soothing songs followed by soft melodies. Press the **Lullaby Button** again to hear the next song or melody. The light pattern will fade in and fade out slowly with the sounds if the **Light Control Button** has not been pressed.



MELODIES

1. Mary Had a Little Lamb
2. Row, Row, Row Your Boat
3. Here We Go 'Round the Mulberry Bush
4. Hickory, Dickory, Dock
5. Roses Are Red
6. Eine kleine Nachtmusik: Allegro - Mozart
7. Minuet in G - Bach
8. Morning Mood (Peer Gynt) - Grieg
9. Prelude - Fugue No. 1 (Well Tempered Clavier) - Bach
10. Greensleeves
11. Autumn (Four Seasons) - Vivaldi
12. Winter (Four Seasons) - Vivaldi
13. Spring (Four Seasons) - Vivaldi
14. Summer (Four Seasons) - Vivaldi
15. Air - Bach
16. Berceuse - Brahms
17. Cello Suite No.1 in G - Bach
18. Happy Farmer
19. Rondo a Capriccio - Beethoven
20. Brandenburg Concerto No. 3 in G Major, BWV 1048: Allegro - Bach
21. Magic Flute - Mozart
22. Serenade - Hadyn
23. Moonlight Sonata - Beethoven
24. Nocturne Op. 9 No. 2 - Chopin
25. Spring Song - Mendelssohn
26. Kinderszenen - Schumann
27. Klipp-Klapp Galopp - Strauss
28. Sleeping Beauty Waltz - Tchaikovsky
29. Piano Sonata in C, K545 1st Movement - Mozart
30. Cradle Song - Mozart
31. Blue Danube Waltz - Strauss

32. Canon in D - Pachelbel
33. Berceuse, Op. 57 - Chopin
34. Turkish March - Mozart
35. The Nutcracker Suite -Tchaikovsky
36. Swan Lake - Tchaikovsky
37. Ode to Joy - Beethoven
38. Water Music - Handel
39. Für Elise - Beethoven
40. The Swan (Carnival of the Animals) - Saint-Saëns

SONG LYRICS

Song 1

Winkum, winkum, close your eyes,
I will sing you sweet lullabies.

Song 2

It's time to close your eyes,
Little one, little one.
It's time to say goodnight,
And have sweet dreams.

Song 3

Hush little baby, it's time to sleep,
Close your eyes, and count some sheep.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
5. The plush sheep is hand washable. Please remove the electronic module before cleaning and follow the care instructions on the tag.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

IMPORTANT NOTE:

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S. or **1-877-352-8697** in Canada, or by going to our website at **vtechkids.com** and filling out our **Contact Us** form located under the **Customer Support** link. Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions that you might have. A service representative will be happy to help you.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Supplier's Declaration of Conformity

47 CFR § 2.1077 Compliance Information

Trade Name:	VTech®
Model:	5505
Product Name:	3-in-1 Starry Skies Sheep Soother™
Responsible Party:	VTech Electronics North America, L.L.C.
Address:	1156 W. Shure Drive, Suite 200 Arlington Heights, IL 60004
Website:	vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION

**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com
vtechkids.ca

Read our complete warranty policy online at
vtechkids.com/warranty
vtechkids.ca/warranty

