



© 2009 VTech Printed in China Disney/Pixar elements ©Disney/Pixar.

Dear Parent,

At **VTech®**, we know how important the first day of school is for your child. To help prepare preschoolers for this important event, **VTech®** has developed the **Preschool Learning**™ series of interactive toys.

Preschool Learning[™] features fun characters and inviting school themes that use technology to capture a child's attention and teach important preschool skills like spelling, counting and the alphabet. These vital skills are taught in a way that's both fun and highly engaging to maintain a child's interest. Children will also be introduced to fun school subjects such as art class, music class and even recess! With **Preschool Learning**[™], learning is fun from day one!

At **VTech®**, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting **VTech®** with the important job of helping your child learn and grow!

sincerely, Julin Fitz

Julia Fitzgerald Vice President, Marketing VTech Electronics, NA

To learn more about the Preschool Learning[™] series and other VTech[®] toys, visit www.vtechkids.com

INTRODUCTION

Thank you for purchasing the VTech[®] Lightning McQueen[™] Learning Phone!

The VTech[®] Lightning McQueen[™] Learning Phone is packed with essential preschool learning. With three great activities, light-up wheel buttons, turning phone book pages and Lightning McQueen styled handset, your child will be entertained as they learn about numbers, hear friendly phrases, and meet characters from the World of Cars! The flashing LEDs, revved-up sound effects and fuel-filled melodies add to the experience, and your child will race ahead to learn!



INCLUDED IN THIS PACKAGE

- One VTech[®] Lightning McQueen[™] Learning Phone
- One user's manual
- WARNING: All packing materials, such as tape, plastic sheets, packaging locks, wire ties and tags are not part of this toy, and should be discarded for your child's safety.

NOTE: Please keep the user manual as it contains important information.

Unlock the packaging locks:



- Rotate the packaging locks 90 degrees counter-clockwise.
- 2 Pull out the packaging locks.


REMOVE DEMO TAG

The demo tag should come off automatically when the product is taken out of the packaging. If the demo tag is still in place when you begin play, please remove it from the bottom of the unit to activate normal play mode.

GETTING STARTED

BATTERY INSTALLATION

- 1. Make sure the unit is off.
- Locate the battery cover at the bottom of the unit. Use a coin or screwdriver to loosen the screw.
- Install three new "AA"(AM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
- 4. Replace the battery cover and tighten the screw to secure.

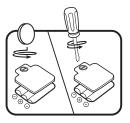

BATTERY NOTICE

- Install batteries correctly observing the polarity (+, -) signs to avoid leakage.
- Do not mix old and new batteries.
- Do not mix batteries of different types: alkaline, standard (carbonzinc) or rechargeable (nickel-cadmium).
- Remove the batteries from the equipment when the unit will not be used for an extended period of time
- · Always remove exhausted batteries from the equipment.
- Do not dispose of batteries in fire.
- Do not attempt to recharge ordinary batteries.
- The supply terminals are not to be short-circuited.
- Only batteries of the same and equivalent type as recommended are to be used.

WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES.

PRODUCT FEATURES

1. ON/OFF Button

To turn the unit on, press the **ON/OFF** button. To turn the unit off, press the **ON/OFF** button again.

2. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech[®] Lightning McQueen™ Learning Phone** will automatically shut off after approximately three minutes without input. The unit can be turned on again by pressing the **ON/OFF** button.

3. MODE SWITCH

Twist the mode switch to select an activity to play.

4. STEERING WHEEL

Turn the steering wheel to learn the directions "left" and "right," answer questions, or adjust the level of difficulty.

5. CARS PHONE BOOK PAGES

Turn the phone book pages to hear some friendly phrases and the names of Lightning McQueen's friends.

6. HANDSET

Pick up or replace the Lightning McQueen handset to hear some friendly phrases.

7. LIGHT-UP WHEEL BUTTONS

Press the light-up wheel buttons to learn numbers and character names from the World of Cars, hear friendly phrases and fun music, or answer questions in the Call My Friends and Follow Me activities.

8. REPEAT BUTTON

Press the **REPEAT** button to hear the last response or hear the questions repeated.

9. VOLUME CONTROL SWITCH

To adjust the volume, slide the volume control switch at the back of the unit to the low volume position (or the high volume position (

ACTIVITIES

1. CALL MY FRIENDS

Twist the mode switch to Call My Friends. Press the light-up wheel buttons to hear Lightning McQueen identify characters from the World of Cars. After a few seconds, Lightning McQueen will ask a question. Press the light-up wheel buttons or turn the steering wheel to answer.

2. NUMBERS

Twist the mode switch to Numbers. Press the light-up wheel buttons to hear Lightning McQueen identify the numbers. The number keys will flash to the rhythm of the music!

3. FOLLOW ME

Twist the mode switch to Follow Me. Press the light-up wheel buttons to hear Lightning McQueen identify the numbers or the characters from The World of Cars. After a few seconds, Lightning McQueen will call out some numbers or names in a row. Press the light-up wheel buttons to answer.

CARE & MAINTENANCE

- 1. Keep the unit clean by wiping it with a slightly damp cloth.
- 2. Keep the unit out of direct sunlight and away from any direct heat source.
- 3. Remove the batteries when the unit is not in use for an extended period of time.
- 4. Do not drop the unit onto a hard surface and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working, please follow these steps:

- 1. Interrupt the power supply by removing the batteries.
- 2. Let the unit stand for a few minutes, then replace the batteries.
- 3. Turn the unit on. The unit should now be ready to play again.
- If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **Preschool Learning Series** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna
- · Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Caution : Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.