

**vtech**<sup>®</sup>

# User's Manual

## Grow & Discover Tree House™



© 2013 VTech  
Printed in China  
91-002863-005 US

Dear Parent,

Ever notice the look on your baby's face when they learn something new through their own discovery? These self-accomplished moments are a parent's greatest reward. To help fulfill them, **VTech®** created the **Infant Learning®** series of toys.

These unique interactive learning toys directly respond to what children do naturally – play! Using innovative technology, these toys react to baby's interactions, making each play experience fun and unique as they learn age-appropriate concepts like first words, numbers, shapes, colors and music. More importantly, **VTech®'s Infant Learning®** toys develop baby's mental and physical abilities by inspiring, engaging and teaching.

At **VTech®**, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting **VTech®** with the important job of helping your child learn and grow!

Sincerely,

 
Your friends at **VTech®**

To learn more about the **Infant Learning®** series and other **VTech®** toys, visit [www.vtechkids.com](http://www.vtechkids.com)

# INTRODUCTION

Thank you for purchasing the **VTech® Grow & Discover Tree House™** learning toy!


Learning is so much fun in the **Grow & Discover Tree House™** by **VTech®**! Your child's senses will be running wild as they explore and discover with ball play, shape sorting, turning gears and so much more. They will develop language and motor skills as the smart sensors teach colors, numbers and daily life concepts or just play peek-a-boo. With so many fun activities, your little one will never want to come down from their tree house!

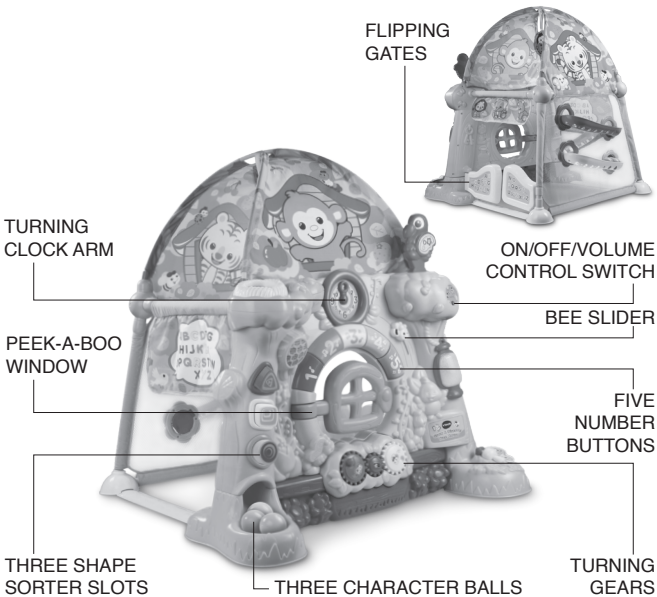

# INCLUDED IN THIS PACKAGE



 One electronic panel

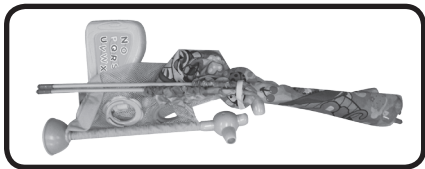

One fabric ball track panel with fabric tent cover



One spinning gears piece



One ring



One gate



 
One bird



Two front feet




Two connection sheets

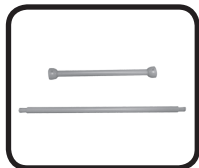

Two connection poles




 Two connection poles with curtains

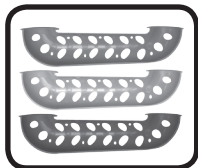

Three ball tracks



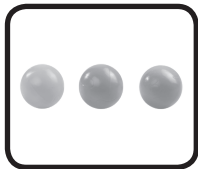 

Three character balls  
One user's manual



Three shape sorter pieces



Eleven screws

**WARNING:**

All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

**ATTENTION :**

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.

**NOTE:**

Please keep this user's manual as it contains important information.



 
**CAUTION:**

Adult assembly required. This package contains small screws. For your child's safety, do not let your child play with the toy until it is fully assembled.

# GETTING STARTED

## BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the activity panel. Use a screwdriver to loosen the screw.
3. Install 2 new “AA” (AM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure the battery cover.

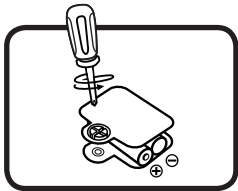


## BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.


# ASSEMBLY INSTRUCTIONS

With the VTech® Grow & Discover Tree House™, safety comes first. To ensure your child's safety, this product is only to be assembled by an adult. Adult supervision required.

 
1. **Attach the ring:** Press the ring onto the electronic panel until you hear it click into place. Use a screwdriver to fasten two of the screws into the holes on the back of the unit.

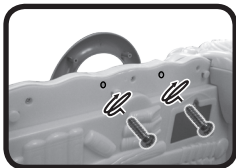

 
2. **Attach the front feet:** Insert the feet into the holes on the bottom of the activity panel. Use a screwdriver to fasten three of the screws into the holes on the bottom of both the feet.

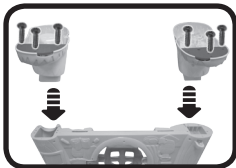

 3. **Attach the spinning gears:** Insert the piece with the spinning gears into the bottom of the electronic panel. Use a screwdriver to fasten one of the screws into the hole on the back of the unit.

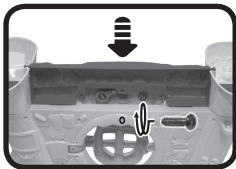

 
4. **Attach the gate:** Use a small screwdriver to press down the button on the support foot. Slide the gate into place and release the button to secure.

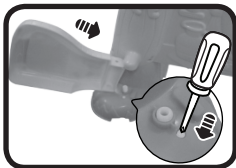

5. **Attach the long connection pole:** Slide the long connection pole through the fabric at the bottom of the mesh ball track panel. Insert the ends of the pole into the holes in each of the support feet until you hear them click into place.



 6. **Attach the fabric tent cover:** Insert the two poles from the fabric tent cover into the top of the round support posts until you hear them click into place. Insert the shorter connection pole into the sides of the round support posts. Use the screws to secure the connection pole in place.

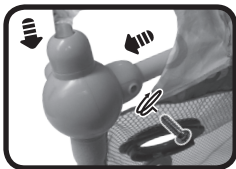

7. **Attach the ball tracks:** Insert the ball tracks to the round openings, press down until you hear the tracks click into place.



8. **Attach the connection sheets:** Please note, the connection sheets are different lengths and are marked with a letter on the bottom. Please make sure to match the letter on the bottom of the connection sheets with the corresponding letters on the bottom of the support feet. Insert the connection sheets into the slots on the bottom of the support feet until you hear them click into place.



9. **Attach the fabric tent cover to the electronic panel:** Insert the remaining two poles on the fabric tent cover into the slots on the activity panel until you hear them click into place. Next attach the fabric loops on the fabric tent cover to the hooks on the back of the activity panel.



10. **Attach the connection poles with the curtains:** Insert the ends of the connection poles into the holes in the back of the activity panel and into the round support posts until you hear them click into place.



11. **Attach the bird:** Insert the bird into the top of tree on the electronic panel. Press down on the bird until you hear it click into place.




# DISASSEMBLY INSTRUCTIONS
 
## Remove the connection poles

1. **Remove the pole from the top of the mesh ball track panel:** Use a screwdriver to loosen the screw, then remove the pole.



2. **Remove the connection poles with the fabric curtains and the fabric tent cover:** Insert a small screwdriver into the hole on the side of the round support post and push on the small button to release the fabric tent cover and the connection pole. Repeat this process with the three remaining sides.

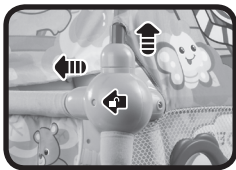
 



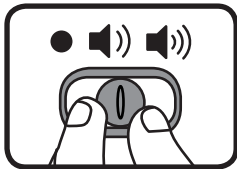 
3. **Remove the connection sheets from the support feet:** Insert a small screwdriver into the holes on the bottom of each of the support feet and push on the small button to release the connection sheets.



# PRODUCT FEATURES

## 1. ON/OFF/VOLUME CONTROL SWITCH

To turn the unit **ON**, slide the **ON/OFF/VOLUME CONTROL SWITCH** to the low volume (  ) or high volume (  ) position. To turn the unit **OFF**, slide the **ON/OFF/VOLUME CONTROL SWITCH** to the **OFF** (  ) position.

 


## 2. AUTOMATIC SHUT-OFF


To preserve battery life, the **VTech® Grow & Discover Tree House™** will automatically power-down after approximately 40 seconds without input. The unit can be turned on again by pressing any button. The light will flash with the sound and music.

# ACTIVITIES

1. Slide the **on/off/volume control switch** to turn the unit on. You will hear a song, a playful phrase and a short tune.
2. Press the **number buttons** to learn numbers and hear music notes and random melodies.

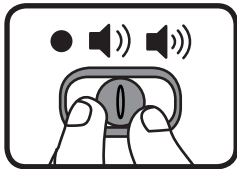

 
3. Drop the **balls** into the nest to learn colors, animal names and hear fun sounds.

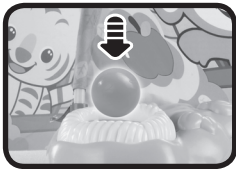


4. Turn the **clock arms** to learn time concepts, fun sounds and playful melodies.



 5. Turn the **gears** to hear silly sounds and a sung song.

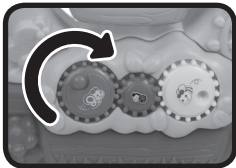

 6. Insert the **shape sorters** into the slots to hear the shape identified and a fun sound.

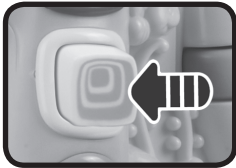

7. Open the **gate** to enjoy fun tent play with inviting phrases.





8. Open or close the **peek-a-boo window** to hear playful greetings, sing-along songs and silly sounds.



**Note:** The window is intended for peek-a-boo play and as a pass through window. To avoid injuries, do not put your head or body through the window. Adult supervision is recommended.

9. Drop the balls onto the ball track to watch them roll.



## MELODY LIST

1. BINGO
2. London Bridge
3. Here We Go 'Round the Mulberry Bush
4. Mary, Mary, Quite Contrary
5. Jack and Jill
6. Mary Had a Little Lamb
7. Old MacDonald Had a Farm
8. Pop! Goes the Weasel
9. Row, Row, Row Your Boat
10. Skip to My Lou
11. This Old Man
12. Three Blind Mice

13. Humpty Dumpty
14. I've Been Working on the Railroad
15. Alouette
16. Sing a Song of Sixpence
17. Three Little Kittens
18. Hot Cross Buns
19. Hey, Diddle Diddle
20. Old King Cole
21. Twinkle, Twinkle, Little Star
22. Lullaby
23. Rock-a-Bye, Baby
24. Oh, Dear What Can the Matter Be?
25. Frere Jacques

## **SONG LYRICS**

### **SONG 1**

Crawl inside and take a look,  
We'll learn and play in every nook.  
1-2-3-4, there's so much to explore!

### **SONG 2**

Gears spin round and round,  
Spinning to a happy sound.  
4-3-2-1, playing with you is really fun!

### **SONG 3**

ABCDEFGH,  
HIJKLMNPO,  
QRSTUUV,  
WXY and Z.

Now I know my A-B-C's,  
Next time won't you sing with me?

### **SONG 4**

Climb inside, come play with me.  
We'll learn and explore in our favorite tree!

### **SONG 5**

Open the window,  
I see you!

### **SONG 6**

Close the window,  
Where did you go?

### **SONG 7**

1, 2, 3, 4, open the door - let's explore!  
5,6,7,8 peek through the gate - this is great!  
9, 10, let's start again!

# CARE & MAINTENANCE

1. Keep the unit clean by wiping with a slightly damp cloth.
2. The plush insect and the two curtains are machine washable, please follow the care instructions on the tag.
3. Keep the unit out of direct sunlight and away from any direct heat source.
4. Remove the batteries when the unit is not in use for an extended period of time.
5. Do not drop the unit on a hard surface and do not expose the unit to moisture or water.

# TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

For information on this product's warranty, please call **VTech**® at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada.

**IMPORTANT NOTE:**

Creating and developing Infant Learning products is accompanied by a responsibility that we at **VTech**<sup>®</sup> take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada with any problems and/or suggestions that you might have. A service representative will be happy to help you.

**NOTE:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates and uses radio frequency energy and if not installed and used in accordance with the manufacturer's instructions, may cause interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference with radio or television reception, which can be determined by turning the equipment on and off, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Caution:** changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:  
(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND  
(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

*CAN ICES-3 (B)/NMB-3(B)*



CLASS 1  
LED PRODUCT