




Giggle & Grow Jungle Playmat[™]



91-003300-001 (JS)

INTRODUCTION

Thank you for purchasing the **VTech® Giggle & Grow Jungle Playmat™**. Your child can experience self-discovery with the peeka-boo mirror and develop their motor skills with the rattle ball. The detachable electronic panel has 4 animal buttons that play responses which develop language, sensory awareness, introduce animals and much more. You can even keep track of how tall your little one grows with the detachable giraffe themed growth chart.

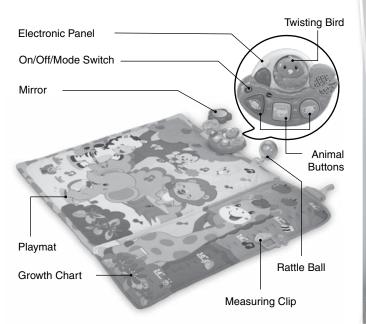

INCLUDED IN THIS PACKAGE



One Giggle & Grow • One growth chart Jungle Playmat™





One rattle ball and peek-a-boo mirror



- One electronic panel One measuring clip
- One parent's guide



- WARNING: All packing materials, such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.
- ATTENTION: Pour la sécurité de votre enfant, débarrassezvous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes et vis d'emballage. Ils ne font pas partie du jouet.
- Please keep this parent's guide as it contains NOTE important information.

Unlock the packaging locks:



- Rotate the packaging locks 90 degrees counterclockwise.
- Pull out the packaging locks.

GETTING STARTED BATTERY INSTALLATION

- 1. Make sure the unit is turned **OFF**.
- Locate the battery cover on the back of the electronic panel. Use a screwdriver to loosen the screw.
- 3. Install 2 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)



4. Replace the battery cover and tighten the screw to secure.

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbonzinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.

- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

ASSEMBLY INSTRUCTIONS

NOTE: Please remove the electronic panel from the playmat before washing.

- Attach the giraffe growth chart to the Giggle & Grow Jungle Playmat[™], using the hook and loop fabric to secure.
- 2. Attach the mirror and rattle ball to the playmat by threading the fabric loops through the play pieces.

 Attach the peek-a-boo mirror and rattle ball to the electronic panel by threading the fabric loops through the slots on the back of the electronic panel for on-thego play.






 Attach the electronic panel to the top of the Giggle & Grow Jungle Playmat[™]. You will hear the electronic panel click into place when it has been inserted correctly.



5. To use the giraffe growth chart, first, separate the growth chart from the Giggle & Grow Jungle Playmat[™]. Then, remove the electronic panel from the playmat by pushing both switches on the back of the panel. Next, attach the electronic panel to the top of the growth chart. You will hear the panel click into place when it has been inserted correctly. Thread the loop from the growth chart through the slot on the top of the electronic panel. You can now hang up the growth chart and measure your child as they grow.

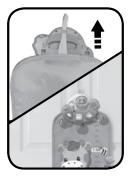

PRODUCT FEATURES

1. On/Off/Mode Switch

To turn the unit **ON**, slide the **On/Off/ Mode Switch** to Learning Mode (()) or Music Mode (), position. You will hear a phrase, song and sound. To turn the unit **OFF**, slide the **On/Off/Mode Switch** to the **OFF** (**OFF**) position.



2. Detachable Electronic Panel

Attach the Electronic Panel to the Giggle & Grow Jungle Playmat[™], to the giraffe Growth Chart or use it alone for on-the-go play.



3. Automatic Shut Off

To preserve battery life, the **Giggle & Grow Jungle Playmat**[™] will automatically power down after approximately 20 seconds without input. The unit can be turned on again by pressing any button.

NOTE: If the unit repeatedly powers down, we suggest changing the batteries.

ACTIVITIES

1. Animal Buttons

Press the **Animal Buttons** to hear music, songs and fun phrases in Music Mode and learn about colors, shapes and animals in Learning Mode. The light will flash with the sounds.



2. Twisting Bird

Twist the **Bird** to hear short tunes and melodies in Music Mode and hear short tunes and bird sounds in Learning Mode. The light will flash with the sounds.



3. Growth Chart

Measure your little one's height as they grow using the giraffe themed **Growth** Chart.

NOTE: The growth chart has been designed as a toy; measurements taken may not be fully accurate and should be used as a guide only.

SONG LIST

SONG 1

A giraffe, a giraffe. A tall and spotty giraffe. My neck is straight and very long, I love to learn and sing along.

SONG 2

So big, so grand, Elephant's dancing in the sand, Stomping in the jungle sun, Playing and having such fun.

SONG 3

Run little lion, Faster, faster! Growl little lion, Louder, louder!

SONG 4

In the jungle, in the jungle, The monkeys gather round. Singing songs and playing music, In the jungle playground.



MELODY LIST

- 1. Twinkle, Twinkle, Little Star
- 2. Farmer In The Dell
- 3. Diddle, Diddle, Dumpling
- 4. ABC Tumble Down D
- 5. Good Morning, Merry Sunshine
- 6. Jack & Jill
- 7. Baa, Baa, Black Sheep
- 8. Polly Put The Kettle On
- 9. Hey, Diddle, Diddle
- 10. Animal Fair
- 11. The Entertainer
- 12. My Bonnie Lies Over the Ocean
- 13. Old MacDonald
- 14. Alouette
- 15. Goodnight, Ladies
- 16. Cockles & Mussels
- 17. Bicycle Built For Two
- 18. The Old Gray Mare

CARE & MAINTENANCE

- 1. Keep the unit clean by wiping it with a slightly damp cloth.
- 2. Keep the unit out of direct sunlight and away from any direct heat source.
- 3. Remove the batteries when the unit will not be in use for an extended period of time.
- 4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
- 5. The playmat is hand washable. Please remove the electronic panel before washing the playmat.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

- 1. Please turn the unit OFF.
- 2. Interrupt the power supply by removing the batteries.
- 3. Let the unit stand for a few minutes, then replace the batteries.
- 4. Turn the unit ON. The unit should now be ready to play again.
- 5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our website at vtechkids.com and filling out our Contact Us form located under the Customer Support link. A service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **VTech**[®] products is accompanied by a responsibility that we at **VTech**[®] take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our website at vtechkids.com and filling out our Contact Us form located under the Customer Support link with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

CAN ICES-3 (B)/NMB-3(B)

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Adult assembly required.

Ce jouet doit être assemblé par un adulte.

PRODUCT WARRANTY



This Warranty is applicable only to the original purchaser, is non-transferable and applies only to "VTech" products or parts. This product is covered by a 3-month Warranty from the original purchase date, under normal use and service,

against defective workmanship and materials. This Warranty does not apply to (a) consumable parts, such as batteries; (b) cosmetic damage, including but not limited to scratches and dents; (c) damage caused by use with non-VTech products; (d) damage caused by accident, misuse, unreasonable use, immersion in water, neglect, abuse, battery leakage, or improper installation, improper service, or other external causes; (e) damage caused by operating the product outside the permitted or intended uses described by VTech in the owner's manual; (f) a product or part that has been modified (g) defects caused by normal wear and tear or otherwise due to the normal aging of the product; or (h) if any VTech serial number has been removed or defaced.

Prior to returning a product for any reason, please notify the VTech Consumer Services Department by going to our website at vtechkids.com, filling out our Contact Us form located under the Customer Support link or calling 1-800-521-2010.

If the service representative is unable to resolve the issue, you will be provided instructions on how to return the product and have it replaced under Warranty. Return of the product under Warranty must adhere to the following rules: If VTech believes that there may be a defect in the materials or workmanship of the product and can confirm the purchase date and location of the product, we will at our discretion replace the product with a new unit or product of comparable value. A replacement product or parts assumes the remaining Warranty of the original product or 30 days from the date of replacement, whichever provides longer coverage.

THIS WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL, WRITTEN, STATUTORY, EXPRESS OR IMPLIED. IF VTECH CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY AND TO THE REPLACEMENT SERVICE AS DETERMINED BY VTECH IN ITS SOLE DISCRETION.

To the extent permitted by law, VTech will not be responsible for direct, special, incidental or consequential damages resulting from any breach of Warranty.

This Warranty is not intended to persons or entities outside the United States of America. Any disputes resulting from this Warranty shall be subject to the final and conclusive determination of VTech.

Visit our website for more information about our products, downloads, resources and more.

vtechkids.com



TM & © 2017 VTech Holdings Limited. All rights reserved. **Printed in China.** 91-003300-001 (3)