

Instruction Manual






Scan for Assembly Video Scan For Animation

INTRODUCTION

Switch into fun with the **Switch & Go® 3-in-1 Rescue Rex!** Combine these 3 rescue vehicles into a mega rescue T-Rex. Split the T-Rex apart and send each on separate rescue missions. Let's go!

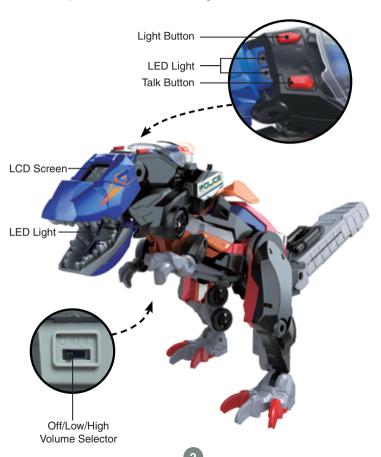

INCLUDED IN THE PACKAGE

- Switch & Go® 3-in-1 Rescue Rex
- Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please save this manual as it contains important information.

ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

NOTE

Il est conseillé de sauvegarder ce manuel car il comporte des informations importantes.

INSTRUCTIONS GETTING STARTED

The 3-in-1 Rescue Rex is in try-me mode in the packaging. To exit try-me mode, just transform the "Dino Head Mode" to "Vehicle Mode" or connect the Dino Head to the Dino Body (Rescue Helicopter).

⚠ WARNING:

Adult assembly required for battery installation. Keep batteries out of reach of children.

⚠ ATTENTION:

Les piles ou accumulateurs doivent être installés par un adulte. Tenir les piles ou accumulateurs hors de portée des enfants.

Battery Removal and Installation

- Make sure the unit is turned Off.
- Find the battery cover located on the back of the unit, use a screwdriver to loosen the screw, and then open the battery cover.
- 3. Remove old batteries by pulling up on one end of each battery.
- Install 2 new AA (AM-3/LR6) batteries
 following the diagram inside the battery box. (For best performance,
 alkaline batteries or fully charged Ni-MH rechargeable batteries are
 recommended).
- 5. Replace the battery cover and tighten the screw to secure.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.



IMPORTANT: INFORMATIONS CONCERNANT LES PILES

Les piles fournies avec le produit permettent de tester le jouet en magasin mais ne sont pas des piles longue durée.

- Mettre en place les piles ou les accumulateurs en respectant les polarités + et -.
- Ne pas mélanger des piles ou des accumulateurs neufs avec des usagés.
- Ne pas mélanger différents types de piles : alcalines, zinc-carbone et rechargeables.
- Seules des piles du type recommandé doivent être utilisées.
- Ne pas mettre les bornes d'une pile ou d'un accumulateur en court-circuit (en reliant directement le + et le -).
- Retirer les piles ou les accumulateurs en cas de non-utilisation prolongée.
- Enlever les piles ou les accumulateurs usagés du jouet.
- Ne les jeter ni au feu ni dans la nature.

PILES RECHARGEABLES:

- Enlever, lorsque c'est possible, les accumulateurs du jouet pour les recharger.
- Les accumulateurs ne doivent être chargés que sous la surveillance d'un adulte.
- · Ne pas tenter de recharger des piles non rechargeables.

PRODUCT FEATURES

1. Off/Low/High Volume Selector

To turn the unit **On** or adjust the volume, slide the switch to the Low **()** or High **()** volume position. To turn the unit **Off**, slide the switch to the **Off ()** position.



2. Talk Button



Press the **Talk Button** to hear fun phrases and cool dino sounds with light effects in T-Rex mode or to hear fun phrases and police car sounds in Vehicle mode.



3. Light Button - 🛣

Press the **Light Button** to play cool light effects and sound effects.



4. LCD Screen

The **LCD Screen** shows dino eye animations in Dino mode and shows driver animations in Vehicle mode



5. Automatic Shut-Off

To preserve battery life, the unit will automatically shut off after approximately 20 seconds without input. The unit can be turned on again by pressing the **Game Button** or **Light Button** or by switching between Dino Head mode and Vehicle mode or combine the dino head with the dino body. The unit will also automatically turn off when battery power is very low.

NOTE

If the unit powers down or if the light flashes 3 times without sounds during play, please install a new set of batteries.




TRANSFORMATION

Transforming from Dino Head Mode to Police Car Mode


1. Begin in Dino Head Mode.




Scan for Assembly Video

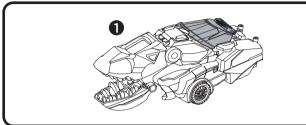


2. Flip the windshield forward.

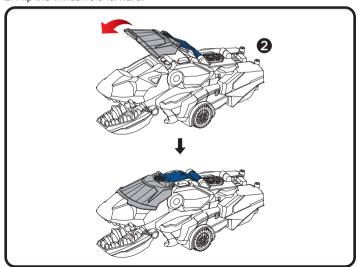


2. Flip up the Dino's mouth and flip the jaw cover backward.

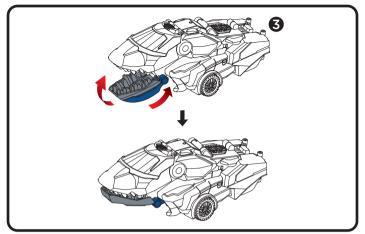


4. Swing the side panels out.

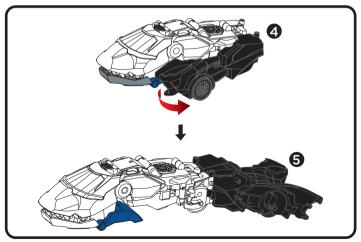


5. Fold the side panels forward.

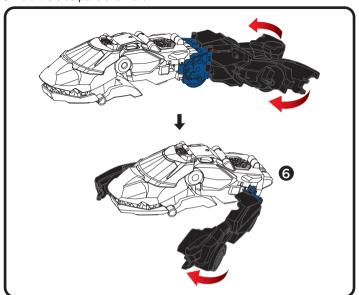



6. The Dino Head is now in Police Car Mode.

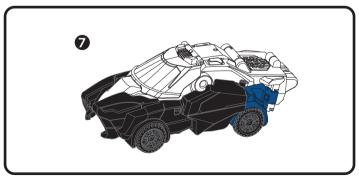


To combine the Rescue Rex, follow the below steps to switch the Police Car back to the Dino Head.

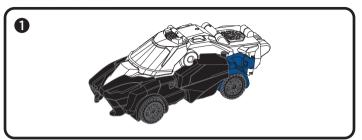

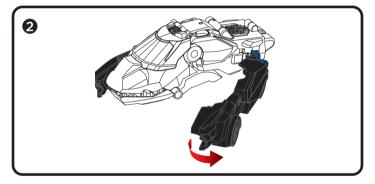


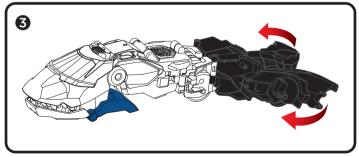

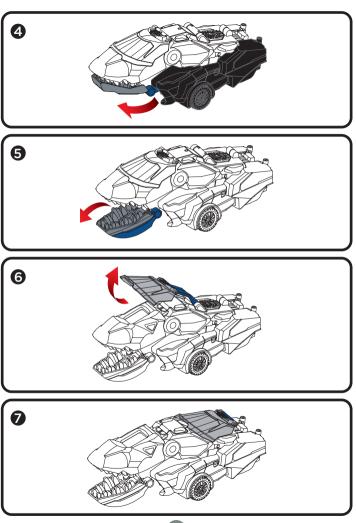


Transforming from Helicopter Mode to Dino Body Mode


1. Begin in Helicopter Mode.

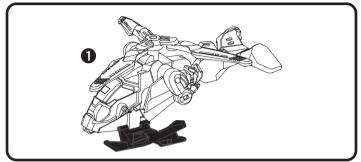


2. Flip both landing skids out.

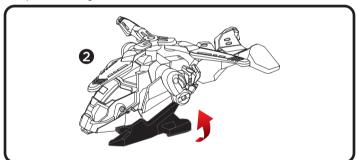


3. Rotate 2 of the propeller blades toward the center .

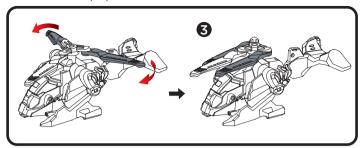

4. Flip the claws out.

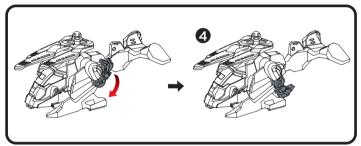


5.Rotate both arms up.

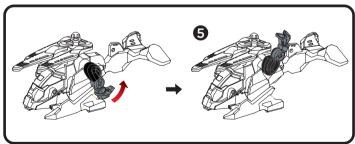


Transforming from Fire Engine Mode to Dino Legs Mode


1. Begin in Fire Engine Mode.

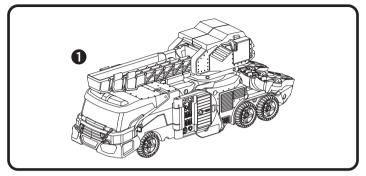


2. Flip the base cover to the front.

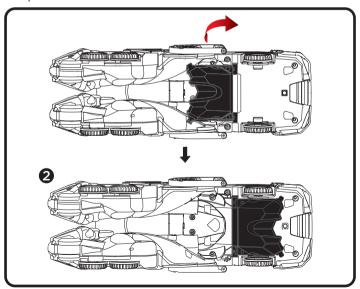


3. Swing both legs forward.

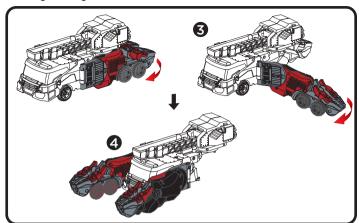


4. Flip the ladder back.

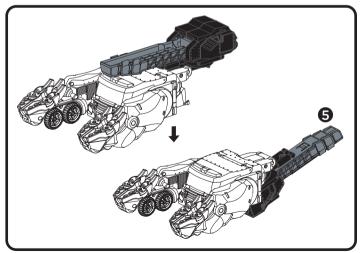


5. Flip the legs down.

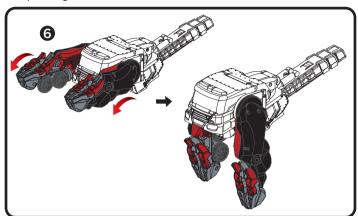


6. Flip the toes forward.

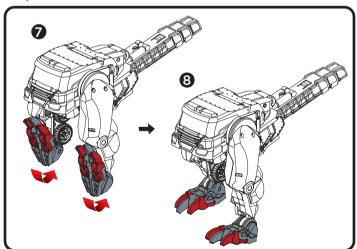


7. Spread the toes and adjust the legs and feet for stability.

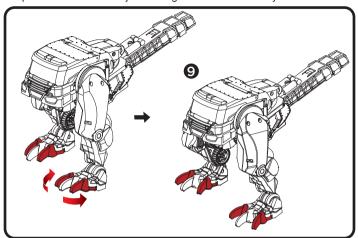

8. Flip the cab of the fire engine up and fold the engine grill backward.

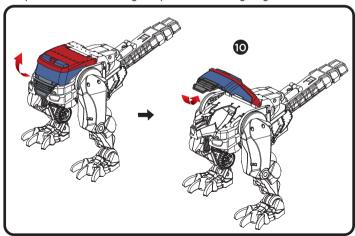

9. The Fire Engine is now in Dino Legs Mode.

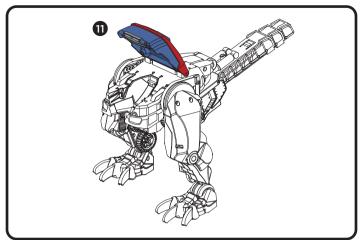

NOTE

To switch the Dino Head, Dino Body and Dino Legs back into the Police Car, Helicopter and Fire Engine, follow the above steps in reverse order.

COMBINATION


1. Combine the Dino Body with the Dino Legs.







2. Snap the Dino Head to the Dino Body.

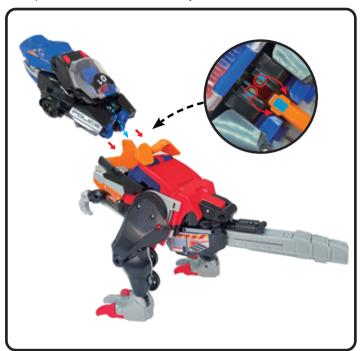

3. The combined unit is now in Rescue Rex Mode.



NOTE

CARE & MAINTENANCE

- 1. Keep the unit clean by wiping it with a slightly damp cloth.
- 2. Keep the unit out of direct sunlight and away from any direct heat sources.
- Remove the batteries if the unit will not be in use for an extended period of time.
- Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

- 1. Turn the unit Off.
- 2. Interrupt the power supply by removing the batteries.
- 3. Let the unit stand for a few minutes, then replace the batteries.
- 4. Turn the unit **On.** The unit should now be ready to use again.
- 5. If the unit still does not work, install a new set of batteries.

IMPORTANT NOTE:

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S., 1-877-352-8697 in Canada, or by going to our website vtechkids.com and filling out our Contact Us form located under the Customer Support link. Creating and developing VTech products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Supplier's Declaration of Conformity

47 CFR § 2.1077 Compliance Information

Trade Name: VTech®
Model: 5495

Product Name: Switch & Go® 3-IN-1 Rescue Rex

Responsible Party: VTech Electronics North America, L.L.C.

Address: 1156 W. Shure Drive, Suite 200

Arlington Heights, IL 60004

Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

CAN ICES-003(B)/NMB-003(B)

Visit our website for more information about our products, downloads, resources and more.

vtechkids.com vtechkids.ca

Read our complete warranty policy online at vtechkids.com/warranty vtechkids.ca/warranty

