

Instruction Manual

Purr & Play Zippy Kitty™



91-004018-000 (6) (A)

INTRODUCTION

Thank you for purchasing the Purr & Play Zippy Kitty™.

Play and learn with a lively kitten. Shake the wand in front of the kitten and see how she runs and plays. Care for this responsive cat to hear how she is feeling and learn about colors, numbers, kitten facts, music and songs.



INCLUDED IN THE PACKAGE

- Purr & Play Zippy Kitty[™]
- One Wand
- Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.

ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

NOTE

Il est conseillé de sauvegarder ce manuel d'instructions car il comporte des informations importantes.

Unlock the Packaging Locks



- Rotate the packaging locks counterclockwise several times.
- 2 Pull out the packaging locks and discard.

NOTE

Please cut and discard the plastic strap that attaches the **Purr & Play Zippy Kitty**[™] to the box. The strap is not part of this toy and should be discarded for your child's safety.

NOTE

Keep your body, hair and clothing away from the moving kitty. If something gets caught in the kitty's wheel, turn the kitty **Off** by sliding the **On/Off/Mode** Selector to the **Off** position.

 


ACTIVATE NORMAL PLAY MODE

The **Purr & Play Zippy Kitty**[™] is in a Try-Me mode in the package.

To activate normal play mode, please follow the below steps:

- Turn the unit on. Press and hold the three Number & Color Buttons together for at least three seconds.
- You will hear two short sounds to indicate that normal game play has been activated.



GETTING STARTED

Battery Removal and Installation

- 1. Make sure the unit is turned Off.
- Find the battery cover located on the bottom of the unit, use a screwdriver to loosen the screw and then open the battery cover.
- 3. Remove old batteries by pulling up on one end of each battery.
- Install 4 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
- 5. Replace the battery cover and tighten the screw to secure.



A WARNING:

Adult assembly required for battery installation. Keep batteries out of reach of children.

\triangle

ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte. Tenir les piles ou accumulateurs hors de portée des enfants.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.

- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES

- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

IMPORTANT : INFORMATIONS CONCERNANT LES PILES

- Mettre en place les piles ou les accumulateurs en respectant les polarités + et –.
- Ne pas mélanger des piles ou des accumulateurs neufs avec des usagés.
- Ne pas mélanger différents types de piles : alcalines, zinccarbone et rechargeables.
- Seules des piles du type recommandé doivent être utilisées.
- Ne pas mettre les bornes d'une pile ou d'un accumulateur en court-circuit (en reliant directement le + et le –).
- Retirer les piles ou les accumulateurs en cas de non-utilisation prolongée.
- Enlever les piles ou les accumulateurs usagés du jouet.
- Ne les jeter ni au feu ni dans la nature.

PILES RECHARGEABLES

- Enlever, lorsque c'est possible, les accumulateurs du jouet pour les recharger.
- Les accumulateurs ne doivent être chargés que sous la surveillance d'un adulte.
- Ne pas tenter de recharger des piles non rechargeables.

PRODUCT FEATURES

 On/Off/Mode Selector To turn the unit On, slide the On/Off/Mode Selector to Learning mode * or Music Mode J. You will hear a song, playful phrases and sounds. To turn the unit Off, slide the On/Off/Mode Selector to the Off position.



2. Number and Color Buttons

Press the three **Number and Color Buttons** to learn numbers, colors and kitten facts, as well as hear fun songs and melodies.

3. Wand With Toy Fish

Wave the wand in front of the kitty to see her move towards the fish and stand up. There is a sensor in the kitty's neck that can detect movement. Be sure to wave the wand in front of her face and neck.

4. Automatic Shut-Off

To preserve battery life, the **Purr & Play Zippy Kitty**[™] will automatically shut off after 60 seconds without input. The unit can be turned on again by sliding the **On/Off/Mode Selector**. The unit will also automatically turn off when the batteries are very low.

NOTE

If the unit powers down or the light fades out during playing, please install a new set of batteries.

ACTIVITIES

1. Learning Mode

Press the three **Number and Color Buttons** to learn about numbers, colors and facts about the kitten. Wave the **Wand** in front of the kitten to hear fun phrases and kitten sounds and to see her play with the fish.



2. Music Mode

Press the three **Number and Color Buttons** to hear fun songs and melodies. When a song or melody is playing, wave the **Wand** in front of the kitten to hear kitten sounds and fun cartoon sounds with the songs and melodies.



MELODIES

- 1. Bingo
- 2. Alphabet Song
- 3. Are you Sleeping?

SONG LYRICS

Song 1

Oh, I'm a jolly good kitty, I'm a jolly good kitty, I'm a jolly good kitty, Unless I get so mad. Sometimes I get so mad, It makes me want to hiss, To make me feel better, Scratch my ears, gimme a kiss.

Song 2

Won't you come and play with me? Tell me what colors you see. Can you find something purple...just like me? Orange, yellow and green, Red and blue are pretty neat, But purple is my favourite, Because I'm purple!

Song 3

I'm a cat, I'm a cat, I love to play, And purr and nap. I'm a cat. Love to play keep away, With the dangling wand. I love to play, And purr and nap, I'm a cat.

CARE & MAINTENANCE

- 1. Keep the unit clean by wiping it with a slightly damp cloth.
- 2. Keep the unit out of direct sunlight and away from any direct heat sources.
- 3. Remove the batteries if the unit will not be in use for an extended period of time.
- 4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

- 1. Turn the unit Off.
- 2. Interrupt the power supply by removing the batteries.
- 3. Let the unit stand for a few minutes, then replace the batteries.
- 4. Turn the unit **On**. The unit should now be ready to use again.
- 5. If the unit still does not work, install a new set of batteries.

IMPORTANT NOTE:

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S. or **1-877-352-8697** in Canada, or by going to our website at **vtechkids.com** and filling out our **Contact Us** form located under the **Customer Support** link. Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions that you might have. A service representative will be happy to help you.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Supplier's Declaration of Conformity

47 CFR § 2.1077 Compliance Information

Trade Name:	VTech [®]
Model:	5392
Product Name:	Purr & Play Zippy Kitty™
Responsible Party:	VTech Electronics North America, LLC
Address:	1156 W. Shure Drive, Suite 200
	Arlington Heights, IL 60004
Website:	vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

Visit our website for more information about our products, downloads, resources and more.

vtechkids.com vtechkids.ca

Read our complete warranty policy online at vtechkids.com/warranty vtechkids.ca/warranty



TM & © 2021 VTech Holdings Limited. All rights reserved. **Printed in China.** 91-004018-000(@@