

Parent's Guide


Light & Spin Tug-a-Bug™



91-003460-000 🕓

INTRODUCTION

Thank you for purchasing the **VTech[®] Light & Spin Tug-a-Bug**[™]. This cute, interactive snail entertains your child by playing fun songs, phrases, music and showing a colorful light effect by tugging on the ring.

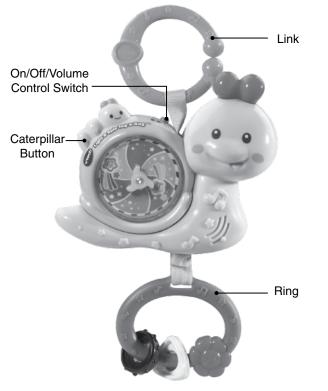

INCLUDED IN THIS PACKAGE

- One Light & Spin Tug-a-Bug™
- One parent's guide
- WARNING: All packing materials, such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.
- ATTENTION : Pour la sécurité de votre enfant, débarrassezvous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes et vis d'emballage. Ils ne font pas partie du jouet.
- NOTE: Please keep this parent's guide as it contains important information.

Unlock the packaging locks:



 Turn the packaging lock counter-clockwise several times.

2 Pull out and discard the packaging lock.

GETTING STARTED BATTERY INSTALLATION

- 1. Make sure the unit is turned OFF.
- Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw.
- Install 1 new AAA (AM-4/LR03) battery following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)



4. Replace the battery cover and tighten the screw to secure.

 
BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbonzinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

PRODUCT FEATURES

1. On/Off/Volume Control Switch

To turn the unit ON, slide the On/Off/ Volume Control Switch to the Low Volume ($(\blacksquare$))) or High Volume ($(\blacksquare$))) position. You will hear a song, a phrase and a fun sound. To turn the unit OFF, slide the On/Off/Volume Control Switch to the OFF (\bullet) position.



2. Link

The Link can be used to attach the Light & Spin Tug-a-Bug™ to strollers, car carriers and more. To prevent strangulation, please do not use additional links to form a loop or long chain. Do not attach links across a playpen or crib.

3. Automatic Shut Off

To preserve battery life, the **Light & Spin Tug-a-Bug**[™] will automatically power down after approximately 40 seconds without input. The unit can be turned on again by pressing any button or tugging on the ring.

NOTE: If the unit powers down while playing, we suggest changing the batteries.

ACTIVITIES

1. Caterpillar Button

Press the **Caterpillar Button** to hear a fun song, playful phrases, music and sounds. When a melody is playing, tug on the ring to hear fun sounds play over the music and see a fun light effect in the spinning shell.

2. Ring

Tug on the **Ring** to hear fun songs, music and playful phrases.





SONG LIST

SONG 1

Spinning and spinning, My shell keeps on spinning, So many colors to see. Pull down on my ring, and I'll spin, spin, spin, And together we'll sing happily!

SONG 2

I'm a happy caterpillar, Crawl, crawl, munch, munch, What's for lunch.

SONG 3

I have two eyes and one big shell, It's colorful and lights up! It spins round and round.

MELODY LIST

- 1. Alexander's Ragtime Band
- 2. Glow Worm
- 3. Daring Young Man on the Flying Trapeze
- 4. Skip To My Lou
- 5. The Old Grey Mare
- 6. Oh When the Saints Go Marching In
- 7. One Man Went to Mow a Meadow
- 8. This Old Man
- 9. Yankee Doodle
- 10. Turkey in the Straw
- 11. Toyland
- 12. Animal Fair
- 13. Ring Around the Rosy
- 14. Entry of the Gladiators
- 15. Polly Wolly Doodle

CARE & MAINTENANCE

- 1. Keep the unit clean by wiping it with a slightly damp cloth.
- 2. Keep the unit out of direct sunlight and away from any direct heat source.
- 3. Remove the batteries when the unit will not be in use for an extended period of time.
- 4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

- 1. Please turn the unit OFF.
- 2. Interrupt the power supply by removing the batteries.
- 3. Let the unit sit for a few minutes, then replace the batteries.
- 4. Turn the unit **ON**. The unit should now be ready to play again.
- 5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our website at vtechkids.com and filling out our Contact Us form located under the Customer Support link. A service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our website at vtechkids.com and filling out our Contact Us form located under the Customer Support link with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

CAN ICES-3 (B)/NMB-3(B)

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

PRODUCT WARRANTY



This Warranty is applicable only to the original purchaser, is non-transferable and applies only to "VTech" products or parts. This product is covered by a 3-month Warranty from the original purchase date, under normal use and service,

against defective workmanship and materials. This Warranty does not apply to (a) consumable parts, such as batteries; (b) cosmetic damage, including but not limited to scratches and dents; (c) damage caused by use with non-VTech products; (d) damage caused by accident, misuse, unreasonable use, immersion in water, neglect, abuse, battery leakage, or improper installation, improper service, or other external causes; (e) damage caused by operating the product outside the permitted or intended uses described by VTech in the owner's manual; (f) a product or part that has been modified (g) defects caused by normal wear and tear or otherwise due to the normal aging of the product; or (h) if any VTech serial number has been removed or defaced.

Prior to returning a product for any reason, please notify the VTech Consumer Services Department by going to our website at vtechkids.com, filling out our Contact Us form located under the Customer Support link or calling 1-800-521-2010.

If the service representative is unable to resolve the issue, you will be provided instructions on how to return the product and have it replaced under Warranty. Return of the product under Warranty must adhere to the following rules: If VTech believes that there may be a defect in the materials or workmanship of the product and can confirm the purchase date and location of the product, we will at our discretion replace the product with a new unit or product of comparable value. A replacement product or parts assumes the remaining Warranty of the original product or 30 days from the date of replacement, whichever provides longer coverage.

THIS WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL, WRITTEN, STATUTORY, EXPRESS OR IMPLIED. IF VTECH CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY AND TO THE REPLACEMENT SERVICE AS DETERMINED BY VTECH IN ITS SOLE DISCRETION.

To the extent permitted by law, VTech will not be responsible for direct, special, incidental or consequential damages resulting from any breach of Warranty.

This Warranty is not intended to persons or entities outside the United States of America. Any disputes resulting from this Warranty shall be subject to the final and conclusive determination of VTech.

Visit our website for more information about our products, downloads, resources and more.

vtechkids.com



TM & © 2017 VTech Holdings Limited. All rights reserved. **Printed in China.** 91-003460-000 @