

vtech®

Instruction Manual

 
Kidi Secrets Selfie Journal™



91-003512-014 (US)

INTRODUCTION

Thank you for purchasing the **Kidi Secrets Selfie Journal™**. Protect your thoughts and dreams without the worry of prying eyes with this interactive journal that unlocks only when it recognizes your face. Make a photo journal, write diary entries or record messages and keep them safe. You can also take selfies, photos and videos, listen to songs, play games, care for a pet, edit photos and videos, and more. Connect to a PC or use a microSD card to transfer files such as songs or photos.

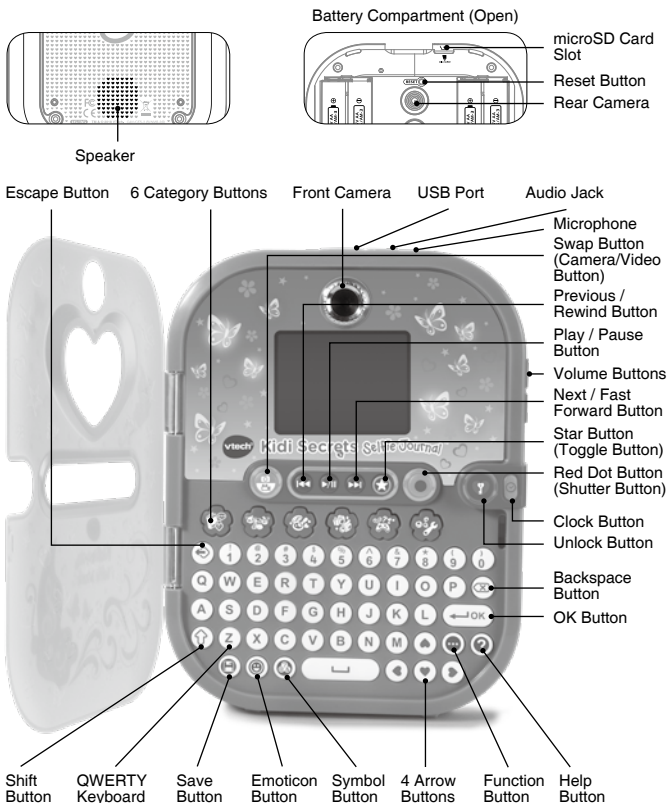

PRODUCT SPECIFICATIONS

Display	2.4" TFT color LCD
Photo Resolution	320 x 240
Video Resolution	320 x 240 pixel
Video Length Limit per File	30 minutes when using a microSD card. The video length limit is 1.5 minutes per file when using Video Editor.
Focus Range	1.5 feet - ∞
Internal Memory	128MB built-in memory (Shared with program data; actual memory available for user storage will be less)
File Format	Photos: Standard Baseline JPEG Videos: AVI (Motion JPEG) Songs and Voice Memos: MP3
Memory Card Format and Capacity	microSD / microSDHC card (not included) with capacity from 1GB-32GB are recommended
Connectivity	USB 2.0 cable (not included) for computer connection
Batteries	4 AA (AM-3/LR6) alkaline batteries
Operating Temperature	32-104°F (0-40°C)

STORAGE CAPACITY FOR REFERENCE

Memory size	Photos in 320 x 240	Video in 320 x 240 (minutes)	MP3 in 128kbps (minutes)
Internal Memory	1,200	3	60
Memory card	2 GB	31,250	62.5
	4 GB	62,500	125
	8 GB	125,000	250
	16 GB	250,000	500
	32 GB	500,000	1,000

NOTE: The photo and video quantities shown above are an estimate based on average file size. Actual quantities may vary.

The video length limit is 1.5 minutes per file when using Video Editor.

INCLUDED IN THIS PACKAGE



- One VTech® Kidi Secrets Selfie Journal™
- One parent's guide
- One quick start guide

WARNING: All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE: Please save this Instruction Manual as it contains important information.

 
ATTENTION : Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

NOTE : Il est conseillé de sauvegarder ce manuel d'utilisation car il comporte des informations importantes.

This toy is only to be connected to equipment bearing either of the following symbols:  or 

Unlock the packaging locks:

- ① Turn the packaging lock counterclockwise several times.
- ② Pull out and discard the packaging lock.

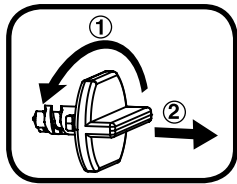


INSTRUCTIONS


Battery Removal and Installation

The Kidi Secrets Selfie Journal™ uses 4 AA (AM-3/LR6) size batteries.

 1. Make sure the unit is turned Off.
2. Find the battery cover located on the back of the unit, use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.

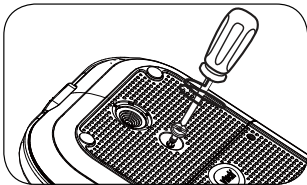

 4. Install 4 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

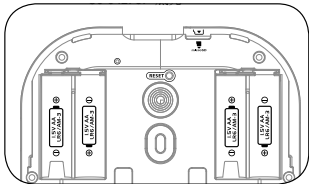

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.



ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.
Tenir les piles ou accumulateurs hors de portée des enfants.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.


LEAVING TRY ME MODE



For security reasons, when you first use the diary, it is set to a sample **Try Me** mode. You will need to activate normal play mode to be able to save photos and diary entries.

- 1) Open the battery cover. Then, find the **Reset Button** located next to the word RESET.
- 2) Press the **Unlock Button** to turn on the diary.
- 3) Press the **Reset Button** after the VTech logo screen.
- 4) The screen will display the message, "Normal Mode." The cover will then open and you can begin using the diary.
- 5) Once the cover is closed and the **Unlock Button** has been pressed, you will be asked to setup the facial recognition function.

Top 5 Actions on the Kidi Secrets Selfie Journal™


1) Creating a Diary Entry

Step 1: With the diary open, press the **Diary Button** 

Step 2: Use the **Arrow Buttons**  to navigate to the correct date for your entry and press the **OK Button** .





Step 3: Use the **Arrow Buttons** and the **OK Button** to select a Mood, Weather, and Special Icon.

Step 4: Type your diary entry. Use the **Function Button**  to add voice memos or photos or to change the diary's background.

Step 5: Press the **Save Button**  to save your diary entry.

2) Take Photos and Videos

Step 1: Press the **Swap Button**  to switch into camera mode. Press the button again to switch to video, if necessary.



Step 2: Use the **Star Button**  to change between front and rear cameras and among shooting options.




Step 3: Press the **Red Dot Button**  to take a photo or video.

3) Play Music


Step 1: Press any of the music controls  to bring up the **Music Player**.

Step 2: Use the **Arrow Buttons**  and the **OK Button**  to select a song.

Step 3: Use the **Star Button**  to change play options (shuffle, repeat, replay playlist, default).



4) Play a Game with Your Pet

Step 1: Press the **My Pet Friend Button**  to switch into **Pet Mode**. If you have already selected a pet, that pet will appear. If you have not selected a pet, choose among the pet options and give your pet a name.



Step 2: Show the pet your face using the camera so it knows you're playing.

Step 3: Press the **Function Button** to bring up options to play with your pet.

Step 4: Select the **Pet Care** option, then select the Game Time option to bring up this pet's game.

Step 5: If you want to play a different pet's game, you will need to select the **Pet Reset** option and choose the other pet as your pet.


5) Edit Photos and Videos

Step 1: Press the **Photo Fun Button**  to switch modes.

Step 2: For photos, you may edit an existing photo or take a new photo to edit. Select **Photo Editor** and follow the instructions.

 


Step 3: For videos, you may only add filters to new videos. Select **Video Editor** and select an effect to add to a video.

Step 4: Once you have selected an effect, press the **Red Dot Button**  to begin recording.

MEMORY CARD INSTALLATION

- The diary is compatible with microSD/microSDHC memory cards up to 32 GB.
- Make sure the diary is turned **OFF**.
- Locate the memory card slot inside the battery compartment.
- Insert the memory card (not included).
- Once the memory card is detected, it will be used as the default memory source of the diary.
- Push the card once to eject.

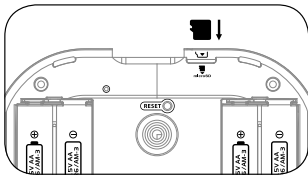

PRODUCT LAYOUT AND BUTTONS

1. Unlock Button



 
Press this button to unlock the diary using the **Face Unlock** function. Look into the screen and follow the instructions. Keep about 12 inches between your face and the camera to ensure your face is fully shown in the circle. You can now set up **Face Unlock** and use facial recognition to unlock the diary. You can turn the **Face Unlock** function off by entering **My Tools** and selecting the **Face Unlock** option and setting this to **OFF**.

With the **Face Unlock** function turned **ON**, you will need to show your face to unlock the diary. With it turned **OFF** and **Numeric Password** turned **ON**, pressing the **Unlock Button** will open the cover so you can enter your **Numeric Password** to access the diary. With **Face Unlock** and **Numeric Password** turned **OFF**, pressing the **Unlock Button** will open the cover and turn on the diary without any security code or recognition.

Note: To turn the diary off, close the cover or press the **Unlock Button** during the password entry or facial recognition process.

2. Reset Button

For security reasons, when you first use the diary, it is set to a sample **Try Me** mode. You will need to activate normal play mode to activate full functionality. Press the **Unlock Button** and then press the **Reset Button** (located in the battery compartment) until the screen reads, "Normal

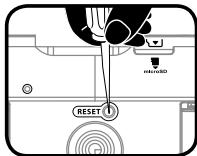

Mode." You can also press this button to reset both the facial recognition and numeric password. First, press the **Unlock Button** and then press the **Reset Button**. The message, "Face unlock and number password cleared," will be displayed on the screen. The diary will then turn on. The next time you turn the diary on, you will be asked to set the facial recognition and numeric password again.

NOTE: A small tool, such as a paperclip, may be required to press the **Reset Button**.

3. Red Dot Button (Shutter Button)

Press to enter **Camera Mode**. Press it again to take a photo or a video. You can view photos and videos you have taken in the **Gallery**.

4. Swap Button (Camera/Video Button)

Press to swap between **Photo** and **Video** Mode.

5. 3 Music Buttons

Press any of these buttons to enter **Music Mode**.









Play Button: Press to play or pause the selected song.

Next / Fast Forward Button: Press to advance to the next song. Hold this button to fast forward the song.





Previous / Rewind Button: Press to go back to the previous song. Hold this button to rewind the song.

6. Star Button (Toggle Button)

Press to select different functions in **Camera**, **Video** and **Music Modes**. Once a function is chosen, release the **Star Button** and wait for 1 second. The diary will then enter the selected function.

Mode	Function
Camera	<ul style="list-style-type: none"> Rear-facing camera  Front-facing camera  5-second countdown with rear-facing camera  5-second countdown with front-facing camera  Take 5 photos continuously with rear-facing camera  Take 5 photos continuously with front-facing camera 
Video	<ul style="list-style-type: none"> Rear-facing camera  Front-facing camera 

Music Player

- **Shuffle:** Play the songs in the playlist randomly 
- **Replay:** Play the entire playlist again 
- **Repeat:** Repeat the song 
- **Default Mode:** Play songs from the selected song to the end of the playlist 

7. Clock Button

Press to display the current date, time and day of the week. It will be displayed for several seconds before turning off.

8. Category Buttons

Press one of the six **Category Buttons** to choose how you want to play:

My Diary, My Pet Friend, My Stylist, Photo Fun, My Games, My Tools.

My Diary



Photo Fun



My Pet Friend



My Games



My Stylist

 


My Tools



9. QWERTY Keyboard

Use the keyboard to enter text into your diary entries and in **My Address Book**. Also use it to type in games.

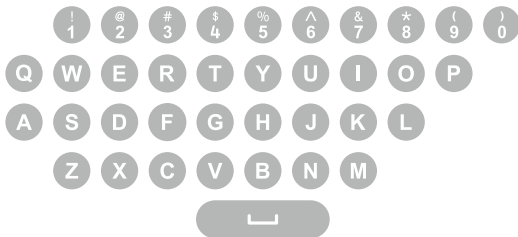

10. Arrow Buttons

Press to make selections on the screen or to move in related activities.



11. OK Button

Press to confirm your selection.

12. Backspace Button

Press to delete what you've typed.

13. Shift Button

Works with letter or number keys to input a capital letter or a symbol. As with a standard keyboard, you will need to hold shift down to type capital letters.

14. Escape Button

Press to go back to the previous screen.

15. Function Button

Displays a pop up bar with activity-specific functions (when available).

16. Help Button

Repeats the current question or instruction or gets help.

17. Emoticon Button

Adds icons in your diary entries and in **My Address Book**.

18. Symbol Button

Inserts symbols in your diary entries and in **My Address Book**.

19. Save Button

Saves your diary entry, photo, video and other information you've created.

20. USB Port

Plug a USB cable (not included) into the USB port to connect the diary to a computer for file transfers.

21. Memory Card Slot microSD

Insert a microSD card (not included) here for memory expansion.

22. Supporting Stand

The product has a supporting stand at the bottom to allow it to be positioned upright.

23. Audio Jack

Insert headphones (not included) here to listen to songs and more.

24. Microphone

Speak into the microphone when recording a voice memo or playing a voice controlled game.

25. Volume Buttons

Adjusts the volume.


26. Automatic Shut Off

To preserve battery life, the **Kidi Secrets Selfie Journal™** will automatically switch to **Clock Mode** after several minutes without input or when the battery power is low. The diary can be unlocked again by pressing the **Unlock Button**.

When the battery power is very low, a warning will be displayed on the screen as a reminder to change your batteries.

CONNECTING TO A COMPUTER

You can connect the **Kidi Secrets Selfie Journal™** to a PC or Mac computer using a USB cable (not included). Once connected, you can transfer files between the diary and computer. Please follow the below steps to make the connection.

- Turn the diary **OFF** before connecting to a computer.
- Pull up the rubber cover of the USB port at the top of the diary.
- Insert the USB cable (small end) into the USB port of the diary.
- Insert the larger end of the USB cable into a USB port on your computer. A USB port is usually marked with this symbol: 
- Two removable drives called "**VTech 1636**" and "**VT SYSTEM**" will appear. "**VTech 1636**" is for storage of your data. "**VT SYSTEM**" is for storage of system data and cannot be accessed.

Note: If there is a memory card in the **Kidi Secrets Selfie Journal™**, the removable drive will show the content in the memory card only.

To avoid any potential damage to your Kidi Secrets Selfie Journal™

- When a USB cable is not connected to the diary, please ensure that the USB rubber cover fully covers the USB port of the diary.



NOTE:

Once the diary is connected to your computer, do not insert or remove a memory card and do not disconnect the diary while files are transferring. After you have finished, remove the diary by following the steps to safely remove hardware from your computer. You can then physically disconnect the diary from the computer.

To back up photo or video files taken by the diary:

- Locate and open the DCIM folder in the removable drive **VTech 1636**.
- Your photo and video files will be placed in subfolders inside the **100VTECH** folder. Copy and paste your photo and video files onto a location on your computer for back up.

To back up song MP3 files:

- Locate and open the **MUSIC** folder in the removable drive **VTech 1636**.
- Copy and paste the files to a location on your computer for back up.

To back up voice files recorded by the diary:

- Locate and open the **VOICE** folder in the removable drive **VTech 1636**.
- Copy and paste the files to a location on your computer for back up.

To transfer photo or video files to the diary:

- Select the photo or video files you would like to transfer from your computer first.
- Locate and open the **DOWNLOAD** folder in the removable drive **VTech 1636**, then copy and paste the photo files into the **PHOTO** subfolder, or **VIDEO** subfolder for video files.

To transfer song MP3 files to the diary:

- Select the MP3 song files you would like to transfer from your computer first.
- Copy and paste the song files into the **MUSIC** folder.

SYSTEM REQUIREMENTS FOR COMPUTER CONNECTION:

Microsoft® Windows® 7, Windows® 8 or Windows® 10.

macOS version 10.7, 10.8, 10.9, 10.10, 10.11, 10.12 or 10.13.

Microsoft® and Windows logos are trademarks of Microsoft Corporation in the United States and other countries. Macintosh and Mac logos are trademarks of Apple Inc. in the United States and other countries. All other trademarks are the property of their respective owners.

TO BEGIN PLAY

Activating Normal Play Mode:

When you first use the diary, you will need to activate **Normal Play Mode**.

- 1) Open the battery cover. Then, find the **Reset Button** located next to the word RESET.
- 2) Press the **Unlock Button** to turn on the diary.
- 3) Press the **Reset Button** after the VTech logo screen.
- 4) The screen will display the message, "Normal Mode." The cover will then open and you can begin using the diary.
- 5) Once the cover is closed and the **Unlock Button** has been pressed, you will be asked to setup the **Face Unlock** function.


Configuring the Facial Recognition


Press the **Unlock Button**, then you will hear, "Follow the instructions so the diary can learn who you are." Next, follow the instructions below and ensure your face is within the circle.


- The surrounding hearts will change to red one by one as your face is being detected.
- If no face is detected, the hearts will stop filling. Adjust your face angle or position to get the hearts filling again.
- Follow the face icons and mimic the different expressions:

Relaxing Face: 

Smiling Face: 

Laughing Face: 

Angry Face: 

Silly Face: 



Noted: Please ensure your face is in the circle and facing the camera directly when setting **Face Unlock**.

Setting Your Numeric Password

If you successfully set **Face Unlock**, the cover will open and you will be asked to enter a 4-digit numeric password.

You will then be asked to repeat the numeric password.

If the numeric password is successfully set, you can begin using the diary. To change the 4-digit password, go to **My Tools**.

IF FACE UNLOCK IS ALREADY SET

You will hear a voice saying, "Place your face in the circle." Please keep your face in the circle until the process is finished.

If the diary recognizes your face, you will hear "Hey, you! I can't wait to hear about your day!" and the cover will open.

If the diary doesn't recognize you or a face isn't detected, you will hear, "Your face hasn't been detected," and the cover will open for you to enter your numeric password. If the numeric password is correct, you can begin using the diary.

If the numeric password is incorrect, you will hear "Sorry, this isn't your diary," and the diary will turn off.

Important Note for Face Unlock

1. Please ensure you are fully facing the diary and that your face is in the circle when setting and unlocking.



2. Avoid covering your eyebrows.



3. Try to hold the diary vertically.



4. If you're wearing glasses when setting **Face Unlock**, please always wear the same glasses when trying to unlock the diary. If the unlock process isn't working very well, please try setting **Face Unlock** with your glasses removed.



5. Please setup the **Face Unlock** function in good ambient lighting. Avoid setting **Face Unlock** in front of a direct light source or in low light conditions.



Reset the Password

When the diary is turned on, you can press the **Reset Button** which is located inside the battery compartment. The screen will show, "Facial recognition and password cleared." Both the facial recognition and the numeric password will be cleared and the cover will then open.

You'll be asked to go through the **Face Unlock** and **Numeric Password** setup process again the next time you turn the diary on.

Date and Time Settings

When you first use the diary or change the batteries, you will need to set the date and time. You can also change the clock background here. Press the **Save Button** or choose **OK** to confirm the setting.

ACTIVITIES:

CAMERA

Press the **Red Dot Button** to enter Camera Mode. In this mode you can take photos and videos. Press the **Swap Button** to change between photo and video mode.

In Photo mode: press the **Star Button** to change the function. Press the **Red Dot Button** to take a photo.

In Video mode: Press the **Star Button** to change the function. Press the **Red Dot Button** to start or stop recording a video.

If the diary's memory is full, you can insert a microSD card to expand the diary's memory capacity.

You can view photos and videos you have taken in the Gallery.

MUSIC PLAYER

Press the **Play/Pause Button** to enter **Music Mode** and select a song to listen to. Press the **Star Button** to change function. Press and hold the **Next/Fast Forward Button** or **Previous/Rewind Button** to quickly go to a different section of the song.

If there is a microSD card inserted into the diary, you can select songs to listen to from both the internal memory and the microSD card memory.

You can transfer new songs from a computer and save them onto the diary. You can also backup your songs by copying them to a computer.

If the diary's memory is full, you can insert a microSD card to expand the diary's memory capacity.

My Diary

Select a date, then write your diary entry using text and special icons. You can also add a special photo and voice memo to your diary entry. After the diary entry has been saved, you may review, edit and search for it anytime you would like.



Create a New Diary Entry

1. Select the Date

Use the **Arrow Buttons** to select the day and month of your diary entry, then press **OK** to confirm.



2. Enter Information

Select the weather, your mood and add a special icon.

3. Enter Content

Write your secret diary entry using the letters and numbers on the keyboard. Press the **Emoticon Button** to add icons. Press the **Symbol Button** to add symbols. Press the **Function Button** to add a photo, record a voice memo, change the background or delete the whole diary. Press the **Save Button** to save the diary entry.

Review a Diary Entry

The current month will be shown as a calendar. Use the **Arrow Buttons** to select a date with an icon and press the **OK Button** to confirm. You can then see the contents of the diary entry. Press the **Up** or **Down Arrow Buttons** to look at the content and see the attached photo. Press the **Function Button** to search your diary entries by selecting the date. You can also press the **Function Button** to edit or delete the diary entry.

You can transfer voice memos or backup your voice memos by copying them to a computer.



My Pet Friend

Here you can look after your very own virtual pet! You can choose between 3 different pets: a cat, a dog or a horse.



1. Showing Your Pet Your Face

Once you have selected a pet, you can show it your face. A window will appear on screen for you to position your face in. Then, your pet will give you a happy reaction once it recognizes you. If it doesn't recognize you, it will give an unhappy reaction.

2. Giving Your Pet a Name

Now you can give your pet a name.

3. Press the Function Button for Multiple Play Options

Pet Profile

Here you can check your pet's name and status: Satisfaction Level, Happiness Level and Beauty Level. You can also change the name of your pet.

Press the **Escape Button** to go back to the main pet screen.



Satisfaction Level – See if your pet is hungry.

Happiness Level – See if your pet is happy.

Beauty Level – See if your pet needs a bath.

Pet Care

Here are the actions you can choose to look after your pet.



Feed your pet when it is hungry.



Play a **Mini Game** with your pet.



Give your pet a shower when they need one.



Give your pet medicine when they are sick.

Dog's Mini Game:

The dog is on its way home. There are bones scattered on the path. Use the **Arrow Buttons** to help the dog find the best path to collect all of the bones, so it can get home safely.

Cat's Mini Game:

Some objects are falling down. Help the cat collect them. Press the **Left** or **Right Arrow Buttons** to move the cat and press **OK** to collect the objects.

Horse's Mini Game:

Help the horse run in a race! Press **OK** to make the horse jump over the fences.

Location Change

Here you can change the location of your pet.

Pet Chest

Use these items to decorate your pet's home.

Face Recognition

Select this function or press the **Unlock Button** to show your face in your pet's window.

Take a Photo

Here you can take a photo with your pet! Simply press the **Red Dot Button** or press the **OK Button** to take a group photo.

Pet Reset

Here you can reset your pet. You will be taken to the pet selection screen to choose another pet to look after.

My Stylist

There are three activities in this category.

My Dressing Room

In this activity you can take a photo of your face or select one from your previously taken photos. Then, you can dress yourself up with different categories of items:

1) **My Own Pattern**, 2) **Hair Accessories**, 3) **Hair Styles**, 4) **Clothes**. If you select **Auto Mode**, the diary will randomly choose a style for you. Press the **Arrow Buttons** or the **OK Button** to play and press the **Save Button** to save your new picture. You can press the **Snapshot** icon to save your style in the **Gallery** to review later.



My Makeup

Select a photo from the **Gallery** or take a photo by positioning your face in the mask shown on the screen.

Add makeup using these functions: 1) **Blush**, 2) **Mascara**, 3) **Eyeshadow**, 4) **Lipstick**, 5) **Others**. You can adjust the shape, size and positioning of each object added. Press the **Function Button** to show the function list. Press the **Arrow Buttons** or **OK Button** to play and press the **Save Button** to save your new photo. You can view pictures you have saved in the **Gallery**.



My Address Book

Here you can enter your information, as well as your friends' information and save it. You can also take a photo to save in each section.

1. My Information

Choose this icon, then take a photo or select an image before entering your details. Enter your name, phone number, birthday, address and email address using the keyboard and press the **Emoticon Button** to add icons. Press the **Symbol Button** to add symbols and press the **Save Button** to save. You can edit any of this information anytime. Press the **Function Button** to edit or delete your personal information.



2. Add New Contact

Select this and then take a friend's photo or select a cool image for your friend. Enter your friend's information: name, phone number, birthday, address, email address and their special information using the keyboard. Press the **Emoticon Button** to add icons. Press the **Symbol Button** to add symbols and press the **Save Button** to save the information.

3. Friend List

If you have created contacts, they will appear here in alphabetical order. Scroll using the **Arrow Buttons** or type the first letter of a contact's name. Press the **OK Button** to view their information. When viewing their information, press the **Function Button** to edit or delete the content.

PHOTO FUN

There are four activities for you to choose from: **Photo Editor**, **Video Editor**, **Animation Station** and **Gallery**.



1. Photo Editor

Select a photo from the **Gallery** or take a photo by positioning your face in the mask shown on the screen.

You can then dress yourself up with different categories of items:

1) **Frames**, 2) **Hair bands**, 3) **Glasses**, 4) **Earrings**, 5) **Necklaces**, 6) **Funny Faces**, and 7) **Stickers**. You can adjust the shape, size and positioning of each object added. Press the **Function Button** to show a list of options. Press the **Arrow Buttons** and **OK Button** to play and then press the **Save Button** to save your new picture. You can view pictures you have saved in the **Gallery**.



2. Video Editor

Select one of 3 filters and record a new video (please note that you cannot add filters to existing videos, filters must be selected prior to recording). Filters include: 1) Adding Background Music, 2) Adding a Border, 3) Speeding Up or Slowing Down. Once saved, you can view your videos in the **Gallery**.



3. Animation Station

Position your face in the mask shown on the screen and take a picture of yourself or your friend. You can then record a voice entry to match the picture and see a fun animation featuring the face and voice.



4. Gallery

Here you can look through all of the pictures and videos you have taken. Press the **Function Button** to delete the selected photo or video, or to delete all photos and videos.

You can transfer new photos and videos to your diary from a computer. You can also backup your photos and videos by copying them from your diary to a computer.

If the diary's memory is full, you can insert a microSD card to expand the diary's memory capacity.



MY GAMES

There are 10 games and activities for you to play.

1. Typing Test

Can you type all of the letters or words that are shown on the screen before time runs out? There are 4 difficulty levels:

Level 1: Type lowercase letters

Level 2: Type words

Level 3: Type lowercase letters, uppercase letters and numbers

Level 4: Type a phrase or sentence



2. Number Fun

Level 1: Shows 2 sets of objects

Level 2: Shows 2 sets of dice

Level 3: Shows 2 or 3 single-digit numbers

Level 4: Shows 2 or 3 multiple digit numbers

Level 5: Shows 2 addition or subtraction problems

Level 6: Shows 2 multiplication or division problems



3. Sudoku

Complete the 2x2 or 2x3 grid by filling in each space with a digit, but without repeating any digit in the same row, column or box. Use the **Number Buttons** and **Arrow Buttons** to fill in the grid. There are 3 difficulty levels.

Level 1: 2x2 Shapes

Level 2: 2x2 Numbers

Level 3: 2x3 Numbers



4. Bubble Blast

Clear as many bubbles as possible. Connect 3 bubbles of the same color to pop them. Press the **Arrow Buttons** to adjust the direction of the bubble launcher. Press the **OK Button** to launch bubbles from the bubble launcher at the bottom of the screen. There are 3 difficulty levels.

Level 1: 4 or 5 color bubbles

Level 2: 6 or 7 color bubbles

Level 3: 8 color bubbles



5. Order Up

Customers will place their food orders. You will then need to choose the correct food from the food list to complete the customer's order. If you cannot finish a customer's order in a certain time, they will be unhappy and leave.

There are 3 difficulty levels. If you complete a customer's orders twice continuously, you will move on to the next level.

Level 1: 2 orders for each customer

Level 2: 3 orders for each customer

Level 3: 4 orders for each customer



6. Parrot Me

Talk into the microphone and your voice will be played back with a parrot effect. Press the **OK Button** to start talking to the parrot.



7. Jumping Challenge

Help the hamster with her adventure!

Press the **OK Button** or speak into the **Microphone** to help the hamster jump.



8. Bridge Building

Can you build bridges to go island-hopping? Press and hold the **OK Button** or speak into the **Microphone** to build a bridge. Then, release the **OK Button** or stop speaking when you think the bridge is the correct length to cross over to the next island.



9. Magic Ball

Look into the crystal ball and press the **OK Button** to see your daily fortune! These items will be shown to you:

Words of Wisdom

Lucky Color

Lucky Animal

Lucky Number

Lucky Item



10. Face Fun

Do you and your friends look alike? Let's find out! Use the camera to center your face in the square and press the **OK Button** to start scanning. If your face is recognized, you can then center your friend's face in the square and press the **OK Button** to start scanning. You will then see how similar you both are!



MY TOOLS

There are 8 settings in **My Tools** to choose from:

1. **Contrast, Volume, and Background Music**
2. **Alarm**
3. **Date and Time**
4. **Numeric Password**
5. **Face Unlock**



6. Event Alert

7. Music Player Sleep Timer

8. Memory Settings

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on a hard surface and do not expose the unit to excess moisture.

TROUBLESHOOTING

Go through this section if you experience difficulty in operating **Kidi Secrets Selfie Journal™**.

Problem	Solution
Diary stops working	<ol style="list-style-type: none">1. Let the diary sit for a few minutes without batteries, then replace the batteries.2. Turn the diary ON. It should now work properly.3. If the diary does not work, repeat with a brand new set of batteries.
Photo taken is not clear	<ol style="list-style-type: none">1. Check if the diary is being held steadily.2. Make sure the lighting conditions of the shooting environment are good.3. Check to see if the camera lens protection window is clean.
Cannot connect to computer	Check the connections on the USB cable between the diary and the computer and review the appropriate connection procedure in this manual.

<p>Memory card can't be detected</p>	<ol style="list-style-type: none"> 1. Check if the memory card is correctly inserted. 2. Check to see if the memory card is the supported type. The diary can only support a microSD or microSDHC card. 3. Check to see if the file system of your memory card is FAT or FAT32, Kidi Secrets Selfie Journal™ does not support NTFS or exFAT file systems. You should back up all important data from your memory card and format it in either the FAT or FAT32 file system before using in your Kidi Secrets Selfie Journal™.
<p>Cannot save files</p>	<p>Check if the memory card is full.</p> <p>If there is no memory card inserted, check the Kidi Secrets Selfie Journal™ internal memory.</p>
<p>Can't view transferred music, video or photo files</p>	<ol style="list-style-type: none"> 1. Check if the transferred files are put in the correct directory in the Kidi Secrets Selfie Journal™. Photos should be put in the DOWNLOAD/PHOTO folder, videos should be put in the DOWNLOAD/VIDEO folder and songs should be put in the MUSIC folder when Kidi Secrets Selfie Journal™ is connected to a computer. 2. Kidi Secrets Selfie Journal™ only supports the below formats: photos in Standard Baseline JPEG (8000 x 8000), videos in AVI (640 x 480 Motion JPEG) and songs in MP3.
<p>Screen displays incorrectly</p>	<p>Turn off the diary and let it sit for a few minutes without batteries, then replace the batteries.</p>

TECHNICAL SUPPORT

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our website at vtechkids.com and filling out our Contact Us form located under the Customer Support link. A service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800- 521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our website at vtechkids.com and filling out our Contact Us form located under the Customer Support link with any problems and/or suggestions that you might have. A service representative will be happy to help you.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Supplier's Declaration of Conformity

47 CFR § 2.1077 Compliance Information

Trade Name: VTech®
Model: 1636
Product Name: Kidi Secrets Selfie Journal™
Responsible Party: VTech Electronics North America, L.L.C.
Address: 1156 W. Shure Drive, Suite 200,
Arlington Heights, IL 60004
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

CAN ICES-3 (B)/NMB-3(B)

Shielded cables must be used with this unit to ensure compliance with the Class B FCC limits.

Player		Headphones	
Maximum output voltage	$\leq 150\text{mV}$	Wide band characteristic voltage	$\geq 75\text{mV}$

**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com
vtechkids.ca

Read our complete warranty policy online at
vtechkids.com/warranty
vtechkids.ca/warranty



TM & © 2018 VTech Holdings Limited.
All rights reserved.
Printed in China.
91-003512-014 (US)