



**CAUTION-ELECTRIC TOY:** Not recommended for children under 3 years of age. As with all electrical products, precautions should be used and observed during handling and use to prevent electric shock.

## Rechargeable Power Pack



# User's Manual


2013 © VTech  
Printed in China  
91-009656-000 US



## INTRODUCTION

The **Rechargeable Power Pack** makes it easier than ever to keep the **InnoTab® 3** or **InnoTab® 3S** charged and ready to go. Install the battery packs to give the tablet its own dedicated power source. Then, plug the **InnoTab®** into a wall outlet when it needs a charge. You'll never have to change batteries again!

**Note: The Rechargeable Power Pack is only compatible with the InnoTab® 3 and InnoTab® 3S.**

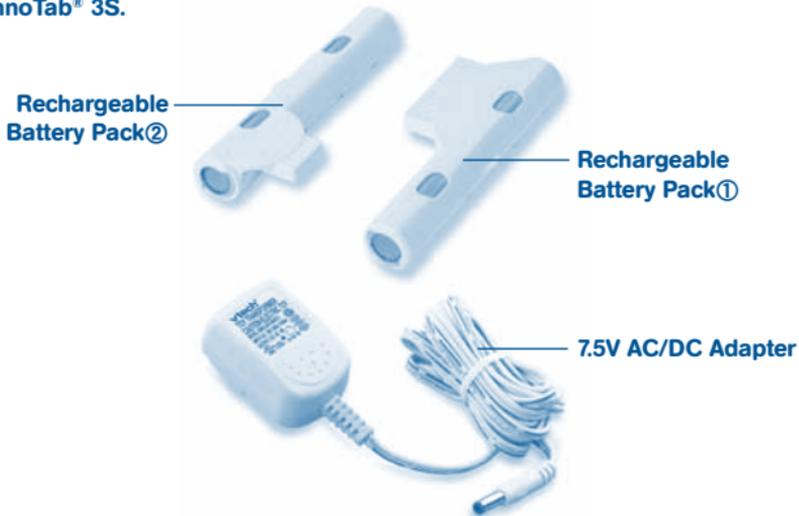

## INCLUDED IN THIS PACKAGE

- One Rechargeable Battery Pack①
- One Rechargeable Battery Pack②
- One 7.5V AC/DC Adapter
- One User's Manual

### Specification of AC/DC Adapter :

Input : 120V 60Hz 150mA AC

Output : 7.5V  $\overline{\text{---}}$  650mA DC

**WARNING:** All packing materials such as tape, plastic sheets, wire ties and tags are not part of this toy and should be discarded for your child's safety.



## GETTING STARTED

### Installing the Rechargeable Battery Packs

1. Make sure the **InnoTab® 3** or **InnoTab® 3S** is turned off.
2. Turn the unit over. Slide the battery door lock switch (or switches) forward and push the battery covers off to each side to remove them.
3. Remove any old batteries that may be in the toy. (Battery removal and replacement should be done by an adult.)
4. Insert Battery Pack① into the compartment on the right side and Battery Pack② into the compartment on the left side.
  - Insert the battery pack into the connector slot first.
  - Then press the battery pack down until it rests in place.
5. Replace the battery covers.

#### InnoTab® 3



#### InnoTab® 3S



### Charging and Recharging the Batteries

The rechargeable batteries should be fully charged before the first use. To charge and recharge the batteries, please follow the instructions below.

1. Make sure the battery packs are installed in the tablet.



2. Plug one end of the AC adapter into the power jack on the **InnoTab®** and plug the other end into a wall outlet.

Note: The AC adapter is not a toy and should only be handled by an adult.

3. You can continue to use the **InnoTab®** while the AC adapter is connected, but the batteries will not charge while the **InnoTab®** is on. When you're done playing, turn the power off and leave the tablet connected to a wall outlet to charge it.
4. The green light on the tablet will flash to indicate charging is in progress. When the batteries are fully charged the light will turn off. A full charge takes about 4.5 hours with the AC adapter that's included in the package.

Note: If the green light on the tablet flashes very quickly during charging, the battery packs may not be connected properly. Please reinstall the battery packs and try again.

### **IMPORTANT NOTES:**

- Make sure the **InnoTab® 3** or **InnoTab® 3S** is turned off before charging.
- The tablet will charge at temperatures between 41°F~95°F(5°C~35°C). If the tablet is not charging properly, please move it to a location with a suitable temperature.
- Battery removal and replacement should only be done by an adult.
- The AC adapter is not a toy and should only be handled by an adult.
- Keep the connector pins on the **InnoTab®** and the metal contacts on the battery packs clean for optimal performance.
- Disconnect the tablet from the AC adapter and remove the battery packs before cleaning.
- For best results, please use the AC adapter that is included with this package.

**Warning :** Do not allow any metal objects to touch the metal contacts on the battery packs or the contact pins on the **InnoTab®**.

### **BATTERY NOTICE**

- Always insert batteries properly matching the plus (+) and minus (-) signs.
- Do not short-circuit the supply terminals.
- Do not dispose of batteries in fire, as batteries may explode or leak.



- Remove batteries from the toy if it will not be used for an extended period of time.
- To prevent fire or electric shock, do not expose the unit to rain or moisture.
- Do not repair or alter the battery packs in any situation.
- Do not disassemble or reassemble the battery packs.
- Batteries may contain hazardous materials, and may be nondisposable. Please contact a recycling company for a proper disposal method.
- Avoid mixing batteries of different sizes and capacities in your electronic device.



This charger is not a toy. This charger is not intended for use by children.  
Do not recharge non-rechargeable batteries.

## **STANDARD GUIDELINES FOR ADAPTER TOYS AND ELECTRICALLY OPERATED PRODUCTS**

- As with all electrical products, precautions should be used and observed during handling and use to prevent electric shock.
- Do not leave the toy plugged-in for extended periods of time.
- Only use the recommended adapter with the toy.
- Never clean a plugged-in toy with liquid.
- Never use more than one adapter.
- The adapter is not a toy.
- Parents should periodically examine the adapter for conditions that may result in the risk of fire, electric shock, or injury to persons and that, in the event of such conditions, the adapter should not be used until properly repaired.

## **CARE & MAINTENANCE**

1. Keep this product out of direct sunlight and away from direct sources of heat.
2. Remove the battery packs when not using the **InnoTab®** for an extended period of time.
3. Avoid dropping this product. Never try to dismantle it.
4. Always keep the battery packs and AC adapter away from water.



## TROUBLESHOOTING

Problem	Solution
The green light does not come on or blinks very quickly when attempting to charge the unit.	Inspect the AC adapter. Make sure that the adapter is securely connected to the InnoTab and plugged in to the wall outlet.
	Check that the rechargeable batteries are correctly installed in the tablet.
	Make sure the connector pins on the <b>InnoTab®</b> and the metal contacts on the battery packs are clean and free of debris.
	Make sure the tablet is turned off.
	If problem persists after checking the above, unplug the AC adapter from the AC adapter jack. Wait for 10 seconds before plugging the AC adapter back in.
When using the rechargeable battery packs, the console suddenly turns off without prior “Low Battery” warning.	It is possible that there is uneven charge storage among the cells in the battery packs. Charge the rechargeable battery packs for 24 hours (keep charging even after the battery charging indicator light stops flashing).

## TECHNICAL SUPPORT

If you have a problem that cannot be solved by using this manual, we encourage you to visit us online or contact our Consumer Services Department with any problems and/or suggestions that you might have. A support representative will be happy to assist you.

Before requesting support, please be ready to provide or include the information below:

- The name of your product or the model number (2118).
- The specific problem you are experiencing.
- The actions you took right before the problem started.

Internet: [www.vtechkids.com](http://www.vtechkids.com) in the U.S. or [www.vtechcanada.com](http://www.vtechcanada.com) in Canada

Phone: 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada



## **DISCLAIMER AND LIMITATION OF LIABILITY**

**VTech**<sup>®</sup> Electronics North America, L.L.C. and its suppliers assume no responsibility for any damage or loss resulting from the use of this handbook.

**VTech**<sup>®</sup> Electronics North America, L.L.C. and its suppliers assume no responsibility for any loss or claims by third parties that may arise through the use of this product. **VTech**<sup>®</sup> Electronics North America, L.L.C. and its suppliers assume no responsibility for any damage or loss caused by deletion of data as a result of malfunction, dead battery, or repairs. Be sure to make backup copies of important data on other media to protect against data loss.

**COMPANY : VTech<sup>®</sup> Electronics North America, L.L.C.**

Address: 1156 W. Shure Drive, Suite 200, Arlington Heights, IL 60004 USA  
TEL NO.: 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada

### **NOTE:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

*CAN ICES-3 (B)/NMB-3(B)*

**Caution:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.