

vtech®

Parent's Guide

**Go! Go!**  
**CORY**  
**CARSON™**

**DJ Train Trax & the Roll Train™**

 


91-003795-000 (US)

# INTRODUCTION

Thank you for purchasing the **Go! Go! Cory Carson™ DJ Train Trax & the Roll Train™!**

Get ready to dance with Cory, Chrissy and DJ Train Trax! Help Cory and Chrissy dance on stage or roll DJ Train Trax to light up his rainbow smoke stack while building motor skills and listening to sounds and phrases from the show. Wicky-wicky, woo-woo!

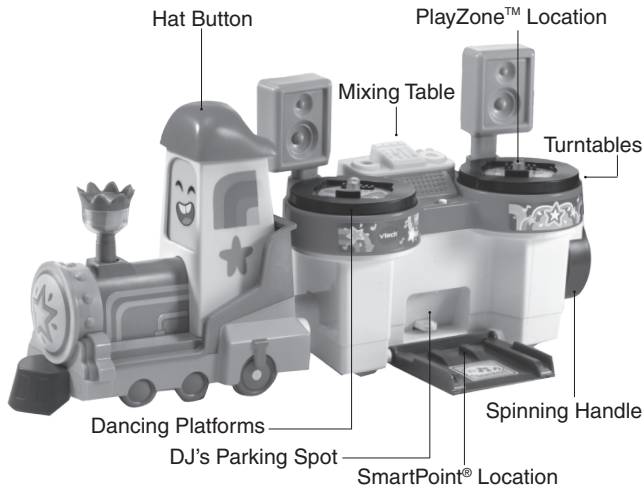

Mini Cory



Mini Chrissy

# INCLUDED IN THIS PACKAGE

## Go! Go! Cory Carson™ DJ Train Trax & the Roll Train™

- One DJ Train Trax
- One mixing table
- One mini Cory
- One mini Chrissy
- Parent's guide

### **NOTE:**

This toy is not intended for teething.

### **WARNING:**

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

### **NOTE:**

Please keep this parent's guide as it contains important information.

 
### **ATTENTION :**

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes et vis d'emballage. Ils ne font pas partie du jouet.

### **NOTE :**


Il est conseillé de conserver ce guide des parents car il comporte des informations importantes.

## Unlock the Packaging Locks

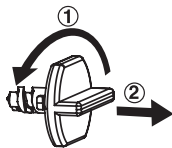

① Turn the packaging lock counterclockwise several times.

 ② Pull out the packaging lock and discard.

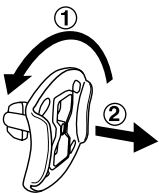


① Rotate the packaging lock 90 degrees counterclockwise.

② Pull out the packaging lock and discard.

## GETTING STARTED

 
### Battery Removal and Installation DJ Train Trax

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of **DJ Train Trax**, use a screwdriver to loosen the screw and open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
5. Replace the battery cover and tighten the screw to secure.

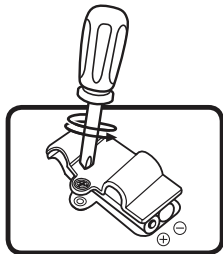

## Mixing Table

 1. Make sure the unit is turned **OFF**.
2. Locate the green battery cover on the top of the **Mixing Table**, use a screwdriver to loosen the screw and open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
5. Replace the battery cover and tighten the screw to secure.

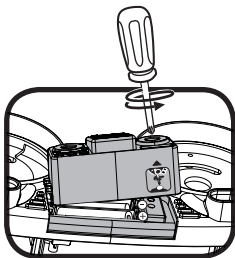

## BATTERY NOTICE

 
- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc), rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

# PRODUCT FEATURES

## DJ Train Trax

### 1. On/Off Switch

To turn **DJ Train Trax ON**, slide the **On/Off Switch** to the **ON** ☺ position. To turn **DJ Train Trax OFF**, slide the **On/Off Switch** to the **OFF** ● position.

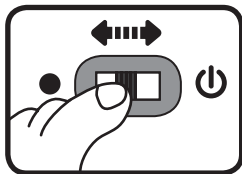

### 2. Automatic Shut-Off

To preserve battery life, **DJ Train Trax** will automatically shut off after approximately 35 seconds without input. The unit can be turned on again by pressing the **Hat Button** or pushing **DJ Train Trax** quickly.

 
#### NOTE:

This product is in Try-Me mode in the packaging. After opening the package, turn the unit off and on again to proceed with normal play. If the unit powers down while playing, please install a new set of batteries.

## Mixing Table

### 1. On/Off Switch

To turn the **Mixing Table ON**, slide the **On/Off Switch** to the **ON** ☺ position. To turn the **Mixing Table OFF**, slide the **On/Off Switch** to the **OFF** ● position.

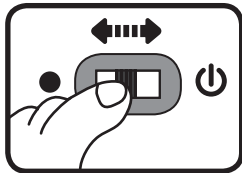

## 2. Automatic Shut-Off

To preserve battery life, the **Mixing Table** will automatically shut off after approximately 35 seconds without input. The unit can be turned on again by putting **Mini Cory** or **Mini Chrissy** on the **Mixing Table**, twisting the **Turntables**, turning the **Spinning Handle** or placing **DJ Train Trax** in **DJ's Parking Spot**.

### NOTE:

 
This product is in Try-Me mode in the packaging. After opening the package, remove **Mini Cory** and **Mini Chrissy**, place **DJ Train Trax** in **DJ's Parking Spot** or take out and reinsert the batteries to proceed with normal play. If the unit powers down while playing, please install a new set of batteries.

## ACTIVITIES

### DJ Train Trax

#### 1. Hat Button

Press the **Hat Button** to hear fun sounds, songs, phrases and melodies. The smoke stack will flash with the sounds.

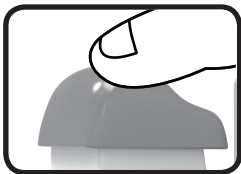

#### 2. Sounds and Melodies

 
Push **DJ Train Trax** to hear fun sounds. While a melody or song is playing, continue pushing **DJ Train Trax** to add in fun sounds on top of the melody or song. The smoke stack will flash with the sounds.



# Mixing Table

## 1. PlayZone™ Location

Place **Mini Cory**, **Mini Chrissy** or other **Go! Go! Cory Carson™** mini characters on the **PlayZone™ Location** to trigger fun sounds, short tunes and phrases.

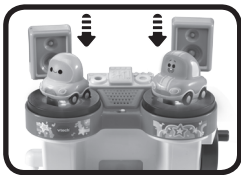


## 2. Spinning Handle

When **Mini Cory** and **Mini Chrissy** are on the **Dancing Platforms**, turn the **Spinning Handle** or twist the **Turntables** to watch them dance. Lights will flash with the sounds.



## 3. DJ's Parking Spot

 Place **DJ Train Trax** in **DJ's Parking Spot** to press the button and trigger fun sounds and short tunes. The lights will flash with the sounds.

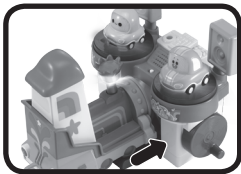

## 4. Turntables

 
Twist the **Turntables** on the **Dancing Platforms** back and forth to hear fun sounds, short tunes, phrases and a song. If a short tune or song is playing, twist the **Turntables** back and forth to add fun sounds on top of the music. The lights will flash with the sounds.





## 5. **SmartPoint® Location**

Place a SmartPoint® character (sold separately) on the **SmartPoint® Location** on the **DJ's Parking Spot** to hear fun phrases and sound effects.

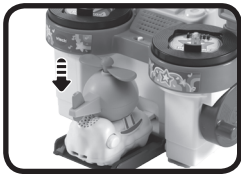

# SONG LYRICS

## DJ Train Trax

1. Take me out on the dance stage.  
Take me out with the crowd.  
Time to get groovy and roll some tunes.  
Move those bumpers and shake those tires.
2. He rocks on the dance floor all day long,  
Movin' and a groovin' and a singing his song.  
All the groo-vy cars in Bump-er-ton,  
Can't wait to shake their fenders to their favorite songs.  
Keep on chuggin, woo, woo, woo.  
Wickey-wicky, woo, woo, woo.

## Mixing Table

1. Come on down to the show,  
We'll dance fast and we'll dance slow,  
And the party will go on all day!

## CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

## TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the unit still does not work, install a new set of batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our website at [vtechkids.com](http://vtechkids.com) and filling out our Contact Us form located under the Customer Support link. A service representative will be happy to help you.

## **IMPORTANT NOTE:**

Creating and developing **VTech**<sup>®</sup> products is accompanied by a responsibility that we at **VTech**<sup>®</sup> take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our website at [vtechkids.com](http://vtechkids.com) and filling out our Contact Us form located under the Customer Support link with any problems and/or suggestions that you might have. A service representative will be happy to help you.

## **NOTE :**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### **Supplier's Declaration of Conformity**

Trade name: VTech®  
Model: 5289  
Product name: DJ Train Trax & the Roll Train™  
Responsible party: VTech Electronics North America, LLC  
Address: 1156 W. Shure Drive, Suite 200, Arlington Heights, IL 60004  
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

**CAN ICES-3 (B)/NMB-3(B)**

**Visit our website for more  
information about our products,  
downloads, resources and more.**

***vtechkids.com***

Read our complete warranty policy online at  
*vtechkids.com/warranty*



TM & © 2020 VTech Holdings Limited.  
All rights reserved.  
**Printed in China.**  
91-003795-000 (US)