

vtech[®]

User's Manual

Sort & Spin Blender™



© 2009 VTech

Printed in China

91-002353-007-000 (美)

Dear Parent,

Ever notice the look on your baby's face when they learn something new through their own discovery? These self-accomplished moments are a parent's greatest reward. To help fulfill them, **VTech**[®] created the **Infant Learning**[®] series of toys.

These unique interactive learning toys directly respond to what children do naturally – play! Using innovative technology, these toys react to baby's interactions, making each play experience fun and unique as they learn age-appropriate concepts like first words, numbers, shapes, colors and music. More importantly, **VTech**[®]'s **Infant Learning**[®] toys develop baby's mental and physical abilities by inspiring, engaging and teaching.

At **VTech**[®], we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting **VTech**[®] with the important job of helping your child learn and grow!

Sincerely,



Julia Fitzgerald
Vice President, Marketing
VTech Electronics, NA

To learn more about the **Infant Learning**[®] series and other **VTech**[®] toys, visit www.vtechkids.com

INTRODUCTION

Thank you for purchasing the **VTech® Sort & Spin Blender™** learning toy!

The **VTech® Sort & Spin Blender™** is packed with early learning fun. Sort the shapes to learn colors, shapes and hear a variety of sing along songs, phrases and familiar melodies. Turn the blending knob to mix up the shapes, hear a variety of sounds, phrase and melodies. The **VTech® Sort & Spin Blender™** encourages motor skill development and imaginative play. Let's get blending!




INCLUDED IN THIS PACKAGE

- One VTech® Sort & Spin Blender™
- One instruction manual

WARNING: All packing materials, such as tape, plastic sheets, wire ties and tags are not part of this toy, and should be discarded for your child's safety.

Unlocking the Packaging Locks:


- ① Rotate the packaging lock 90 counter-clockwise.
- ② Pull out the packaging lock.

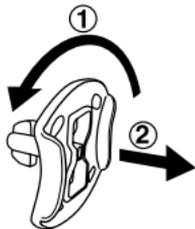

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit. Use a coin or a screwdriver to loosen the screw.
3. Install 2 new 'AA' (AM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure.

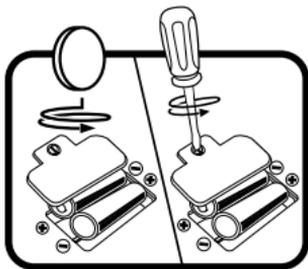

BATTERY NOTICE

- Install batteries correctly observing the polarity (+, -) signs to avoid leakage.
- Do not mix old and new batteries.
- Do not mix batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Remove the batteries from the equipment when the unit will not be used for an extended period of time.
- Always remove exhausted batteries from the equipment.
- Do not dispose of batteries in fire.
- Do not attempt to recharge ordinary batteries.
- The supply terminals are not to be short-circuited.
- Only batteries of the same and equivalent type as recommended are to be used.

WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES.

PRODUCT FEATURES

1. ON/OFF/MODE SELECTOR SWITCH

To turn the unit **ON**, slide the **ON/OFF/MODE SELECTOR SWITCH** to the **Learning Mode** (▼□), **Play Mode** (🍎) or **Music Mode** (🎧) position. To turn the unit **OFF**, slide the **ON/OFF/MODE SELECTOR SWITCH** to the **OFF** position.



2. VOLUME CONTROL SWITCH

To adjust the volume, slide the **VOLUME CONTROL SWITCH** on the bottom of the unit to the **LOW VOLUME** () or the **HIGH VOLUME** () position.

3. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® Sort & Spin Blender™** will automatically power-down after approximately 30 seconds without input. The unit can be turned on again by pressing any button.


PLEASE NOTE: This toy was designed for role-play purposes only. Please do not add any liquid as it will damage the unit.

ACTIVITIES

1. Slide the **on/off/mode selector switch** to select a mode of play. You will hear a sing along song and fun phrases. The light will flash with the sound.




2. Insert a **shape sorter piece** into the corresponding shape slot to learn about shapes and colors in the learning mode, colors and fruit in the play mode and a variety of melodies in the music mode. The light will flash with the sound.

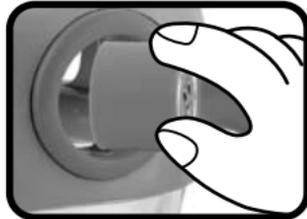

3. Twist the **blending knob** to spin the disc inside the blender. You will hear fun phrases and blending sounds or random melodies. The shapes will spin around inside the blender. The light will flash with the sound.



4. Press the **sound effect button** to hear fun phrases and a melody. When melodies are playing, press the sound effect button quickly to increase the tempo of the melody. The light will flash with the sound.

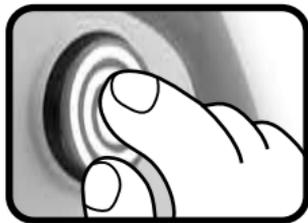

5. Remove or replace the lid to hear fun sounds, short tunes or phrases. The light will flash with the sound.



6. Drop the shape sorter pieces into the top of the blender to hear a variety of fun sounds, melodies or sing along songs. The light will flash with the sound.



7. If there is no input to the unit after approximately ten seconds, you will hear fun phrases or melodies. After another ten seconds without input, you will hear a sing along song. If there continues to be no input, you will hear “Bye-bye” and the unit will automatically power-down.

MELODY LIST:

1. Polly Put the Kettle on
2. Pat-a-Cake
3. Hickory, Dickory, Dock
4. Hot Cross Buns
5. Yankee Doodle
6. Twinkle, Twinkle, Little Star
7. Here We Go Round the Mulberry Bush
8. Alouette
9. London Bridge
10. Mary Had a Little Lamb

SONG LYRICS:

SONG 1 (to the tune of B-I-N-GO)

Join me now and we'll have fun,
We'll whip up something tasty.
Add shapes, blend them up!
Add shapes, blend them up!
Add shapes, blend them up!
Hooray, your drink is ready!

SUNG SONG 2

Drop in an apple,
Then add some grapes,
And I'll whip you up a nice drink.

SUNG SONG 3

Blending fast and blending slow,
Mixing up drinks just for you.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

For information on this product's warranty, please call **VTech®** at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada.

IMPORTANT NOTE:

Creating and developing **Infant Learning** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES-003.

CET APPAREIL NUMÉRIQUE DE LA CLASSE B EST CONFORME À LA NORME NMB-003 DU CANADA.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.