

vtech®

Stereo Speaker System



User's Manual

2013 © VTech
Printed in China
91-009656-000 US



INTRODUCTION

Get better stereo sound out of your child's **InnoTab® Learning Tablet** with the **InnoTab® Stereo Speaker System**! Just plug the audio cable into the InnoTab's headphone jack, and watch videos, play games or listen to MP3 music with stereo quality sound! Compatible with all **InnoTab® Learning Tablets**.

Note: Not a docking station - does not charge the **InnoTab®**.

INCLUDED IN THIS PACKAGE

- One Set of Speakers
- One Stand
- One User's Manual



Stand



Set of Speakers



 
User's Manual

Warning: All packing materials, such as tape, plastic sheets, packaging locks, wire ties, and tags are not part of this toy, and should be discarded for your child's safety.

Note: Please keep the user's manual as it contains important information.



PRODUCT FEATURES

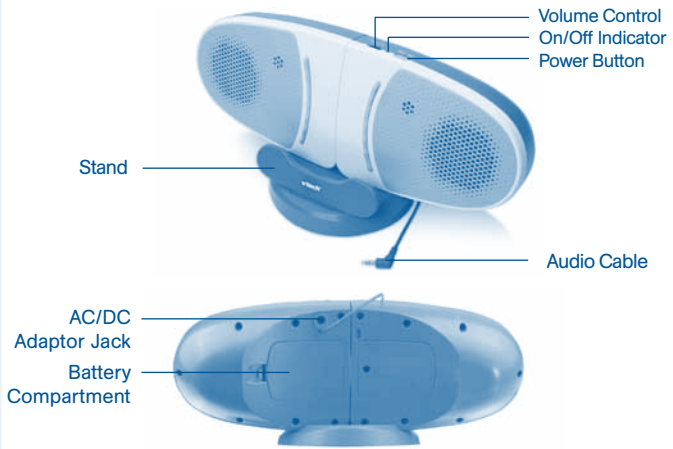

FEATURES

- Power Button
- Volume Control
- On/Off Indicator
- Stand
- AC/DC Adaptor Jack
- Battery Compartment
- Audio Cable
- Automatic Shut-Off

 
ACTION

- Press this button to turn the unit on or off.
- Turn the knob to adjust the volume.
- This light shows if the speakers are on or off.
- Use the stand to hold your **InnoTab®**.
- Use this to connect an AC/DC adaptor (sold separately).
- Insert 4 AA batteries here.
- Plug this cable into the **InnoTab®** headphone jack to connect the **InnoTab®** to the speakers.
- The speakers will automatically shut off if they are not used for 12 minutes.



ASSEMBLING THE STEREO SPEAKER SYSTEM

1. Rotate the speakers together as shown in the image below.
2. Place the speakers on top of the stand and push down until you hear a click.

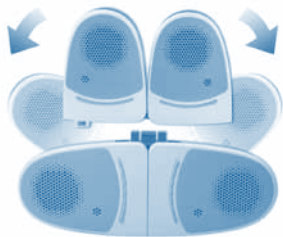

USING THE SPEAKERS WITH YOUR INNOTAB

1. Insert 4 AA batteries or plug an AC adaptor into the jack in the back of the unit.
2. Plug the Audio Cable into the headphone jack of your **InnoTab®**.
3. Turn on both the **InnoTab®** and the **Stereo Speaker System**, and enjoy music, videos, and more!





Battery Installation

- Make sure the speakers are turned off.
- Open the battery door on the back of the speaker.
- Insert 4 AA batteries as shown in image 2.
- Make sure to replace the battery cover.

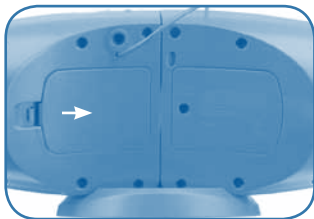 


Image 1

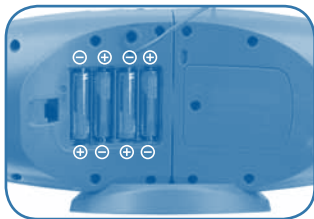 


Image 2

BATTERY NOTICE

- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Rechargeable batteries are only to be charged by an adult or by children 8 years or older.
- Remove rechargeable batteries from the toy before charging (if removable).



AC Adaptor

- Using a **VTech®** adaptor (AC/DC 7.5 V) is recommended.
- Make sure the tablet is turned off.
- Plug the adaptor (sold separately) into the AC adaptor jack on the back of the **InnoTab® Stereo Speaker System**.
- Plug the adaptor into a wall socket.

NOTE: The use of an adaptor will override the batteries. When the toy is not going to be used for an extended period of time, unplug the adaptor.

Standard Guidelines for Adaptor Toys

- This toy is not intended for use by children under 3 years old.
- The toy must only be used with a transformer for toys.
- The adaptor is not a toy.
- Never clean a plugged in toy with liquid.
- Do not connect the toy to more than the recommended number of power supplies.
- Do not leave the toy plugged in for extended periods of time.
- Please examine the toy transformer periodically for conditions that may result in the risk of fire, electric shock, or injury to persons (such as damage to the output cord, blades, housing, or other parts) and that, in an event of such conditions, the transformer should not be used until properly repaired.

CARE & MAINTENANCE

1. Keep this product out of direct sunlight and away from direct sources of heat.
2. Remove the batteries when not using the **InnoTab® Stereo Speaker System** for an extended period of time.
3. Avoid dropping this product. Never try to dismantle it.
4. Always keep the **InnoTab® Stereo Speaker System** away from water.



TROUBLESHOOTING

Problem	Solution
No sound is coming out of the speakers.	1. Make sure that batteries are installed or an AC adaptor is plugged in.
	2. Check the indicator light and confirm that the speakers are on.
	3. Adjust the volume control.
	4. Make sure the audio cable is fully plugged in to the InnoTab® , and the InnoTab® is on. Increase the volume on the InnoTab® .

TECHNICAL SUPPORT

If you have a problem that cannot be solved by using this manual, we encourage you to visit us online or contact our Consumer Services Department with any problems and/or suggestions that you might have. A support representative will be happy to assist you.

Before requesting support, please be ready to provide or include the information below:

- The name of your product or the model number (2112).
- The specific problem you are experiencing.
- The actions you took right before the problem started.

Internet: www.vtechkids.com in the U.S. or www.vtechcanada.com in Canada

Phone: 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada

DISCLAIMER AND LIMITATION OF LIABILITY

VTech® Electronics North America, L.L.C. and its suppliers assume no responsibility for any damage or loss resulting from the use of this handbook.

VTech® Electronics North America, L.L.C. and its suppliers assume no responsibility for any loss or claims by third parties that may arise through the use of this product. **VTech®** Electronics North America, L.L.C. and its suppliers assume no responsibility for any damage or loss caused by deletion of data as a result of malfunction, dead battery, or repairs. Be sure to make backup copies of important data on other media to protect against data loss.



COMPANY : **VTech**[®] Electronics North America, L.L.C.

Address: 1156 W. Shure Drive, Suite 200, Arlington Heights, IL 60004 USA

TEL NO.: 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAN ICES-3 (B)/NMB-3(B).

Caution : Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.