 


vtech[®]

Instruction Manual

Marble Rush™ Ultimate Set™

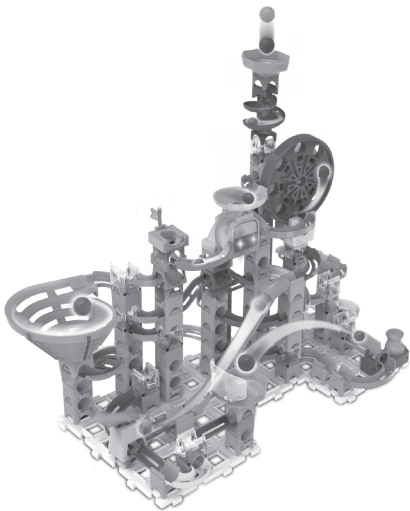

91-003991-000 (US)

INTRODUCTION

Thank you for purchasing the **Marble Rush™ Ultimate Set™!**
Get ready for non-stop action! Build thrilling courses, send the marbles into motion and compete with family and friends through exciting challenges complete with sounds and lights. Please refer to the color manual for detailed installation steps.

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please save this manual as it contains important information.

ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

 
NOTE

Il est conseillé de sauvegarder ce manuel car il comporte des informations importantes.


GETTING STARTED

Battery Removal and Installation

1. Make sure each unit is turned **Off**.
2. Find the battery cover located on the back of each unit, use a coin or screwdriver to loosen the screws and then open the battery covers.
3. Remove old batteries by pulling up on one end of each battery.

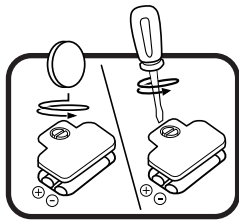

 4. Install 2 new AA (AM-3/LR6) and 3 new AAA (LR03/AM-4) batteries following the diagrams inside each battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery covers and tighten the screws to secure.

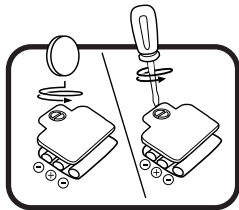

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES

- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.



WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.



ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.
Tenir les piles ou accumulateurs hors de portée des enfants.

 


 
WARNING:

CHOKING HAZARD -Toy contains small parts and small balls.
Not for children under 3yrs.

LABEL APPLICATION

Please securely stick the labels to the playset as indicated below:

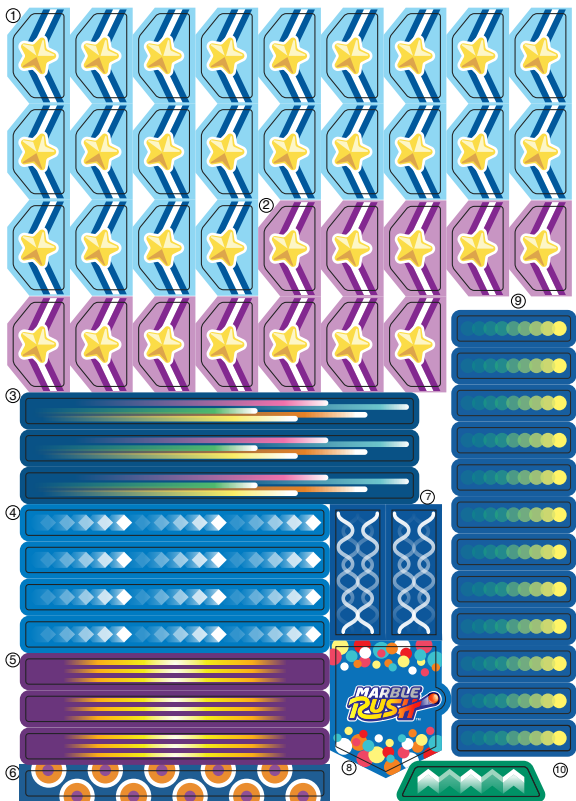


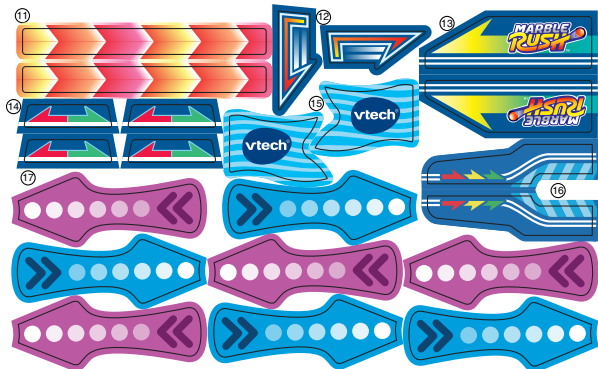


B-02



 B-04

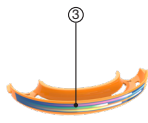

T-02

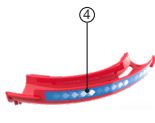 

T-04



T-01



M-08



 
M-05



M-10



T-03



M-06



T-05



 
M-01



M-02



M-04

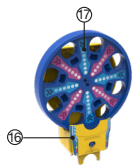

M-09

PRODUCT FEATURES

1. Ball Detection Sensors

When the two sensors detect a ball, the unit will make cool sound effects.



2. Music Select Buttons

Press the **Music Select Buttons** to cycle through the different background music.



3. Music/SFX Selector

Slide the selector all the way to the right to turn on both music and SFX. The middle position plays SFX only with no background music. Slide the selector all the way to the left to turn off both SFX and background music.






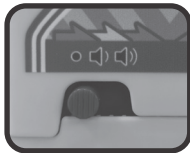 
4. Ferris Wheel On/Off Switch

Slide the selector to turn the unit **On**, the **ferris wheel** will spin until the switch is turned **Off**.



5. Off/Low/High Volume Selector

To turn the unit **On** or to adjust the volume, slide the selector to the **Low**  position or the **High**  position. To turn the unit **Off**, slide the selector to the **Off**  position.



6. Automatic Shut-Off

To preserve battery life, the **Marble Rush™ Ultimate Set™** will automatically power-down after several minutes without input. The unit can be turned on again by sliding the **Music/SFX Selector** to a different position or sliding the **Off/Low/High Volume Selector** to a different volume position. For the **Ferris Wheel**, you need turn the unit off manually, it will not automatically power off. Both units will automatically turn off when the batteries are very low.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be used for an extended period of time.
4. Do not drop the unit on hard surfaces or expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to play again.
5. If the unit still does not work, install a brand new set of batteries.

IMPORTANT NOTE:

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S., **1-877-352-8697** in Canada, or by going to our website **vtechkids.com** and filling out our **Contact Us** form located under the **Customer Support** link. Creating and developing VTech products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

Note

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Supplier's Declaration of Conformity

47 CFR § 2.1077 Compliance Information

Trade Name: VTech®
Model: 5423
Product Name: Marble Rush™ Ultimate Set™
Responsible Party: VTech Electronics North America, L.L.C.
Address: 1156 W. Shure Drive, Suite 200,
Arlington Heights, IL 60004
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com
vtechkids.ca

Read our complete warranty policy online at
vtechkids.com/warranty
vtechkids.ca/warranty

