



Create-A-Story™

Dear Parent,

The gift of reading is the greatest gift you can give your child. That's why together with Disney, VTech® developed Create-A-Story™.

Now you can watch words come alive in your child's imagination with our innovative approach to reading. Designed with your child's creativity in mind, Create-A-Story™ allows your child to build their own fun filled adventure by choosing the elements of the story such as setting, props, and actions with all of their favorite Disney characters.

At VTech® we are dedicated to helping you help your child discover their gifts. We thank you for your trust in our uniquely developed products that encourage active minds through imaginative play.

Sincerely,
Julia Fitzgerald

Julia Fitzgerald
Vice President, Marketing
VTech EleTronics, NA

To learn more about Create-A-Story™ and other VTech® toys, visit www.vtechkids.com

INTRODUCTION

Thank you for purchasing the Disney Create-A-Story™ system! Create-A-Story™ will bring your child to a wonderful world of reading and make Disney stories come to life! Featuring the cast of characters from Disney, this book uses a smart pen, cartridge, and two books to engage children in learning and storytelling! There are two ways to play Create-A-Story™. It can either be played while on the go, or it can plug directly into the TV!

Join the magic of Disney's stories and bring your child on a learning journey full of creativity, imagination and FUN!



INCLUDED IN THIS PACKAGE

- One Create-A-Story™ Console
- One Create-A-Story™ Cartridge
- One Create-A-Story™ Book
- One Read-A-Story™ Book
- One Hardware User's Manual
- One Software User's Manual
- One AV Cable

WARNING: All packing materials such as tape, plastic sheets, wire ties and tags are not part of this toy and should be discarded for your child's safety.

PRODUCT FEATURES

AC/DC Adaptor Jack
You can use an AC/DC adaptor as a power source.

TV Mode Signal
This lights up when the TV Mode is in use and both ends of the AV cable are connected properly.

Book Insert
Place a book into this area to begin play.

Music On/Off Button
Press this button to turn the background music on or off.

Help Button
Press this button to hear helpful instructions.

Lock
This mechanism locks a book into the console when the console is closed.

Headphone Jack
This allows you to hear only through a pair of headphones (not included).

Microphone Jack
This allows you to plug a microphone into the console (mono microphone sold separately).

AV Jack
Plug the AV cable into this jack.

Cartridge Slot
Insert the cartridge into this slot to begin play. Please note a cartridge must be inserted before you can turn the console on.

Speaker

On/Off Switch
Slide the switch to the left to turn the console on and lock the cartridge into place. Slide the switch to the right to turn the console off and unlock the cartridge.

Note: The On/Off Switch protects the console from any disturbances. Please always insert the cartridge first before you turn the system on. Also, always turn the system off before removing the cartridge.

Volume Buttons
Press the up arrow to increase the volume, or press the down arrow to decrease the volume.

Battery Compartment
Please refer to Page 5 for more information.


Pen Cable Storage
Slide the pen cable inside to keep it stored neatly.

Smart Pen
Use the pen to touch the pages and play.

GETTING STARTED

BATTERY INSTALLATION

- Make sure the unit is turned OFF.
- Locate the battery cover at the back of Create-A-Story™.
- Insert 4 X 1.5 V AM-3 size "AA" or LR6 batteries as illustrated.
- Replace the battery cover.

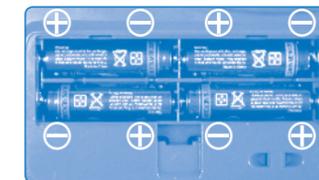

Note: When Create-A-Story™ is running low on batteries, you may see this icon  appear on the right corner of the TV screen. This indicates that battery power is low, and you should replace the batteries soon. Battery time remaining once the icon first appears is approximately 10-30 minutes, depending on the type of batteries in use. If the batteries are exhausted, the icon will stay on screen for 5 seconds, and then will turn off automatically.

BATTERY NOTICE

- Install batteries correctly observing the polarity (+, -) signs to avoid leakage.
- Do not mix old and new batteries.
- Do not mix batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Remove the batteries from the equipment when the unit will not be used for an extended period of time.
- Always remove exhausted batteries from the equipment.
- Do not dispose of batteries in fire.
- Do not attempt to recharge ordinary batteries.
- The supply terminals are not to be short-circuited.
- Only batteries of the same and equivalent type as recommended are to be used.

WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES.

AC/DC ADAPTOR

- Use a VTech® 9V  300mA  AC/DC adaptor or a standard AC/DC adaptor with equivalent specification.
- Make sure the unit is turned OFF.
- Plug the power jack into the 9V DC socket.
- Plug the AC adaptor into a wall socket.

Note: The use of an adaptor will override the batteries. When the toy is not going to be in use for an extended period of time, unplug the adaptor.

STANDARD GUIDELINES FOR ADAPTOR TOYS

- This toy is not intended for use by children under 3 years old.
- Only use the recommended adaptor with the toy.
- The transformer is not a toy.
- Never clean a plugged-in toy with liquid.
- Never use more than one adaptor.
- Do not leave the toy plugged in for extended periods of time.

Create-A-Story™ in On-the-Go Mode

TWO WAYS TO PLAY

You can also play with **Create-A-Story™** without a TV set. Listen to your favorite Disney stories through the speaker when you are playing in the On-the-Go Mode. You can carry it along during travel!


Create-A-Story™ in TV Mode

CONNECTING Create-A-Story™ TO A TV

Note: Before you connect **Create-A-Story™** to a TV, please check and make sure that the console is working. Insert the AV cable into the AV jack. Once you have turned the console on, the TV Mode signal will glow. If this does not occur, please check the adaptor or batteries, and ensure the AV cable is properly connected. Make sure that your TV and the console are both turned off before you being making any connections.


AUDIO INPUT CONNECTION

- Connect the yellow plug on the **Create-A-Story™** cable to the yellow video input terminal on your TV.
- Connect the white plug on the **Create-A-Story™** cable to the white audio input terminal on your TV.

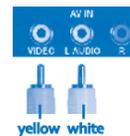


CONNECTING Create-A-Story™ TO A VCR

If there is no video IN and audio IN terminal on your TV set, you can connect **Create-A-Story™** to a VCR.

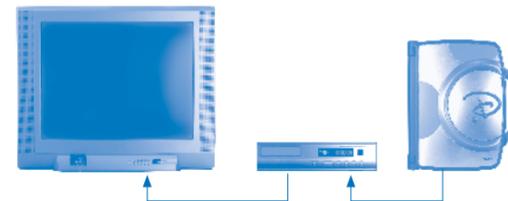

- Connect the yellow plug on the **Create-A-Story™** cable to the yellow video input terminal on your VCR.
- Connect the white plug on the **Create-A-Story™** cable to the white audio input terminal on your VCR.

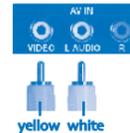

Create-A-Story™ in On-the-Go Mode

TWO WAYS TO PLAY

You can also play with **Create-A-Story™** without a TV set. Listen to your favorite Disney stories through the speaker when you are playing in the On-the-Go Mode. You can carry it along during travel!

TO BEGIN PLAY

TO BEGIN PLAY

- Make sure the console is turned **OFF**.
- Insert a cartridge into the slot at the top of the console. The side with the label needs to be facing up. The cartridge should lock into place securely. Please use care when removing the cartridge from the slot.
- Turn on your TV.
- Set your TV input mode to accept input from the port to which **Create-A-Story™** is connected. In many cases this will involve setting the TV to a "video" mode; however, since all TVs vary, refer to your TV or VCR manual for further details.
- Turn **Create-A-Story™** on by sliding the switch to the **ON** position.

CARE AND MAINTENANCE

CARE AND MAINTENANCE

- Keep your **Create-A-Story™** clean by wiping it with a slightly damp cloth. Never use solvents or abrasives.
- Keep it out of direct sunlight and away from direct sources of heat.
- Always keep **Create-A-Story™** away from water, sand and dirt.
- Avoid dropping it. Never try to dismantle it.

WARNING

WARNING

A very small percentage of the public, due to an existing condition, may experience epileptic seizures or momentary loss of consciousness when viewing certain types of flashing colors or patterns, especially on television. While **Create-A-Story™** does not contribute to any additional risks, we do recommend that parents supervise their children while they play games on a TV. If your child experiences dizziness, altered vision, disorientation, or convulsions, discontinue use immediately and consult your physician.

Please note that focusing on a television screen at close range for a prolonged period of time may cause fatigue or discomfort. We recommend that children take a 15-minute break for every hour of play.

TROUBLESHOOTING

Problem	Possible Reason	Solution
The TV Mode signal does not glow when the switch is in the ON position.	1. Incorrect or missing power connection	1. Check if the new batteries are correctly installed, or an AC/DC adaptor (9V 300mA, center-position) is properly connected to Create-A-Story™ .
	2. Program needs to be reset	2. Disconnect all power supplies (batteries and adaptor), then reconnect power supplies.
	3. AV cable is not connected to the AV jack	3. Make sure that the AV cable is firmly inserted into the AV jack at the top of the console.
The TV Mode signal is ON , but there is no picture on the TV screen.	1. Incorrect TV connection	1. Make sure that the yellow plug of the console is connected to the video IN terminal (usually yellow) of the TV.
	2. Incorrect TV Mode selected	2. Make sure that the TV is set to "video" mode. Some TVs have several video inputs so please make sure you have selected the video input that matches the video port connected to the console.

The TV Mode signal is ON , but there is no picture (or picture looks fuzzy) and switching to OFF has no response.	1. Program needs to be reset	1.1 Switch to the OFF position and unlock the cartridge. 1.2 Remove the cartridge and then re-insert it. 1.3 Disconnect all power supplies (batteries and adaptor), and then reconnect power supplies.
The TV picture is black and white.	1. Non-matching color system 2. Cable connection problem	1. Make sure the TV is set to the correct TV system. (E.g. NTSC or Auto) 2. Make sure that the video cable is firmly connected to the video input of the TV and AV jack of Create-A-Story™ .
There is a picture on the TV, but no sound.	1. TV setting	1. Increase the volume of the TV, and make sure it is not set to "Mute".
There is no sound when using the On-the-Go Mode.	1. Incorrect or missing power connection	1. Check if the new batteries are correctly installed, or an AC/DC adaptor (9V 300mA, center-position) is properly connected to Create-A-Story™ .
	2. Program needs to be reset	2.1 Turn off Create-A-Story™ . 2.2 Disconnect all power supplies (batteries and adaptor), then reconnect power supplies. 2.3 Turn on Create-A-Story™ .
	3. Headphone is connected	3. Remove the Headphone jack from Create-A-Story™ .

TECHNICAL SUPPORT

TECHNICAL SUPPORT

If you have a problem that cannot be solved by using this manual, we encourage you to visit us online or contact our Consumer Services Department with any problems and/or suggestions that you might have.

A support representative will be happy to assist you. Before requesting support, please be ready to provide or include the information below:

- The name of your product or model number (the model number is typically located on the back or bottom of your product).
- The actual problem you are experiencing.
- The actions you took right before the problem occurred.

Internet: www.vtechkids.com

Phone: 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada

OTHER INFORMATION

OTHER INFORMATION

DISCLAIMER AND LIMITATION OF LIABILITY

VTech® Electronics North America, L.L.C. and its suppliers assume no responsibility for any damage or loss resulting from the use of this handbook. **VTech®** Electronics North America, L.L.C. and its suppliers assume no responsibility for any loss or claims by third parties that may arise through the use of this software. **VTech®** Electronics North America, L.L.C. and its suppliers assume no responsibility for any damage or loss caused by deletion of data as a result of malfunction, dead battery, or repairs. Be sure to make backup copies of important data on other media to protect against data loss.

Company: **VTech®** Electronics North America, L.L.C.

Address: 1155 West Dundee Rd., Suite 130, Arlington Heights, IL 60004 USA

Phone: 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada

NOTICE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.