



CoComelon™

Instruction Manual

# Go!Go! Smart Wheels®


## Grocery Store Track Set



# INTRODUCTION

Thank you for purchasing the **CoComelon™ Go! Go! Smart Wheels® Grocery Store Track Set**.

Roll JJ's race car shopping cart over SmartPoint® locations on this closed-track system to hear him talk and sing songs from the show. Rush down the ramp and JJ will knock over the display!

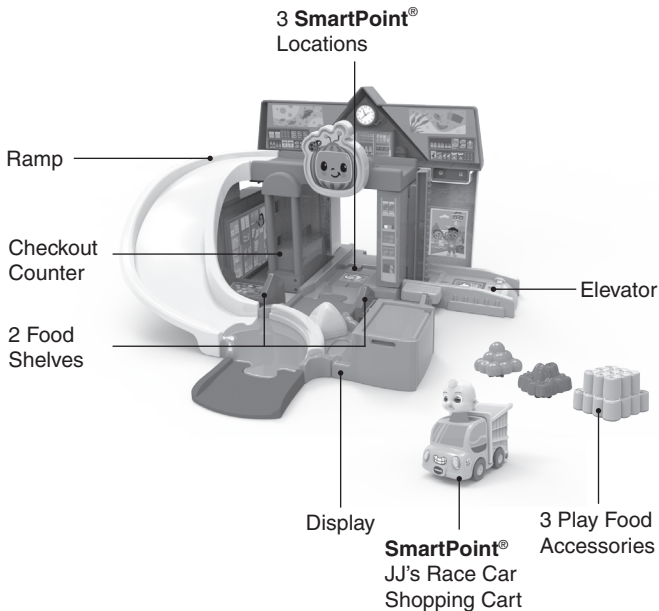

# INCLUDED IN THE PACKAGE



One SmartPoint®  
JJ's Race Car  
Shopping Cart



One store front



One fridge support



One SmartPoint®  
base track




One SmartPoint®  
second floor track



One ramp



One SmartPoint®  
elevator

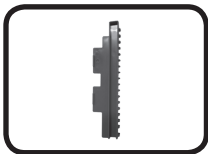

One elevator support



One elevator wall



One sign



One checkout counter



One checkout counter support



One circle track



One 1/4 track, male



One end track, female




One display



One track guide



Two food shelves

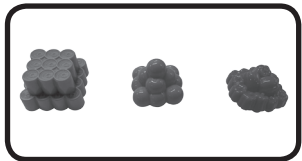

Three play food accessories

- One sticker sheet
- One Quick Start Guide

**WARNING:**

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

**NOTE:**

Please save this manual as it contains important information.

**ATTENTION :**

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

**NOTE :**

Il est conseillé de sauvegarder ce manuel car il comporte des informations importantes.

**CAUTION:**


Adult assembly required. This package contains small screws. For your child's safety, do not let your child play with the toy until it is fully assembled.

**ATTENTION :**

Ce jouet doit être assemblé par un adulte. Ce jouet contient des petites vis. Pour la sécurité de votre enfant, ne pas le laisser jouer avec le jouet tant que ce dernier n'est pas complètement assemblé par un adulte.

**Unlock the Packaging Locks**

- ① Rotate the packaging locks counterclockwise several times.
- ② Pull out the packaging locks and discard.

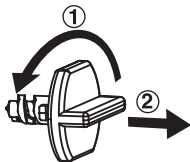


# GETTING STARTED

## Battery Removal and Installation

### JJ's Race Car Shopping Cart

1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the bottom of the unit, use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

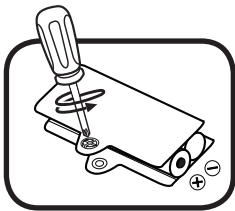

### **WARNING:**

Adult assembly required for battery installation.  
Keep batteries out of reach of children.



### **ATTENTION :**

Les piles ou accumulateurs doivent être installés par un adulte.  
Tenir les piles ou accumulateurs hors de portée des enfants.

## **IMPORTANT: BATTERY INFORMATION**



- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

### **RECHARGEABLE BATTERIES**



- Remove rechargeable batteries (if removable) from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

# LABEL APPLICATION

Please securely place the stickers on the playset as indicated on the following pages below:

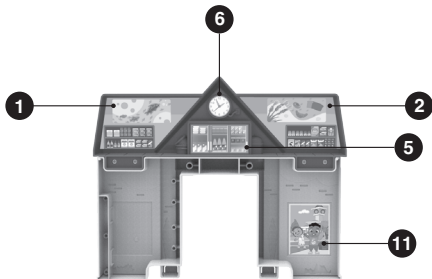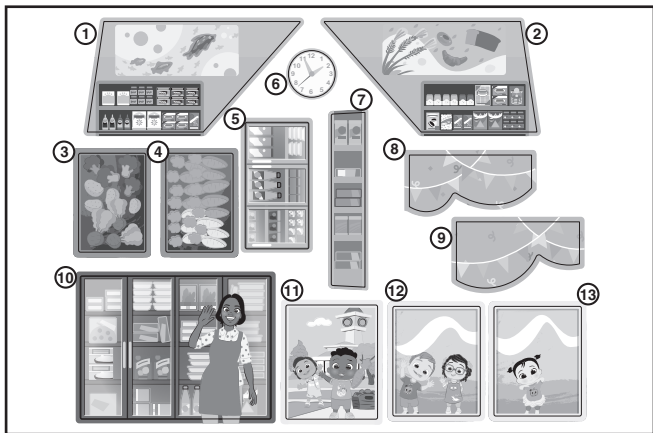





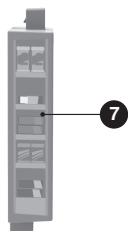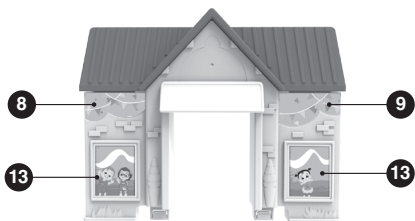



# ASSEMBLY INSTRUCTIONS

With the CoComelon™ Go! Go! Smart Wheels® Grocery Store Track Set, safety comes first. Adult assembly is required. For your child's safety, do not let them play with this toy until it is fully assembled.




1. Insert the **Elevator Support** into the **Elevator Wall**. A clicking sound will confirm the pieces are firmly connected. Then slide the **Elevator** into the **Elevator Support** from the bottom.

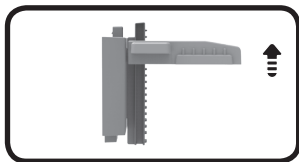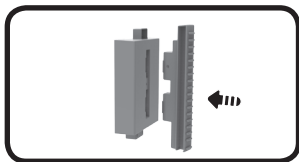



2. Attach the **Second Floor Track** to the **Store Front** from the back, and insert the **Elevator Wall** into the **Base Track**. Connect the **Store Front** to the **Base Track** and the **Second Floor Track** to the **Elevator Wall**.

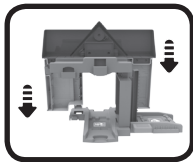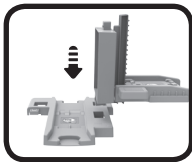




3. Attach the **Checkout Counter** to the **Base Track**, then connect the **Checkout Counter Support** to the **Checkout Counter** and the **Second Floor Track**, Insert the **Sign** into the **Second Floor Track**.

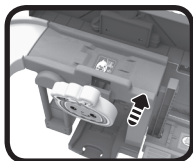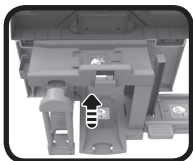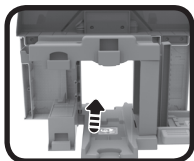

4. Attach the **Fridge Support** to the **Store Front** from the back, then connect the **Ramp** to the **Second Floor Track** and the **Fridge Support**.

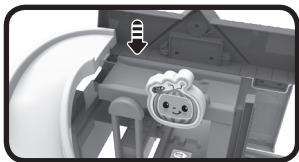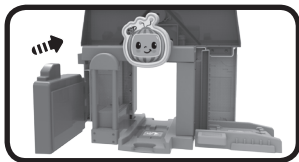

5. Attach the **Circle Track** to the **Ramp**. Then connect it with the **1/4 track (male)**, the **End Track (female)** and the **Display**, Insert the **Track Guide** to the **Circle Track**.

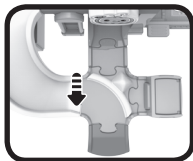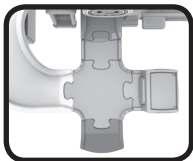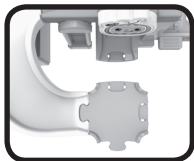

6. Place the accessories as desired, then the **CoComelon™ Go! Go! Smart Wheels® Grocery Store Track Set** is ready to play!




## PRODUCT FEATURES

### JJ's Race Car Shopping Cart

#### 1. On/Off Switch

To turn the unit **On**, slide the **On/Off Switch** to the **On** (⏻) position. To turn the unit **Off**, slide the **On/Off Switch** to the **Off** (●) position.

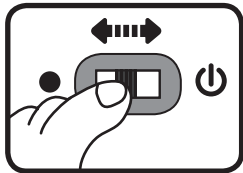

#### 2. Automatic Shut-Off

To preserve battery life, the **JJ's Race Car Shopping Cart** will automatically power down after approximately 60 seconds without input. The unit can be turned on again by pressing the character button, pushing it quickly, or triggering a **SmartPoint®** location.


**Note:** This **JJ's Race Car Shopping Cart** is in Try-Me mode in the packaging. After opening the package, turn the vehicle off and on again to proceed with normal play. If the unit repeatedly powers down while playing, please install a new set of batteries.

## ACTIVITIES

### JJ's Race Car Shopping Cart

#### 1. JJ Character Button

Press the **character** to hear sounds, songs, phrases and melodies. The light will flash with the sounds.

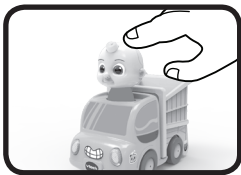

#### 2. SmartPoint® Locations


For added fun, the **JJ's Race Car Shopping Cart** interacts with the **CoComelon™ Go! Go! Smart Wheels® Grocery Store Track Set**. Simply put the vehicle on one of the set's three **SmartPoint®** locations to see the cart's lights flash and hear fun phrases, sounds or music. The vehicle even interacts with the other **Go! Go! Smart Wheels®** play sets (each sold separately).



# Grocery Store Track Set


## 1. SmartPoint® Elevator

Put the **JJ's Race Car Shopping Cart** on the **SmartPoint® Elevator**. Raise the **Elevator** to bring the vehicle up to the second floor.

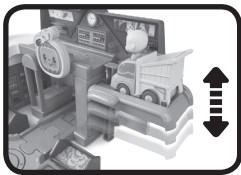


## 2. Switch Directions

Spin the **Track Guide** to switch the direction the vehicle exits the ramp or remove it to allow the vehicle to go straight.

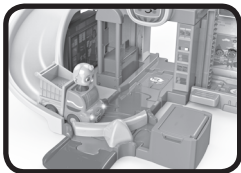

## 3. Ramp and Display Launcher

Slide **JJ's Race Car Shopping Cart** down the **Ramp**. Remove the **Track Guide** and place one of the three play food accessories on the **Display**. Push the vehicle down the **Ramp** to see it knock the **Display** and launch the play food accessory off the shelf.

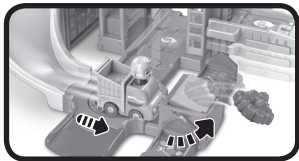

# MELODY LIST

1. Freeze Dance
2. Animal Dance
3. Bingo
4. This Is the Way
5. Yes, Yes Bedtime
6. I Want to Be Like Mommy

## SONG LYRICS

### Song 1

Getting' groceries, Yeah!  
At the grocery store.  
Getting' groceries, Yeah!  
Gonna get some more, oh!

### Song 2

Shop, shop, baby  
Shop, shop, shop, baby  
Shop, shooby, shop some more.  
Push that cart 'round the grocery store!

### Song 3

When you see something you want,  
What's the magic word  
Hmmm...Please, please, please.

### Song 4

No time to stop, pick up the pace,  
Petal to the metal, we're in the race.

### Song 5

Green means go! Nice to meet you.  
Put it in the cart.  
Red means stop!  
Time to restart.

## CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

## TROUBLESHOOTING

If for some reason the unit stops working, please follow these steps:

1. Please turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.



## **NOTE**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## **CAUTION**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### **IMPORTANT NOTE:**

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S., **1-877-352-8697** in Canada, or by going to our website **vtechkids.com** and filling out our **Contact Us** form located under the **Customer Support** link. Creating and developing VTech products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

### **Supplier's Declaration of Conformity**

#### **47 CFR § 2.1077 Compliance Information**

Trade Name: VTech®  
Model: 5661  
Product Name: CoComelon™ Go! Go! Smart Wheels®  
Grocery Store Track Set  
Responsible Party: VTech Electronics North America, L.L.C.  
Address: 1156 W. Shure Drive, Suite 200  
Arlington Heights, IL 60004  
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

CAN ICES-003(B)/NMB-003(B)

**Visit our website for more  
information about our products,  
downloads, resources and more.**

***vtechkids.com***  
***vtechkids.ca***

Read our complete warranty policy online at  
***vtechkids.com/warranty***  
***vtechkids.ca/warranty***

