

Disney

User's Manual

Press 'n Play Laptop



vtech[®]

Visit the Disney Web site at www.disney.com

©Disney

Based on the "Winnie the Pooh" works by
A.A. Milne and E.H. Shepard.
All rights reserved.



Dear Parent,

At **VTech**[®], we know that a child's imagination is a truly wonderful thing and needs to be developed and nurtured. That's why we created the **Winnie the Pooh**[®] electronic learning series of interactive learning toys to stimulate children's imaginations, while also teaching vital preschool concepts such as the alphabet, numbers, shapes, colors and objects.

Through the use of unique technology and engaging child-directed role-play scenarios, **Winnie the Pooh**[®] characters magically come to life to guide children through learning activities. These engaging characters foster children's critical reasoning skills, enhance their fine motor skills and engage them in exciting role-play activities for endless hours of learning fun.

At **VTech**[®], we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting **VTech**[®] with the important job of helping your child learn and grow!

Sincerely,

Your Friends at **VTech**[®]

To learn more about the **Winnie the Pooh** electronic learning series[™] and other **VTech**[®] toys, visit

www.vtechkids.com

INTRODUCTION

Thank you for purchasing the **VTech® Press 'n Play Laptop!**

Play and learn with Pooh, Tigger, Piglet and Roo! Interact with the pop-up characters and LCD screen for a fun learning experience! This colorful laptop will educate and entertain with age-appropriate curriculum and the real voice of Winnie the Pooh. Through 11 exciting activities, your child will learn letters, numbers, counting, spelling and much more. With fun sounds and 26 melodies, learning has never been so exciting!



INCLUDED IN THIS PACKAGE

 
- One VTech® Press 'n Play Laptop
- One User's Manual

WARNING: All packing materials such as tape, plastic sheets, wire ties and tags are not part of this toy, and should be discarded for your child's safety.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit and open it.
3. Insert 3 new "AA" batteries (UM-3/LR6) as illustrated.
4. Close the battery cover.

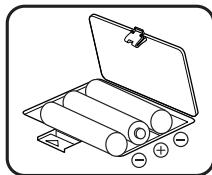

BATTERY NOTICE

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged (if removable).
- Rechargeable batteries are only to be charged under adult supervision (if removable).
- Different types of batteries or new and used batteries are not to be mixed.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.

- The supply terminals are not to be short-circuited.
- The toy is not to be connected to more than recommended number of power supplies.
- Do not dispose of batteries in fire.

WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES.

 
REMOVE DEMO TAG

The demo tag should be removed automatically when the product is taken out of packaging. If the demo tag is still in position when you begin play, please remove it from the bottom of the unit activate normal play mode.

PRODUCT FEATURES

1. ON/OFF BUTTON

Press the **ON/OFF BUTTON** to turn the unit **ON**.
Press it again to turn the unit **OFF**.

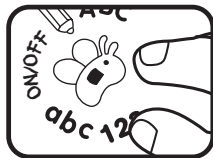


2. 3D CHARACTER BUTTONS

Press the 3D Pooh, Roo, Tigger and Piglet to hear phrases and see animations related to the selected activity.




3. ARROW ENTER BUTTON

 Press the **ARROW ENTER BUTTON** to confirm your answer or selection in related activities.

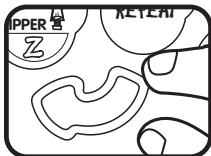

4. REPEAT BUTTON

 Press the **REPEAT BUTTON** to hear the last response or instruction repeated.

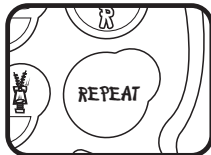



5. ACTIVITY SELECTOR

Slide the **ACTIVITY SELECTOR** to select an activity.



6. VOLUME CONTROL SWITCH

To adjust the volume, slide the **VOLUME CONTROL SWITCH** to the high volume position  or low volume position .



7. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® Press 'n Play Laptop** will automatically power-down after several minutes without input. The unit can be turned on again by pressing the **ON/OFF BUTTON**. We recommend that you turn off the unit when not in use. If you do not plan to use the unit for a long period of time, we recommend that you remove the batteries.

ACTIVITIES

1. LETTER SOUNDS



Press the **LETTER BUTTONS** to hear the letter and its sound identified.

Press the **LETTER BUTTONS** again to hear the letter and related word. See the corresponding animations on the screen. Press the **NUMBER BUTTONS** to hear the number identified and the corresponding animation shown on the screen.

2. LETTER ORDER



You will be given a sequence of 3 letters in alphabetical order with one letter missing. Complete the sequence by pressing the correct **LETTER BUTTON**. You will hear hints to help you answer so listen carefully! Press the **NUMBER BUTTONS** to hear the number identified and the corresponding animation shown on the screen.

3. WHAT IS IT?



A picture will appear on the screen and be identified. Different words will scroll across the bottom of the screen. Select the word that matches the picture by pressing the **ARROW ENTER BUTTON** when your answer appears on the screen. You can also use the **LETTER BUTTONS** to answer. Press the **NUMBER BUTTONS** to hear the number identified and the corresponding animation shown on the screen.

4. SPELLING



A word and picture will be shown on the screen. Then, the picture will disappear and the letters will be scrambled and shown in balloons. Press the **LETTER BUTTONS** to spell the word correctly. Press the **NUMBER BUTTONS** to hear the number identified and the corresponding animation shown on the screen.



5. COUNTING



A number of objects will be shown on the screen. Count the objects and press the correct **NUMBER BUTTON** to answer. Press the **LETTER BUTTONS** to hear the letter identified and the corresponding animation shown on the screen.

6. ADDITION & SUBTRACTION



An equation will be shown on the screen. Answer the equation by pressing the correct **NUMBER BUTTON**. Press the **LETTER BUTTONS** to hear the letter identified and the corresponding animation shown on the screen.

7. MORE OR LESS?



Tigger, Roo and Piglet will be shown on the screen with some objects. Listen carefully as Pooh asks who has either more or less. Press the correct **3D CHARACTER BUTTON** to answer. You can also use the **LETTER BUTTONS** related to the characters to answer. Press the **LETTER** and **NUMBER BUTTONS** to hear the letter or number identified and the corresponding animation shown on the screen.

8. ODD ONE OUT



Tigger, Roo and Piglet will be shown dancing on the screen. Watch carefully to see who makes a wrong move. Press the correct **3D CHARACTER BUTTON** to answer. You can also use the **LETTER BUTTONS** related to the characters to answer. Press the **LETTER** and **NUMBER BUTTONS** to hear the letter or number identified and the corresponding animation shown on the screen.

9. CHASING GAME



3 letters will be shown on the screen and identified. Help Piglet follow the butterflies by remembering the letters and pressing the corresponding **LETTER BUTTONS**. To see the letters again, just press the **REPEAT BUTTON**. Press the **NUMBER BUTTONS** to hear the number identified and the corresponding animation shown on the screen.

10. SHADOW MATCH









An object will be shown on the screen. Different shaped shadows will scroll across the screen next to the object. Help Piglet find his shadow by matching the object with its shadow. Select the shadow that matches the object by pressing the **ARROW ENTER BUTTON** when your answer appears on the screen. Press the **LETTER** and **NUMBER BUTTONS** to hear the letter or number identified and the corresponding animation shown on the screen.

11. MUSIC



Press the **LETTER BUTTONS** to hear the 26 melodies and see Pooh and his friends dance along with the music on the screen. Press the **NUMBER BUTTONS** to hear the number identified and the corresponding animation shown on the screen. Press the **NUMBER BUTTONS** while a melody is playing to hear sound effects jam into the music.

- A – One, Two, Three, Four, Five
- B – Bizet
- C – The Farmer in the Dell
- D – Eine Kleine Nachtmusik
- E – Hey Diddle Diddle
- F – The Entertainer

- 
- 
- 
- G - William Tell Overture
H - Alphabet Song
I - Bingo
J - Ring Around the Rosy
K - Humpty Dumpty
L - Here We Go 'Round the Mulberry Bush
M - I've Been Working on the Railroad
N - Mexican Hat Dance
O - Hickory Dickory Dock
P - Oh, Susanna!
Q - Old MacDonald
R - Oranges and Lemons
S - Pop! Goes The Weasel
T - The Wheels on the Bus
U - The Old Grey Mare
V - On Top of Old Smokey
W - She'll Be Coming 'Round The Mountain
X - The Happy Farmer
Y - Ta Ra Ra
Z - Animal Fair
- 
- 
- 





CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit onto a hard surface and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
 2. Interrupt the power supply by removing the batteries.
 3. Turn the unit **ON**. The unit will now be ready to play again.
 4. If the unit still does not work, replace with a new set of batteries.
- 
- 

TECHNICAL SUPPORT

If you have a problem that cannot be solved by using this manual, we encourage you to visit us online or contact our Consumer Services Department with any problems and/or suggestions that you might have. A support representative will be happy to assist you. Before requesting support, please be ready to provide or include the information below:

- The name of your product or model number (The model number is typically located on the back or bottom of your product.)
- The actual error message or problem you are experiencing.
- The actions you took right before the error message or problem occurred.

Internet: www.vtechkids.com

Phone: 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada

OTHER INFO

VTech® Electronics North America, L.L.C. and its suppliers assume no responsibility for any damage or loss resulting from the use of this handbook. **VTech®** Electronics North America, L.L.C. and its suppliers assume no responsibility for any loss or claims by third parties that may arise through the use of this software. **VTech®** Electronics North America, L.L.C. and its suppliers assume no responsibility for any damage or loss caused by deletion of data as a result of malfunction, dead battery, or repairs. Be sure to make backup copies of important data on other media to protect against data loss.

COMPANY: **VTech®** Electronics North America, L.L.C.

ADDRESS: 1155 W. Dundee Road, Suite 130, Arlington Heights, IL
60004, USA

TEL NO.: (847) 400-3600



NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IMPORTANT NOTE:

Creating and developing **Winnie the Pooh** electronic learning products is accompanied by a responsibility that we at **VTech**[®] take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada with any problems and/or suggestions that you might have. A service representative will be happy to help you.