

vtech®

Parent's Guide

Disney


Go! Go!
Smart Wheels®

Mickey Choo-Choo Express



INTRODUCTION

Thank you for purchasing the **VTech® Go! Go! Smart Wheels® Mickey Choo-Choo Express!** Take a train ride with Mickey over the bridge and through the train station, activating **SmartPoint®** locations along the way.

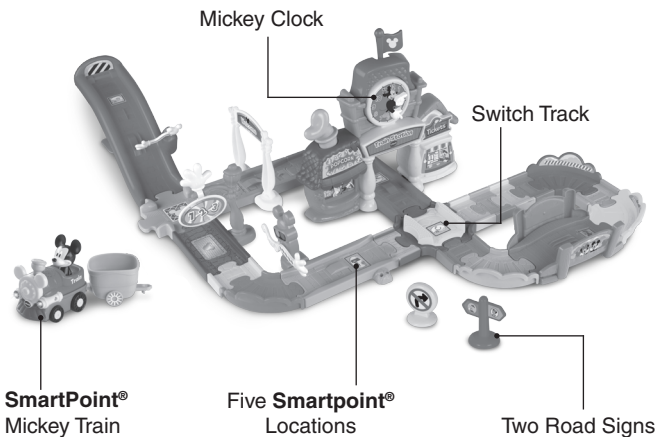

INCLUDED IN THIS PACKAGE



One **SmartPoint®**
Mickey Train



One train car



One **SmartPoint®**
ramp track



One gate arm




One ramp
support



One cross track



One switch track

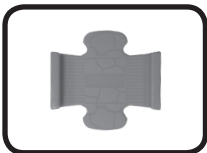

One 1/4 straight
track, male




One 1/4 straight
track, female



Two 90-degree
tracks, female



Three 90-degree
tracks, male

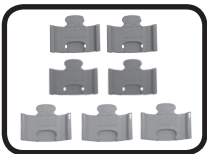

Seven 1/4
straight tracks



One streetlight
sign



One streetlight



One streetlight 3/4
straight track




One entrance



One entrance
straight track



One gate

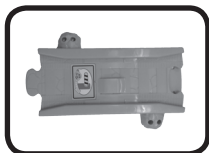

One gate straight
track



One bridge base




Bridge wall
A & B




One flag



One train station

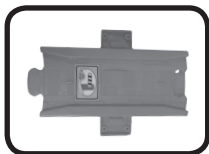

One train station
straight track

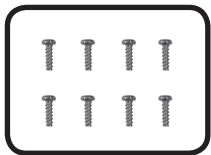

Eight Screws



One label sheet

- Two road signs
- One parent's guide

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE: Please keep this parent's guide as it contains important information.

ATTENTION:

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes et vis d'emballage. Ils ne font pas partie du jouet.

NOTE : Il est conseillé de conserver ce guide des parents car il comporte des informations importantes.



CAUTION:

Adult assembly required.

This package contains small screws. For your child's safety, do not let your child play with the toy until it is fully assembled.




ATTENTION !

Ce jouet doit être assemblé par un adulte.

Ce jouet contient des petites vis. Pour la sécurité de votre enfant, ne pas le laisser jouer avec le jouet tant que ce dernier n'est pas complètement assemblé par un adulte.

Unlock the packaging locks:

- ① Turn the packaging locks counter-clockwise several times.
- ② Pull out and discard the packaging locks.

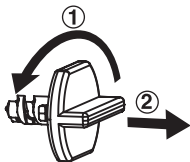


GETTING STARTED

BATTERY INSTALLATION

Train

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the **Train**. Use a screwdriver to loosen the screw.
3. Install 2 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure the battery cover.

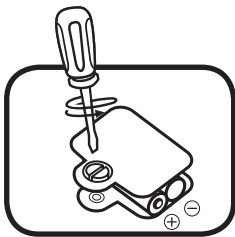


BATTERY NOTICE


- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.

- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

LABEL APPLICATION

Please adhere the labels to the playset securely as indicated on the following pages:

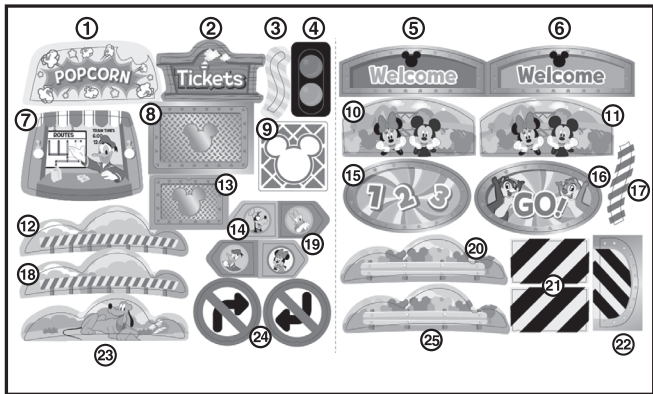

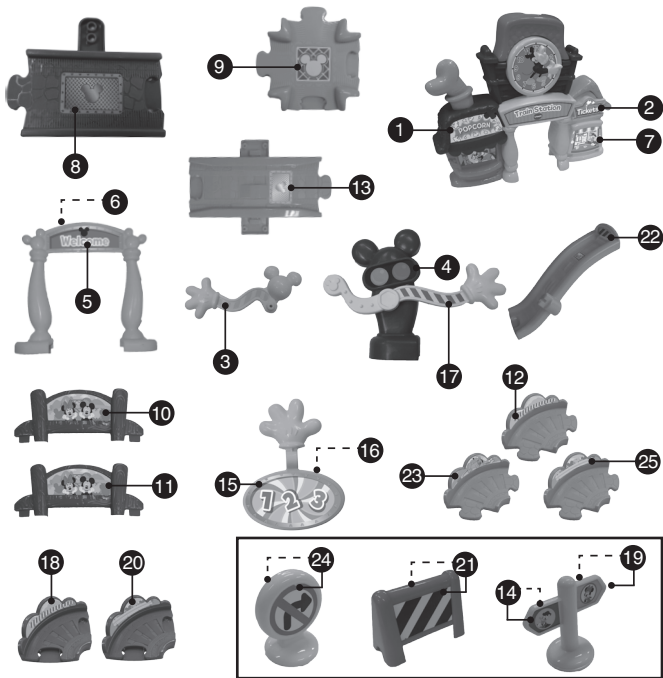

Two of the three accessories shown above are included. Please see the possible combinations below:




ASSEMBLY INSTRUCTIONS


Mickey Choo-Choo Express

With the VTech® Go! Go! Smart Wheels® Mickey Choo-Choo Express, safety comes first. To ensure your child's safety, adult assembly is required.

1. Insert the **Ramp Support** under the **Ramp Track**, as shown below.

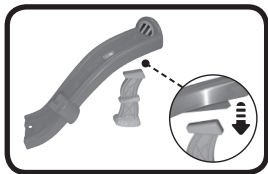


2. Insert the **Gate Arm** into the **Ramp Track**, as shown below. You will hear a “click” sound to indicate the pieces are secure.

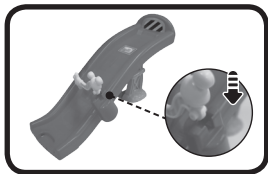


3. Insert the **Streetlight Sign** into the **Streetlight** post, as shown below. Then, insert the **Streetlight** into the **Streetlight 3/4 Straight Track**, as shown below. You will hear a “click” sound to indicate the pieces are secure.



4. Insert the **Gate** into the **Gate Straight Track**, as shown below.

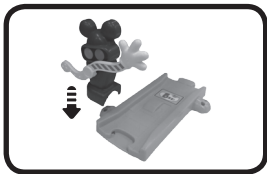


5. Screw the **Entrance** to the **Entrance Straight Track**, as shown below.

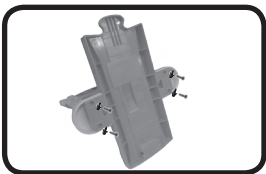



6. Insert **Bridge Wall A** and **B** into the **Bridge Base**, as shown below.




7. Insert the **Flag** into the **Train Station**, as shown below.

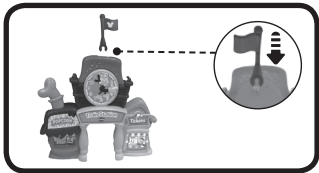

8. Screw the **Train Station** to the **Train Station Straight Track**, as shown below.

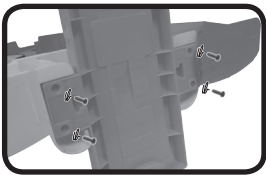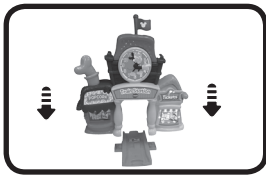


9. After the above steps, connect these pieces to the included track pieces. You can configure them into different arrangements.

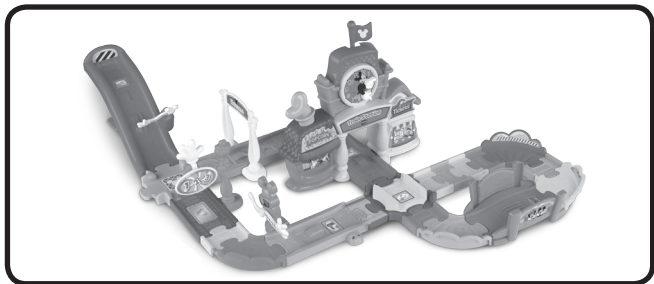

Once you've completed the above steps, you are ready to play! You can connect this playset to other **Go! Go! Smart Wheels®** playsets and tracks (sold separately).

EXPAND & EXPLORE

Connect to the **Go! Go! Smart Wheels® Minnie Ice Cream Parlor** (as shown below) or other **Go! Go! Smart Wheels®** playsets (each sold separately) to expand the **Mickey Choo-Choo Express** and inspire creativity.

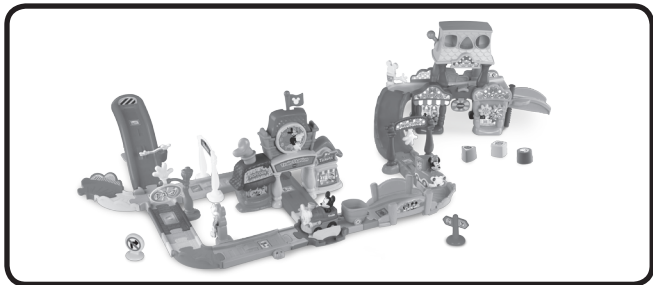


PRODUCT FEATURES

Train

1. ON/OFF SWITCH

To turn the unit **ON**, slide the **On/Off Switch** to the **ON** (⏻) position. To turn the unit **OFF**, slide the **On/Off Switch** to the **OFF** (●) position.

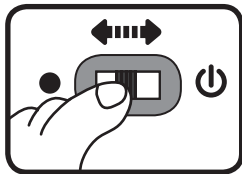

2. AUTOMATIC SHUT-OFF


To preserve battery life, the **Train** will automatically power-down after approximately 50 seconds without input. The unit can be turned on again by pressing the **Character Button** or pushing the **Train** quickly.

Note: This product is in Try-Me mode in the packaging. After opening the package, turn the **Train** off and on again to proceed with normal play. If the unit repeatedly powers down while playing, we suggest changing the batteries.

ACTIVITIES

Train


1. Slide the **On/Off Switch** to the **ON** position to turn the unit **ON** . You will hear a song, a phrase and sounds. The lights will flash with the sounds.

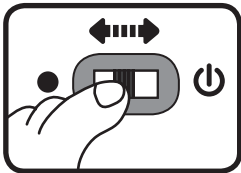

2. Press the **Character Button** to hear fun sounds, songs and phrases. The lights will flash with the sounds.



3. Push the **Train** to hear fun sounds and melodies. While the melody is playing, push the vehicle again to add in fun sounds on top of the melody. The lights will flash with the sounds.

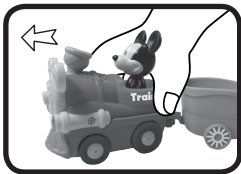

4. For added fun, the **Train** interacts with the **Go! Go! Smart Wheels® Mickey Choo-Choo Express**. Simply roll or put the **Train** on one of the playset's five **SmartPoint®** locations to hear the **Train** play fun sounds, short tunes and phrases.

ACTIVITIES

Mickey Choo-Choo Express

1. Place the **Train** on any of the playset's five **SmartPoint®** locations to trigger fun sounds, phrases and music.
2. Turn the hands on the **Mickey Clock** and hear a clicking sound.
3. Connect the **Train** to the train car and carry road signs around.



4. Press the hat to reveal Goofy in the popcorn booth.



5. Spin the **Train** around the switch track and choose a direction for Mickey to go down the track.



SONGS

1. All aboard, it's time to go,
Are you ready?
2. Chug along the railroad tracks,
Railroad tracks,
Railroad tracks,
Chug along the railroad tracks.
Come and chug along.
3. Get your tickets at the station,
For a trip to your next location!

MELODY LIST

1. London Bridge
2. Mary Had a Little Lamb
3. My Bonnie Lies Over the Ocean
4. Oh! Dear, What Can the Matter Be?
5. Old MacDonald Had a Farm
6. One, Two, Buckle My Shoe

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit sit for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our website at vtechkids.com and filling out our Contact Us form located under the Customer Support link. A service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **VTech**[®] products is accompanied by a responsibility that we at **VTech**[®] take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800- 521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our website at vtechkids.com and filling out our Contact Us form located under the Customer Support link with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:
(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION.

CAN ICES-3 (B)/NMB-3(B)

**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com

Read our complete warranty policy online at
vtechkids.com/warranty



TM & © 2018 VTech Holdings Limited.
All rights reserved.

Printed in China.

91-003526-000 