

**vtech**<sup>®</sup>

User's Manual

# Turn & Sing Flower™



© 2012 VTech  
Printed In China  
91-002691-007 

Dear Parent,

Ever notice the look on your baby's face when they learn something new through their own discovery? These self-accomplished moments are a parent's greatest reward. To help fulfill them, **VTech®** created the **Infant Learning®** series of toys.

These unique interactive learning toys directly respond to what children do naturally – play! Using innovative technology, these toys react to baby's interactions, making each play experience fun and unique as they learn age-appropriate concepts like first words, numbers, shapes, colors and music. More importantly, **VTech®'s Infant Learning®** toys develop baby's mental and physical abilities by inspiring, engaging and teaching.

At **VTech®**, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting **VTech®** with the important job of helping your child learn and grow!

Sincerely,


Your friends at **VTech®**

To learn more about the **Infant Learning®** series and other **VTech®** toys, visit [www.vtechkids.com](http://www.vtechkids.com)

# INTRODUCTION

Thank you for purchasing the **VTech® Turn & Sing Flower™** learning toy!

The **Turn & Sing Flower™** is the perfect 2-in-1 take along toy for your baby! This happy little flower easily attaches to a stroller bar or it can be used alone as a rattle. Your child will love pushing the little bug buttons and turning the brightly colored petals to hear fun phrases and music. For added interactivity, the flower has a motion sensor that activates engaging sounds as your baby plays with the toy.

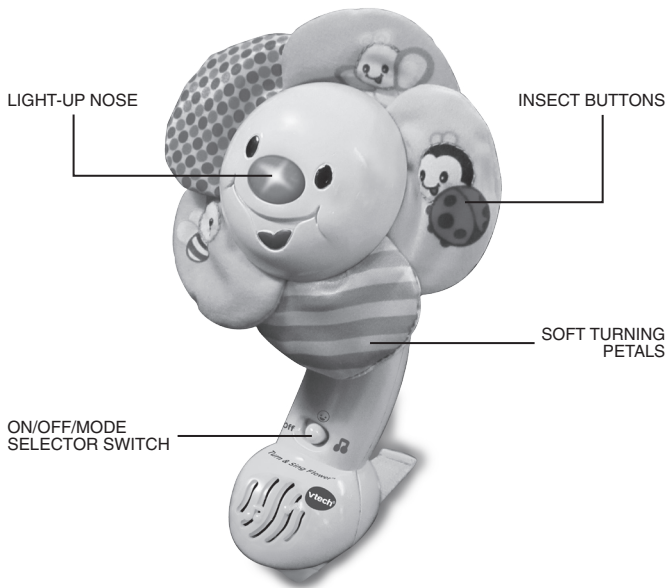

# INCLUDED IN THIS PACKAGE

- One VTech® Turn & Sing Flower™ learning toy
- One user's manual

**WARNING:** All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.


**ATTENTION:** Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.

**NOTE:** Please keep this user's manual as it contains important information.

## GETTING STARTED

### BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the flower stem. Use a screwdriver to loosen the screw.
3. Install 2 new 'AAA' (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure.

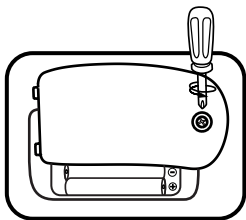

## BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

# PRODUCT FEATURES

## 1. ON/OFF/MODE SELECTOR SWITCH

To turn the unit **ON**, slide the **ON/OFF/MODE SELECTOR SWITCH** to the **PLAY MODE** (☺) or the **MUSIC MODE** (🎵) position. To turn the unit **OFF**, slide the **ON/OFF/MODE SELECTOR SWITCH** to the **OFF (off)** position.



## 2. STROLLER ATTACHMENT STRAP

The stroller attachment strap is located on the bottom of the unit. Wrap the fabric strap around the stroller bar, then thread the strap through the ring. Tighten the strap and fasten the Velcro securely.



## 3. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® Turn & Sing Flower™** will automatically power-down after approximately 24 seconds without input. The unit can be turned on again by pressing the insect buttons. The motion sensor and the turning petals will not turn the unit back on.

# ACTIVITIES

1. Slide the **on/off/mode selector switch** to select a mode of play. You will hear a fun song and phrase. The light will flash with the sound.



2. Turn the **flower petals** to hear fun phrases, sing-along songs and short tunes in the play mode. Shake the flower or turn the flower petals while a song is playing to hear giggling and insect sounds play over the songs. In the music mode you will hear a song or a variety of soft music. The light will flash with sound.



3. Shake the flower to hear fun melodies in the play mode. Shake the flower while the melodies are playing to increase the tempo of the melodies. In the music mode, shake the flower to hear a variety of soothing nature sounds. The light will flash with sound.



4. Press the **insect buttons** to hear fun sounds, talking phrases and sing-along songs in the play mode. In the music mode, you will hear nature sounds and a variety of soothing melodies. The light will flash with the sound.



## MELODY LIST

1. Shoo Fly
2. Little Boy Blue
3. Bicycle Built for Two
4. Spring (Vivaldi)
5. All Through the Night
6. Lavender's Blue
7. Irish Lullaby
8. Scene from Swan Lake (Tchaikovsky)
9. Fais Dodo
10. Greensleeves
11. Shenandoah
12. Spring song (Mendelssohn)
13. To a Wild Rose
14. Cradle Song
15. Beautiful Dreamer
16. Rock-A-Bye Baby

## SUNG SONG LYRICS

### SONG 1

I'm a happy little flower,  
I like to smile, I like to giggle!

### SONG 2

1-2-3, it's sleepy time for me.



### **SONG 3**

Bees make honey,  
Sweet and sticky honey!

### **SONG 4**

The ladybug crawls,  
Round and round, side to side!

### **SONG 5**

The butterfly likes to fly,  
She flies up, she flies down!

## **CARE & MAINTENANCE**

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

# TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

For information on this product's warranty, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada.

**IMPORTANT NOTE:**

Creating and developing **Infant Learning** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

**FCC Information:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

**Caution:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES-003.

CET APPAREIL NUMÉRIQUE DE LA CLASSE B EST CONFORME À LA NORME NMB-003 DU CANADA.

