

Instruction Manual


Soothing Slumbers Sloth Projector™



INTRODUCTION

Thank you for purchasing the **Soothing Slumbers Sloth Projector™**.

Help little ones self soothe. When baby cries, the softly projecting sloth responds with calming lullabies and nature sounds.

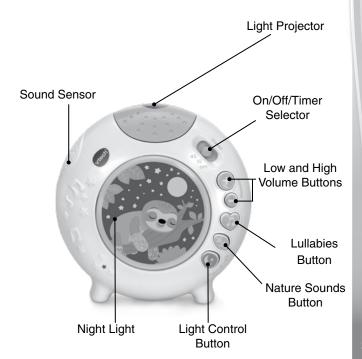

INCLUDED IN THE PACKAGE

- Soothing Slumbers Sloth Projector[™]
- · Quick Start Guide

WARNING

All packing materials, such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.

ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes et vis d'emballage. Ils ne font pas partie du jouet.

NOTE

Il est conseillé de sauvegarder ce guide d'instructions car il comporte des informations importantes.

Removing the Packaging Locks



- Turn the packaging lock counterclockwise several times.
- 2 Pull out and discard the packaging lock.

GETTING STARTED

Battery Removal and Installation

- Make sure the unit is turned Off.
- 2. Find the battery cover on the back of the unit, use a screwdriver to loosen the screw, and then open the battery cover.
- 3. Remove old batteries by pulling up on one end of each battery.
- Install 3 new AA (AM-3/LR6) batteries following the diagram 4. inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
- 5. Replace the battery cover and tighten the screw to secure.

WARNING:

 
Adult assembly required for battery installation. Keep batteries out of reach of children.

ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte. Tenir les piles ou accumulateurs hors de portée des enfants.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.



- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

IMPORTANT : INFORMATIONS CONCERNANT LES PILES

- Mettre en place les piles ou les accumulateurs en respectant les polarités + et –.
- Ne pas mélanger des piles ou des accumulateurs neufs avec des usagés.
- Ne pas mélanger différents types de piles : alcalines, zinccarbone et rechargeables.
- Seules des piles du type recommandé doivent être utilisées.
- Ne pas mettre les bornes d'une pile ou d'un accumulateur en court-circuit (en reliant directement le + et le -).
- Retirer les piles ou les accumulateurs en cas de non-utilisation prolongée.
- Enlever les piles ou les accumulateurs usagés du jouet.
- Ne les jeter ni au feu ni dans la nature.

PILES RECHARGEABLES:

- Enlever, lorsque c'est possible, les accumulateurs du jouet pour les recharger.
- Les accumulateurs ne doivent être chargés que sous la surveillance d'un adulte.
- Ne pas tenter de recharger des piles non rechargeables.

PRODUCT FEATURES

1. On/Off/Timer Selector

To turn the unit On, slide the On/Off/ Timer Selector to the 15 mins **15** or 45 mins **45** position. To turn the unit Off, slide the selector to the Off OFF position.



2. Volume Buttons



3. Light Control Button

Press the **Light Control Button** to choose between the night light and the light projection.



4. Sound Sensor

This projector is equipped with a special **Sound Sensor**. Once the set time is up, the unit will automatically shut off. The sensor will turn on the program when it detects baby's cry for approximately two seconds without interruption. The unit will turn on and play lullabies or nature sounds.

5. Automatic Shut Off

To preserve battery life, the **Soothing Slumbers Sloth Projector™** will automatically shut off after the timer has expired. The unit can be turned on again by pressing any button or when baby's cries are detected.

NOTE

If the unit powers down or if the light fades out during play, please install a new set of batteries.

ACTIVITIES

1. Lullabies Button

 
Press the Lullabies Button to hear sing-along songs, phrases and soothing melodies. The projector will light up and the night light will glow.



2. Nature Sounds Button



Press the Nature Sounds Button to hear soothing tones. The projector will light up and the night light will glow.



MELODY LIST

- 1. Canon in D Pachelbel
- 2. Eine Kleine Nachtmusik Mozart
- 3. Für Elise Beethoven
- 4. Greensleeves Mozart
- 5. Happy Farmer Schumann
- 6. Kinderszenen Schumann
- Magic Flute Mozart
- 8. Minuet in G Major Bach
- 9. Moonlight Sonata Beethoven
- 10. Peer Gynt Suite No. 1 Op. 46 I. Morning Mood Grieg
- 11. Piano Sonata No. 16 in C Major Mozart
- 12. Sérénade Hadyn
- 13. Sleeping Beauty Waltz Tchaikovsky
- 14. Twinkle, Twinkle, Little Star
- 15. Rondo a Capriccio Beethoven
- 16. Ode to Joy Beethoven
- 17. Hickory, Dickory, Dock
- 18. Lullaby Brahms
- 19. Sweet Adeline
- 20. Roses Are Red
- 21. Spring Song Mendelssohn
- 22. Toyland
- 23. Air on the G String Bach
- 24. Hush Little Baby
- 25. Mary Had a Little Lamb
- 26. Row, Row, Row Your Boat

- 27. Swan Lake Tchaikovsky
- 28. Au Clair de la Lune
- 29. Cradle Song Mozart
- 30. To a Wild Rose MacDowell
- 31. Prelude and Fugue No. 1 Bach
- 32. New World Symphony Dvorak
- 33. Good Morning, Merry Sunshine
- 34. Here We Go 'Round the Mulberry Bush
- 35. Nocturne Op. 9 No. 2 Chopin
- 36. Diddle Diddle Dumpling
- 37. Turkish March Mozart
- 38. Oh, Dear! What Can the Matter Be?
- 39. Frère Jacques
- 40. The Blue Danube Waltz Strauss

SONG LYRICS

Song 1

Oh, don't you want to go to sleep Go to sleep, go to sleep Oh, don't you want to go to sleep And wake up feeling fresh.

Song 2

Rock-a-bye baby, now go to sleep Let's play sweet music and count some sheep Tomorrow will be a braaaand new day And up will be baby ready to play

Song 3

Go to sleep, go to sleep, go to sleep my sweet baby!

CARE & MAINTENANCE

- 1. Keep the unit clean by wiping it with a slightly damp cloth.
- Keep the unit out of direct sunlight and away from any direct heat sources.
- Remove the batteries if the unit will not be in use for an extended period of time.
- Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

- 1. Turn the unit Off.
- 2. Interrupt the power supply by removing the batteries.
- 3. Let the unit stand for a few minutes, then replace the batteries.
- 4. Turn the unit On. The unit should now be ready to use again.
- 5. If the unit still does not work, install a new set of batteries.

IMPORTANT NOTE:

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our website at vtechkids.com and filling out our Contact Us form located under the Customer Support link. Creating and developing VTech® products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions that you might have. A service representative will be happy to help you.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- · Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Supplier's Declaration of Conformity

47 CFR § 2.1077 Compliance Information

Trade Name: VTech® Model: 5403

Product Name: Soothing Slumbers Sloth Projector™
Responsible Party: VTech Electronics North America, L.L.C.

Address: 1156 W. Shure Drive, Suite 200

Arlington Heights, IL 60004

Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

Visit our website for more information about our products, downloads, resources and more.

vtechkids.com vtechkids.ca

Read our complete warranty policy online at vtechkids.com/warranty vtechkids.ca/warrantv

