

vtech®


User's Manual

**Go!Go!  
Smart Wheels®**  
*Playtime with miles of learning™*

**Advent Calendar**



© 2016 VTech  
Printed in China  
91-003269-000 US



Dear Parent,

Welcome to the world of **Go! Go! Smart Wheels**®! We're excited you've decided to ride along with us and explore all that **Go! Go! Smart Wheels**® has to offer. These toys have been designed to give your child a thrilling learning experience with hours and hours of fun as well.

**Go! Go! Smart Wheels**® features vehicles that interact with your child by lighting up, singing and talking, while teaching your child letters and vehicle names (each sold separately). There are other surprises in store, too! With our innovative **SmartPoint**® technology, available on **Go! Go! Smart Wheels**® playsets (each sold separately), your child will smile as they hear **SmartPoint**® vehicles respond to each unique **SmartPoint**® location with singing, sound effects and fun phrases.

Our **Go! Go! Smart Wheels**® playsets also feature buttons, gears and other mechanical features to encourage the development of your child's fine motor skills. Many of the playsets also have tracks that can be arranged in endless ways, stimulating your child's creativity. In addition, all the **Go! Go! Smart Wheels**® playsets connect to other playsets in the collection, so there's no end to what your child can do!

With **Go! Go! Smart Wheels**®, it's playtime with miles of learning!™

 
Sincerely,  
Your friends at **VTech**®

To learn more about **VTech**® toys, visit [vtechkids.com](http://vtechkids.com)

# INTRODUCTION

Create holiday magic with the **Go! Go! Smart Wheels® Advent Calendar**. This interactive advent calendar is full of surprises and includes a Christmas sleigh, and 24 **Go! Go! Smart Wheels®** gifts. You can also flip the box into a roadway for even more excitement.

**SMARTPOINT®**  
PLATFORM

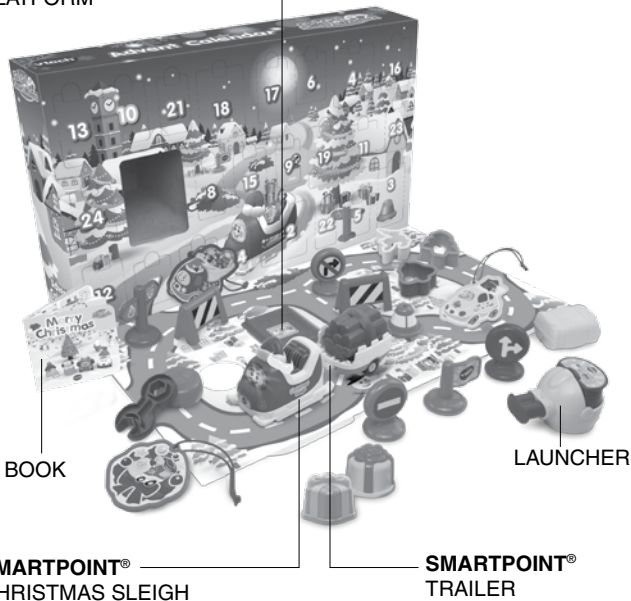

BOOK

LAUNCHER

**SMARTPOINT®**  
CHRISTMAS SLEIGH

**SMARTPOINT®**  
TRAILER

## INCLUDED IN THIS PACKAGE



One **SmartPoint**<sup>®</sup>  
Christmas Sleigh



One launcher



One **SmartPoint**<sup>®</sup>  
trailer



One Christmas  
book



One cone



One directional sign



Two road blocks



 
One tire



One flag



One **SmartPoint**<sup>®</sup>  
platform

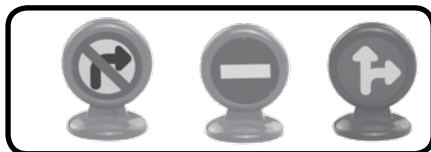

Three circle signs

INCLUDED IN THIS PACKAGE



One wrench



One wood pile



 
One hay bale



Three clay cutters



Two presents pieces

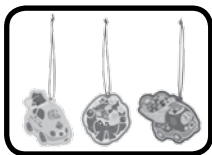

Three Christmas decorations



User's manual

INCLUDED IN THIS PACKAGE

### **WARNING:**

All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy and should be discarded for your child's safety.

### **ATTENTION:**

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.

 
### **NOTE:**

Please keep this user's manual as it contains important information.

## **GETTING STARTED**

### **BATTERY INSTALLATION – CHRISTMAS SLEIGH**

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the Christmas sleigh. Use a coin or a screwdriver to loosen the screw.
3. Install 2 new "AAA" (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure.

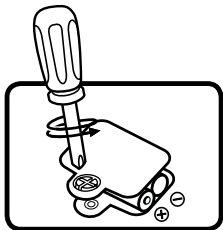




## BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

## PRODUCT FEATURES – CHRISTMAS SLEIGH

### 1. ON/OFF SWITCH

 To turn the Christmas sleigh **ON**, slide the **ON/OFF SWITCH** on the Christmas sleigh to the **ON** (  ) position. To turn the Christmas sleigh **OFF**, slide the **ON/OFF SWITCH** to the **OFF** (  ) position.

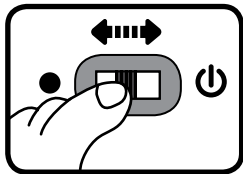



## 2. AUTOMATIC SHUT-OFF

To preserve battery life, the Christmas sleigh included with the **VTech® Go! Go! Smart Wheels® Advent Calendar** will automatically power-down after approximately 65 seconds without input. The unit can be turned on again by pressing the light-up button or pushing the Christmas sleigh quickly.

**Note:** This product is in try-me mode in the packaging. After opening the package, turn the vehicle off and on again to proceed with normal play. If the unit powers down while playing, we suggest changing the batteries.

## ACTIVITIES – CHRISTMAS SLEIGH

  1. Slide the **ON/OFF SWITCH** to the **ON** position to turn the unit **ON**. You will hear a song, a phrase and sounds. The light will flash with the sounds.
2. Press the light-up button to hear fun sounds, songs and phrases. The light will flash with the sounds.
3. Push the Christmas sleigh to hear fun sounds and Christmas melodies. While the melody is playing, push the sleigh again to add fun sounds on top of the melody. The light will flash with the sounds.

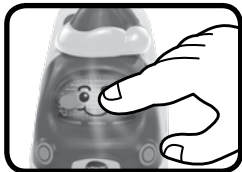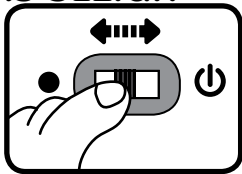



4. For added fun, the Christmas sleigh interacts with the **Go! Go! Smart Wheels® Advent Calendar**. Simply place the Christmas sleigh on the playset's **SmartPoint®** locations to hear the Christmas sleigh play Christmas phrases, fun sounds and short tunes.


## PRODUCT FEATURES - ADVENT CALENDAR
 
### 1. SMARTPOINT® LOCATION

The **Advent Calendar** includes two **SmartPoint®** locations that interacts with the included Christmas sleigh or any other **Go! Go! Smart Wheels® SmartPoint®** vehicle (each sold separately). Simply place the vehicle over a **SmartPoint®** location to hear fun sounds, phrases and Christmas songs.

### 2. ACTIVITIES – ADVENT CALENDAR

1. The **Advent Calendar** gift box includes **24 windows** with gifts to countdown to Christmas. Your child can open the windows to find fun gifts.
2. One **SmartPoint®** platform is included. Remove the sticker backing from the underside of the platform and discard the backing. Adhere the platform to the area of the gift box that says, "**SmartPoint®**".

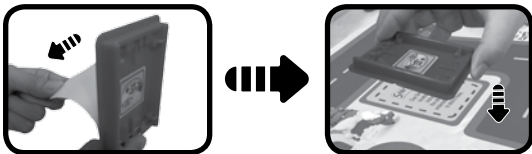



## CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

## TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our web site at [www.vtechkids.com](http://www.vtechkids.com) and filling out our Contact Us form located under the Customer Support link. A service representative will be happy to help you.


**IMPORTANT NOTE:**

Creating and developing **Infant Learning** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our web site at [www.vtechkids.com](http://www.vtechkids.com) and filling out our Contact Us form located under the Customer Support link with any problems and/or suggestions that you might have. A service representative will be happy to help you.

**NOTE:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



**Caution:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION.

*CAN ICES-3 (B)/NMB-3(B)*



## PRODUCT WARRANTY

This Warranty is applicable only to the original purchaser, is non-transferable and applies only to "VTech" products or parts. This product is covered by a 3-month Warranty from the original purchase date, under normal use and service, against defective workmanship and materials. This Warranty does not apply to (a) consumable parts, such as batteries; (b) cosmetic damage, including but not limited to scratches and dents; (c) damage caused by use with non-VTech products; (d) damage caused by accident, misuse, unreasonable use, immersion in water, neglect, abuse, battery leakage, or improper installation, improper service, or other external causes; (e) damage caused by operating the product outside the permitted or intended uses described by VTech in the owner's manual; (f) a product or part that has been modified (g) defects caused by normal wear and tear or otherwise due to the normal aging of the product; or (h) if any VTech serial number has been removed or defaced.

Prior to returning a product for any reason, please notify the VTech Consumer Services Department by going to our web site at [www.vtechkids.com](http://www.vtechkids.com), filling out our Contact Us form located under the Customer Support link or calling 1-800-521-2010.

If the service representative is unable to resolve the issue, you will be provided instructions on how to return the product and have it replaced under Warranty. Return of the product under Warranty must adhere to the following rules: If VTech believes that there may be a defect in the materials or workmanship of the product and can confirm the purchase date and location of the product, we will at our discretion replace the product with a new unit or product of comparable value. A replacement product or parts assumes the remaining Warranty of the original product or 30 days from the date of replacement, whichever provides longer coverage.

**THIS WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL, WRITTEN, STATUTORY, EXPRESS OR IMPLIED. IF VTECH CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY AND TO THE REPLACEMENT SERVICE AS DETERMINED BY VTECH IN ITS SOLE DISCRETION.**

To the extent permitted by law, VTech will not be responsible for direct, special, incidental or consequential damages resulting from any breach of Warranty.

This Warranty is not intended to persons or entities outside the United States of America. Any disputes resulting from this Warranty shall be subject to the final and conclusive determination of VTech.