

vtech[®]
baby

Instruction Manual


7-in-1 Senses & Stages Developmental Gym™



INTRODUCTION

Thank you for purchasing the **7-in-1 Senses & Stages Developmental Gym™** learning toy.

Start your baby off right with this newborn-to-toddler play gym. From tummy time to ball-pit fun and everything in between, this gym features sensory play zones and accessories to support your child's developmental stages from early visual awareness to interactive learning with the detachable, take-along panel.

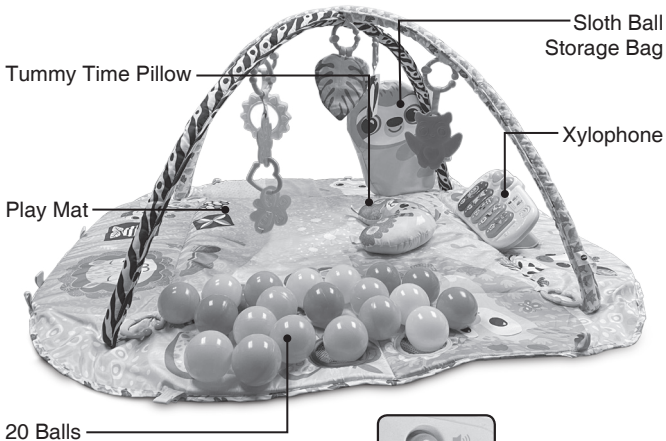

Developmental Guide




On/Off/Volume Selector




Mode Selector

INCLUDED IN THE PACKAGE

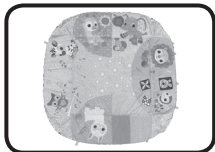

Play Mat

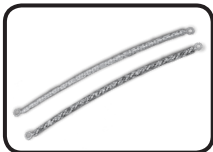


2 Arch Pieces



Xylophone



Xylophone/Card
Stand

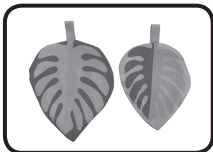

2 Crinkle Leaves



Sun Mirror



Owl Toy



Sloth Ball Storage Bag




Tummy Time Pillow




2 Linking Toys



4 Image Cards

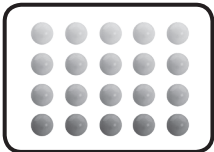

20 Balls

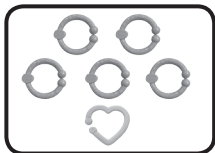

6 Activity Links



Developmental Guide

- Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.


ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

NOTE

Il est conseillé de sauvegarder ce manuel d'utilisation car il comporte des informations importantes.

Unlock the Packaging Locks

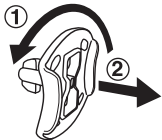


- ① Rotate the packaging locks counterclockwise 90 degrees.
- ② Pull out the packaging locks and discard.

GETTING STARTED

Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the back of the xylophone, use a screwdriver to loosen the screw, and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 3 new AA batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

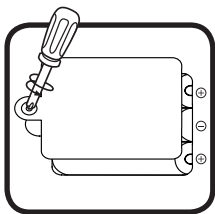

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.



ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.
Tenir les piles ou accumulateurs hors de portée des enfants.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries (if removable) from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

IMPORTANT : INFORMATIONS CONCERNANT LES PILES

- Mettre en place les piles ou les accumulateurs en respectant les polarités + et -.
- Ne pas mélanger des piles ou des accumulateurs neufs avec des usagés.
- Ne pas mélanger différents types de piles : alcalines, zinc-carbone et rechargeables.
- Seules des piles du type recommandé doivent être utilisées.
- Ne pas mettre les bornes d'une pile ou d'un accumulateur en court-circuit (en reliant directement le + et le -).
- Retirer les piles ou les accumulateurs en cas de non-utilisation prolongée.
- Enlever les piles ou les accumulateurs usagés du jouet.
- Ne les jeter ni au feu ni dans la nature.

PILES RECHARGEABLES :

- Enlever, lorsque c'est possible, les accumulateurs du jouet pour les recharger.
- Les accumulateurs ne doivent être chargés que sous la surveillance d'un adulte.
- Ne pas tenter de recharger des piles non rechargeables.

ASSEMBLY INSTRUCTIONS


With the **7-in-1 Senses & Stages Developmental Gym™**, safety comes first. To ensure your child's safety, adult assembly is required. For your child's safety, do not let your child play with the toy until it is fully assembled.

Gym Assembly

1. Lay the two arches criss-crossed with the black-and-white arch over the top of the colorful arch. Slide the C-ring at the end of the black-and-white arch through the middle loop on the colorful arch, then guide the fabric portion of the arch through the middle loop until the two arches are even.
2. Lay the arches on top of the **Play Mat**.



3. Connect the C-rings at the end of each of the arches to the fabric loops on each corner of the **Play Mat**.

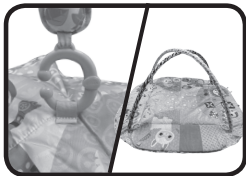

NOTE

Install arches carefully. Keep arches away from children until the gym is fully assembled. Until secured, arches may spring out of place.


4. Attach the sensory toys to the activity links, then attach them to the fabric loops on the arches.



5. You have the option to attach the **Sloth Ball Storage Bag** to the side of one of the arches. Use the hook and loop closure on the sloth's paws to secure the bag to the arch.





6. Attach the **Xylophone** to the **Play Mat**. Feed the two attachment tabs on the **Play Mat** through the slots on the back of the **Xylophone**.

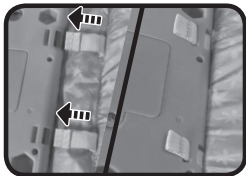


Kicking Play Assembly

1. To prop up the **Xylophone** for kicking play, attach the **Xylophone** to the **Play Mat** following the instructions in the section above. Take the xylophone/card stand and insert it through the holes on the **Play Mat** and into the slots on the back of the **Xylophone**. The flat part of the xylophone/card stand should prop the **Xylophone** up at a 90 degree angle.
2. Fold up the side of the **Play Mat** to prop up the **Xylophone**. Connect the fabric loops and tabs on the arches and **Play Mat** to secure.

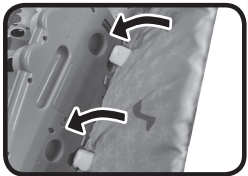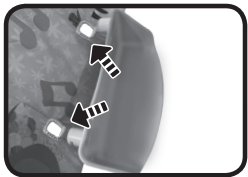

Tummy Time Play

1. Remove the **Xylophone** from the **Play Mat** by removing the attachment tabs that secure the **Xylophone** to the **Play Mat**.
2. Place the xylophone/card stand attachment with the rounded side facing up. Insert the two tabs on the back of the **Xylophone** into the slots on the xylophone/card stand attachment.

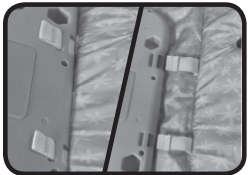

3. The xylophone/card stand attachment can also be used to prop up the sun mirror and the image cards.




Floor Play

1. The **Play Mat** can be used for tummy time play or seated play. Detach the sensory toys from the arches, then remove the arches by detaching the activity rings from the fabric loops on the **Play Mat**. Attach the sensory toys to the fabric loops on the **Play Mat** and prop up the image cards in the xylophone/card stand.



Ball Pit/Play Space

1. Fold up each side of the **Play Mat** to create the ball pit. Connect the four corners by inserting the fabric tabs through the fabric loops.
2. Remove the 20 **Balls** from the **Sloth Ball Storage Bag** and put them into the assembled ball pit.
3. Play with or without the arches attached.

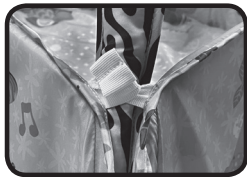
 



NOTE

We recommend supervising your baby during all of playtime with the **7-in-1 Senses & Stages Developmental Gym™**.




PRODUCT FEATURES


1. On/Off/Volume Selector

To turn the unit **On**, slide the **On/Off/Volume Selector** to the Low Volume  or the High Volume  position. To turn the unit **Off**, slide the **On/Off/Volume Selector** to the **Off**  position.



2. Mode Selector

Slide the **Mode Selector** to the Music Mode , Animal Mode  or Explore Mode  position.

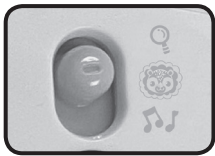

3. Automatic Shut Off

To preserve battery life, the **7-in-1 Senses & Stages Developmental Gym™** will automatically shut off after approximately 50 seconds without input. The unit can be turned on again by pressing any button.

NOTE

If the unit powers down or if the light fades out during play, please install a new set of batteries.

ACTIVITIES

1. Light-Up Xylophone Buttons

Press the xylophone buttons to hear fun sounds and melodies in Music Mode, learn about animals and their sounds in Animal Mode and learn numbers, shapes and colors in Explore Mode. The lights will flash with the sounds.



MELODIES

1. Pat-a-Cake
2. Little Miss Muffet
3. A-Tisket, A-Tasket
4. Old MacDonald Had a Farm
5. Jack Be Nimble
6. Pussy Cat, Pussy Cat
7. Little Boy Blue
8. One, Two, Buckle My Shoe
9. Humpty Dumpty
10. London Bridge

SONG LYRICS

Song 1

Come and play,
You'll learn too.
Numbers, counting, different shapes.
There's lots to see!

Song 2

Tap the xylophone, hear fun sounds.
Sounds are bouncing all around.

Song 3

Little one, come meet some new friends.
They're from the jungle, they run and roar.
Some have spots, others have stripes.
Each has something new to teach.

Song 4

Lion loves running.

Song 5

Giraffe has lots of spots.

Song 6

Zebra has fun stripes.

Song 7

Sloth crawls slowly.

Song 8

Owl glides through the sky.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
5. The play mat and tummy time pillow are machine washable. The arches and leaves are surface washable only. Please remove the electronic module before cleaning and follow the care instructions on the tags.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

IMPORTANT NOTE:

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S. or **1-877-352-8697** in Canada, or by going to our website at **vtechkids.com** and filling out our **Contact Us** form located under the **Customer Support** link. Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions that you might have. A service representative will be happy to help you.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Supplier's Declaration of Conformity

47 CFR § 2.1077 Compliance Information

Trade Name: VTech®
Model: 5500
Product Name: 7-in-1 Senses & Stages Developmental Gym™
Responsible Party: VTech Electronics North America, L.L.C.
Address: 1156 W. Shure Drive, Suite 200
Arlington Heights, IL 60004
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION

**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com
vtechkids.ca

Read our complete warranty policy online at
vtechkids.com/warranty
vtechkids.ca/warranty

