



Parent's Guide

Ready to Race


Lightning McQueen™



91-003391-008 ©

INTRODUCTION

Thank you for purchasing the **VTech® Ready to Race Lightning McQueen™**. Get ready to learn and race with Lightning McQueen! Three modes of play and 15 interactive activities provide an enriched learning experience in a fun and engaging way. Cool animations, sound effects and a driving panel to play racing games add to the fun.

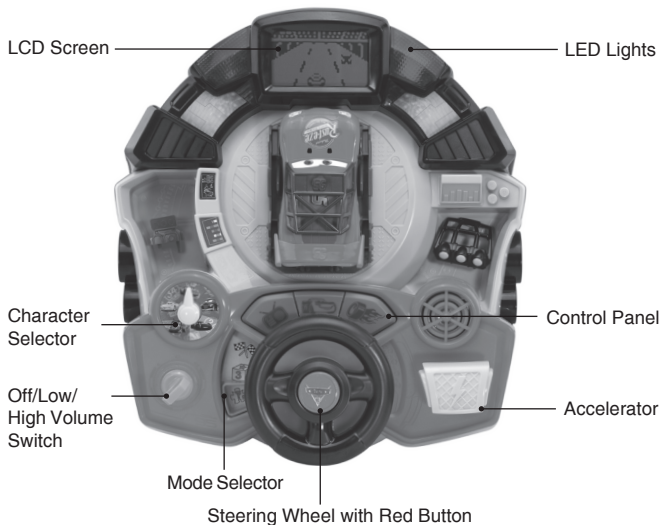

INCLUDED IN THIS PACKAGE

- One VTech® Ready to Race Lightning McQueen™
- Four accessories
- One parent's guide

WARNING:

All packing materials, such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.


ATTENTION:

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes et vis d'emballage. Ils ne font pas partie du jouet.

NOTE:

Please keep this user's manual as it contains important information.

Unlock the packaging locks:

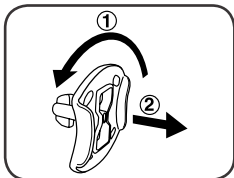


- ① Rotate the packaging locks 90 degrees counterclockwise.
- ② Pull out the packaging locks.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit and open it.
3. Install 2 new AA size (LR6/AM-3) batteries. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover.

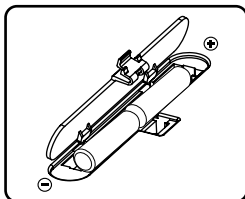

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

PRODUCT FEATURES

1. Off/Low/High Volume Switch

Turn the **Off/Low/High Volume Switch** to the low volume (🔊) or high volume (🔊) position to turn the unit ON. Turn the switch to the OFF ● position to turn the unit OFF.



2. Mode Selector

Slide the **Mode Selector** to choose between 3 modes of play.



3. Character Selector

Turn the **Character Selector** for a different race or activity in every mode.



4. Steering Wheel & Red Button

Turn the **Steering Wheel** to select an answer and press the **Red Button** to confirm, or use the **Steering Wheel** to steer Lightning McQueen in the racing games.



5. Control Panel

Press the buttons on the **Control Panel** to hear radio sounds, Lightning McQueen's voice and engine sounds, or to boost your speed in the racing games.



6. Accelerator

Use the **Accelerator** to control Lightning McQueen's speed in the racing games. Move up to go and down to stop.



7. Accessories

Attach the accessories to Lightning McQueen to improve his performance in different racing games.

- **Max Power Engine**

The **Max Power Engine** improves acceleration. Use this in all of the races to improve performance.



- **Roll Cage**

The **Roll Cage** adds impact protection. Use this in the Thunder Hollow Crazy 8 Race to maintain performance and avoid damage.



- **Light Rack**

The **Light Rack** provides extra light. Use this in the Midnight Run Race to improve visibility.



- **Super Spoiler**

The **Super Spoiler** helps improve high speed grip. Use this in all of the races to improve performance.





8. Accessories Storage

Store all the accessories in this storage compartment.



9. Automatic Shut Off


To save power, the **VTech® Ready to Race Lightning McQueen™** will turn OFF automatically after several minutes without input. Turn the **Off/Low/High Volume Switch** to the low volume (🔊) or high volume (🔊🔊) position to turn the unit ON again.

The unit will also turn OFF automatically when the batteries are very low.

ACTIVITIES

Choose a mode and then a character for the following responses:

1. Race Time Mode

Turn the Character Selector to choose a race then help Lightning McQueen prepare by choosing the correct accessory. When the race begins, use the accelerator to go/stop and the steering wheel to turn. A turbo boost is available for every 10 seconds that no obstacles have been hit. When the bar in the upper left corner of the screen fills up, press the turbo button  on the Control Panel for a boost of speed.

Lightning McQueen: Rust-eze Racing Center Race

Steer Lightning McQueen as he trains on the simulator at the Rust-eze Racing Center. Attach the Max Power Engine and the Super Spoiler to Lightning McQueen to improve performance.

Junior Moon: Midnight Run

Steer Lightning McQueen as he races with Junior Moon in the Midnight Run Race. Attach the Max Power Engine and the Super

Spoiler to Lightning McQueen to improve performance. Attach the Light Rack to improve visibility.

Jackson Storm: Florida 500 Race

Steer Lightning McQueen as he races with Jackson Storm in the Florida 500 Race. Attach the Max Power Engine and the Super Spoiler to Lightning McQueen to improve performance.

Miss Fritter: Thunder Hollow Crazy 8 Race

Steer Lightning McQueen as he races with Miss Fritter in the Thunder Hollow Crazy 8 Race. Attach the Max Power Engine and the Super Spoiler to Lightning McQueen to improve performance. Attach the Roll Cage to maintain performance and avoid damage.

Cruz Ramirez: Fireball Beach Race

Steer Lightning McQueen as he races with Cruz Ramirez in the windy Fireball Beach Race. Attach the Max Power Engine and the Super Spoiler to Lightning McQueen to improve performance.

2. Pit Stop Mode



Turn the **Character Selector** to play a different game with each character.

Lightning McQueen: Sticker Fixer

Lightning McQueen had his new graphics applied at the Rust-eze Racing Center, but half of the graphic is missing. Help find the correct half to finish the graphic. Use the Steering Wheel to select and then press the Red Button to answer.

Junior Moon: Clean Up the Parts

Junior Moon is tidying up his tools. Count the number of tools, then use the Steering Wheel to select the correct number and press the Red Button to confirm.



Jackson Storm: Find Jackson Storm

Jackson Storm is hiding in one of the trailers. Watch carefully then use the Steering Wheel to find the correct trailer that Jackson Storm is hiding inside, and press the Red Button to confirm.

Miss Fritter: Miss Fritter's Plates

At the Thunder Hollow track, Lightning McQueen crashes into Miss Fritter and all her plates fall off. To help her put them back, find the beginning letter of the word shown. Use the Steering Wheel to make a selection and then press the Red Button to confirm.

Cruz Ramirez: Simulator Decoder

Cruz Ramirez and Lightning McQueen want to train on the simulator, but it needs an activation code. An incomplete pattern is shown. Use the Steering Wheel to select the correct object to complete the pattern and press the Red Button to confirm.



3. Racers Mode



Meet the racers and complete the puzzles. Turn the Character Selector to meet a different character.



CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.



TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit sit for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.


If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our website at vtechkids.com and filling out our Contact Us form located under the Customer Support link. A service representative will be happy to help you.

IMPORTANT NOTE

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our website at vtechkids.com and filling out our Contact Us form located under the Customer Support link with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note:


This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not



installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

CAN ICES-3 (B)/NMB-3(B)



WARNING:

CHOKING HAZARD-Small part.
Not for children under 3 yrs.

CLASS 1
LED PRODUCT



PRODUCT WARRANTY

This Warranty is applicable only to the original purchaser, is non-transferable and applies only to "VTech" products or parts. This product is covered by a 3-month Warranty from the original purchase date, under normal use and service, against defective workmanship and materials. This Warranty does not apply to (a) consumable parts, such as batteries; (b) cosmetic damage, including but not limited to scratches and dents; (c) damage caused by use with non-VTech products; (d) damage caused by accident, misuse, unreasonable use, immersion in water, neglect, abuse, battery leakage, or improper installation, improper service, or other external causes; (e) damage caused by operating the product outside the permitted or intended uses described by VTech in the owner's manual; (f) a product or part that has been modified (g) defects caused by normal wear and tear or otherwise due to the normal aging of the product; or (h) if any VTech serial number has been removed or defaced.

Prior to returning a product for any reason, please notify the VTech Consumer Services Department by going to our website at vtechkids.com, filling out our Contact Us form located under the Customer Support link or calling 1-800-521-2010.


If the service representative is unable to resolve the issue, you will be provided instructions on how to return the product and have it replaced under Warranty. Return of the product under Warranty must adhere to the following rules: If VTech believes that there may be a defect in the materials or workmanship of the product and can confirm the purchase date and location of the product, we will at our discretion replace the product with a new unit or product of comparable value. A replacement product or parts assumes the remaining Warranty of the original product or 30 days from the date of replacement, whichever provides longer coverage.

THIS WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL, WRITTEN, STATUTORY, EXPRESS OR IMPLIED. IF VTECH CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY AND TO THE REPLACEMENT SERVICE AS DETERMINED BY VTECH IN ITS SOLE DISCRETION.

To the extent permitted by law, VTech will not be responsible for direct, special, incidental or consequential damages resulting from any breach of Warranty.

This Warranty is not intended to persons or entities outside the United States of America. Any disputes resulting from this Warranty shall be subject to the final and conclusive determination of VTech.

Register your product online at vtechkids.com/warranty.

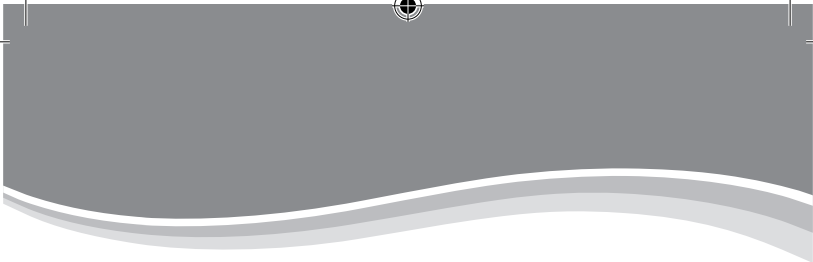

**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com



© Disney/Pixar
Visit www.disney.com

TM & © 2017 VTech Holdings Limited.
All rights reserved.
Printed in China.
91-003391-008 ©