

Parent's Guide

Touch & Chat Light-Up Phone[™]



91-003942-005^(IS)

INTRODUCTION

Thank you for purchasing the Touch & Chat Light-Up Phone™!

Introduce little ones to the cell phone world. Use pretend apps to call animal friends, check the weather and even organize your day, just like your favorite adults do!



INCLUDED IN THIS PACKAGE

- Touch & Chat Light-Up Phone™
- Parent's guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE

Please keep this parent's guide as it contains important information.

ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

NOTE

Il est conseillé de conserver ce guide des parents car il comporte des informations importantes.

Unlock the Packaging Lock



- Rotate the packaging lock counterclockwise several times.
- 2 Pull out the packaging lock and discard.

GETTING STARTED

Battery Removal and Installation

- 1. Make sure the unit is turned Off.
- Find the battery cover located on the back of the unit, use a screwdriver to loosen the screw, and then open the battery cover.
- 3. Remove old batteries by pulling up on one end of each battery.



- Install 2 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.
- 5. Replace the battery cover and tighten the screw to secure.

WARNING / ATTENTION:

Adult assembly required for battery installation. Keep batteries out of reach of children.

Les piles ou accumulateurs doivent être installés par un adulte. Tenir les piles ou accumulateurs hors de portée des enfants.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- · Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.

- Do not short-circuit the supply terminals.
- · Remove batteries during long periods of non-use.
- · Remove exhausted batteries from the toy.
- · Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES

- · Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- · Do not charge non-rechargeable batteries.

IMPORTANT : INFORMATIONS CONCERNANT LES PILES

Les piles fournies avec le produit permettent de tester le jouet en magasin mais ne sont pas des piles longue durée.

- Mettre en place les piles ou les accumulateurs en respectant les polarités + et -.
- Ne pas mélanger des piles ou des accumulateurs neufs avec des usagés.
- Ne pas mélanger différents types de piles : alcalines, zinc-carbone et rechargeables.
- · Seules des piles du type recommandé doivent être utilisées.
- Ne pas mettre les bornes d'une pile ou d'un accumulateur en court-circuit (en reliant directement le + et le –).
- Retirer les piles ou les accumulateurs en cas de non-utilisation prolongée.
- · Enlever les piles ou les accumulateurs usagés du jouet.
- Ne les jeter ni au feu ni dans la nature.

PILES RECHARGEABLES

· Enlever, lorsque c'est possible, les accumulateurs du jouet pour

les recharger.

- Les accumulateurs ne doivent être chargés que sous la surveillance d'un adulte.
- Ne pas tenter de recharger des piles non rechargeables.

PRODUCT FEATURES

1. On/Off Button

To turn the unit **On**, slide the **On/Off Switch** to the **On** O position. You will hear a sing-along song and a phrase. To turn the unit **Off**, slide the **On/Off Switch** to the **Off** \blacklozenge position.



2. Mode Switch

Switch between Learning mode and Video Call mode by sliding the **Mode Switch** left or right.



NOTE

Ensure that the screen is not positioned between the two modes. Position the slider completely to the right or the left to guarantee the best use of the toy and for optimal play.

3. Automatic Shut-Off

To preserve battery life, the **Touch & Chat Light-Up Phone**TM will automatically shut off after approximately 40 seconds without input. The unit can be turned on again by sliding the mode switch or by pressing any of the three buttons below the touch screen.

NOTE

This product is in Try Me mode in the packaging. After opening the package, make sure the try-me tag is removed from the back of the product, and then turn the unit off and on again to proceed with normal play. If the unit powers down or the light fades out during play, please install a new set of batteries.

ACTIVITIES

Learning Mode

1. Learning Apps

Press the 12 **Apps** to learn about numbers, shapes and more. These icons also act as phone keys to dial numbers. Slide your finger from app to app to create cool light patterns with playful sounds.



 
2. Call and End Call Buttons

Press the **Call** (and **End Call Buttons** to imitate using the phone for calls.



3. Camera Button

Press the **Camera Button** to hear fun sounds and phrases.



Video Call Mode

1. Animal Friends

Slide the mode switch to Video Call mode and press the lion or elephant to pretend to make a video call and hear their greeting, or press an emotion icon for fun sounds. Slide your finger across the touch screen continuously to hear playful sounds as the lights follow your fingers.



 
2. Call and End Call Buttons

Press the Call (and End Call Buttons to imitate a video call.



3. Camera Button

Press the **Camera Button** to hear a camera sound effect.



MELODIES

- 1. MacNamara's Band
- 2. Hot Cross Buns
- 3. The Alphabet Song
- 4. B-I-N-G-O
- 5. Little Robin Red Breast
- 6. Little Miss Muffet
- 7. Little Bo Peep
- 8. Skip to My Lou
- 9. Take Me Out to the Ball Game
- 10. Looby Loo
- 11. One Man Went to Mow a Meadow
- 12. Do You Know the Muffin Man?
- 13. Humpty Dumpty
- 14. Sailing, Sailing
- 15. Oh Where Has My Little Dog Gone?

SONG LYRICS

SONG 1

The phone is ringing, ringing, ringing! Say hello and how are you? Let's chat all day and have some giggles too!

SONG 2

A, B, C, D, E, F, G. Call your friends and your family.

SONG 3

One, two, three! Swipe the screen!

Four, five, six! Touch the apps!

Seven, eight, nine! It's selfie time!

SONG 4

It's a great day to call a friend,

We can chat on the phone or use video!

CARE & MAINTENANCE

- 1. Keep the unit clean by wiping it with a slightly damp cloth.
- Keep the unit out of direct sunlight and away from any direct heat sources.
- 3. Remove the batteries if the unit will not be in use for an extended period of time.
- 4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

- 1. Turn the unit Off.
- 2. Interrupt the power supply by removing the batteries.
- 3. Let the unit stand for a few minutes, then replace the batteries.
- 4. Turn the unit **On**. The unit should now be ready to use again.
- 5. If the unit still does not work, install with a new set of batteries.

IMPORTANT NOTE:

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S. or **1-877-352-8697** in Canada, or by going to our web site at **vtechkids.com** and filling out our **Contact Us** form located under the **Customer Support** link. Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions that you might have. A service representative will be happy to help you.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Supplier's Declaration of Conformity

47 CFR § 2.1077 Compliance Information

Trade Name:	VTech®
Model:	5376
Product Name:	Touch & Chat Light-Up Phone™
Responsible Party:	VTech Electronics North America, LLC
Address:	1156 W. Shure Drive, Suite 200
	Arlington Heights, IL 60004
Website:	vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION. *CAN ICES-3 (B)/NMB-3(B)*

Visit our website for more information about our products, downloads, resources and more.

vtechkids.com vtechkids.ca

Read our complete warranty policy online at vtechkids.com/warranty vtechkids.ca/warranty



TM & © 2020 VTech Holdings Limited. All rights reserved. **Printed in China.** 91-003942-005 (®)