

vtech[®]
baby

Parent's Guide

Grab & Go Koala[™]




91-003920-000 (US) (CA)

INTRODUCTION

Thank you for purchasing the **Grab & Go Koala™**.

Cuddle the take-along friend that teaches first words and motor skills through engaging play. Your baby can explore colors, patterns and textures with soft, crinkly and fluffy fabrics. The motion sensor rewards movement with songs, melodies, sounds and phrases. Attach the koala with the included ring or with the hook-and-loop paws.

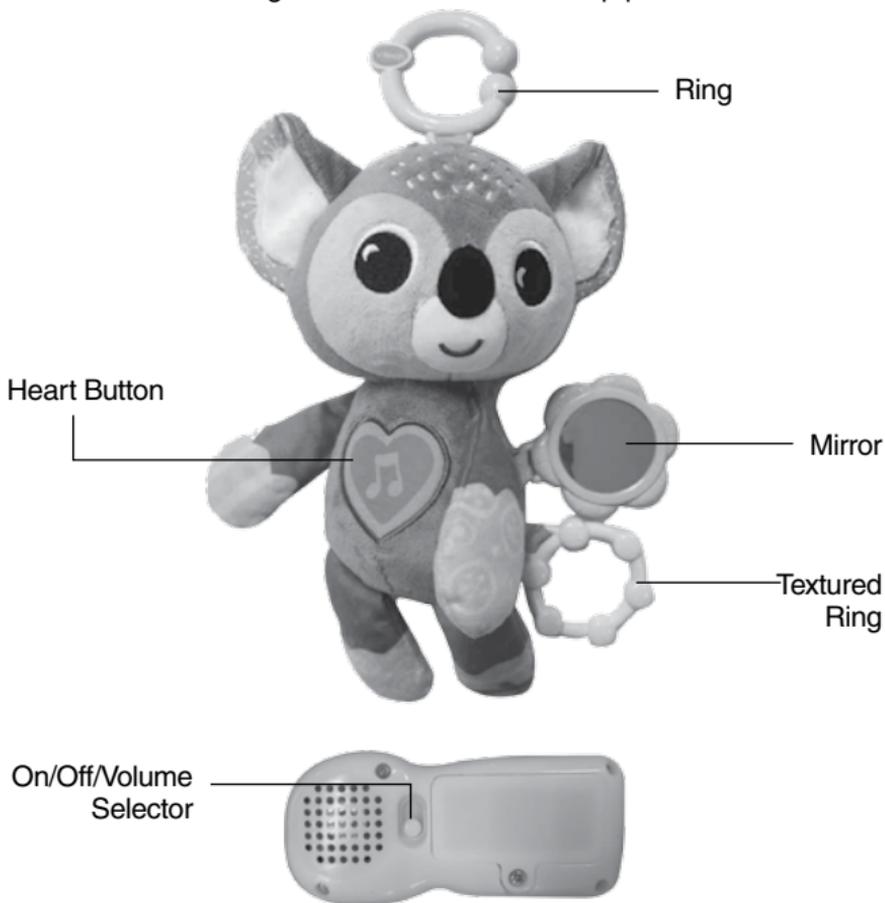

INCLUDED IN THIS PACKAGE

- **Grab & Go Koala™**
- Parent's guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please keep this parent's guide as it contains important information.

ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes et vis d'emballage. Ils ne font pas partie du jouet.


NOTE

Il est conseillé de conserver ce guide des parents car il comporte des informations importantes.

GETTING STARTED

Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Locate the battery cover on the back of the electronic module. Use a screwdriver to loosen the screw and then open up the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AAA batteries following the diagram inside the battery box.
5. Replace the battery cover and tighten the screw to secure.

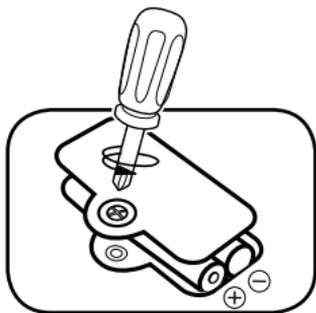

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity (+ and -).
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

MISE EN GARDE

- Utiliser des piles alcalines neuves ou des piles rechargeables NI-MH pour des performances maximales.
- Seules des piles du type recommandé doivent être utilisées.
- Ne pas mélanger différents types de piles ou d'accumulateurs, ne pas mélanger des piles ou des accumulateurs neufs avec des usagés.
- Ne pas utiliser des piles ou des accumulateurs endommagés.
- Mettre en place les piles ou les accumulateurs en respectant les polarités + et -.
- Ne pas mettre les bornes d'une pile ou d'un accumulateur en court-circuit (en reliant directement le + et le -).
- Enlever les piles ou les accumulateurs usagés du jouet.
- Retirer les piles ou les accumulateurs en cas de non-utilisation prolongée.
- Ne les jeter ni au feu ni dans la nature.

- Ne pas tenter de recharger des piles non rechargeables.
- Enlever, lorsque c'est possible, les accumulateurs du jouet pour les recharger.
- Les accumulateurs ne doivent être chargés que sous la surveillance d'un adulte.



WARNING / ATTENTION :

Adult assembly required for battery installation.

Keep batteries out of reach of children.

Les piles ou accumulateurs doivent être installés par un adulte.

Tenir les piles ou accumulateurs hors de portée des enfants.

INSTRUCTIONS FOR SURFACE WASHING

The **Grab & Go Koala™** is surface washable only. Please remove the **Electronic Module** from the koala before cleaning.

1. Open the hook-and-loop closure on the back of the koala and remove the **Electronic Module**.
2. Wipe down the koala with a damp cloth.
3. After surface washing, re-insert the **Electronic Module** and secure the hook-and-loop closure.

PRODUCT FEATURES

1. On/Off/Volume Selector

To turn the unit **On**, slide the **On/Off/Volume Selector** to the Low volume ◀ or the High volume ▶ position. You will hear a song, a phrase and a short tune. To turn the unit **Off**, slide the **On/Off/Volume Selector** to the **Off** ● position.



2. Automatic Shut-Off

To preserve battery life, the **Grab & Go Koala™** will automatically shut off after approximately 35 seconds without input. The unit can be turned on again by pressing the **Heart Button** or activating the **Motion Sensor**. Triggering the motion sensor continuously for approximately 10 minutes without any other input will cause the unit to shut off. Press the button to turn the unit back on.


NOTE

If the unit powers down or if the light fades out during play, please install a new set of batteries.

ACTIVITIES

1. Heart Button

Press the **Heart Button** to hear about the koala, learn numbers, and listen to songs, playful sounds and melodies. The light will flash with the sound.

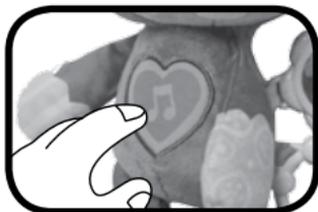

2. Motion Sensor

Shake the koala to activate the motion sensor and hear a variety of playful sounds and short tunes. If a melody is playing, activate the motion sensor to hear fun sounds play over the melody. The light will flash with the sound.



MELODY LIST

1. For He's a Jolly Good Fellow
2. The Entertainer
3. One Man Went to Mow
4. Did You Ever See a Lassie?
5. On Top of Old Smokey
6. Little Robin Red Breast
7. Old King Cole
8. Oats, Peas, Beans and Barley Grow

9. Skip to My Lou
10. Little Boy Blue
11. Aiken Drum
12. Teddy Bears' Picnic
13. Looby Loo
14. Humpty Dumpty
15. Dill Pickles
16. Good Morning Merry Sunshine
17. Lazy Mary, Will You Get Up?
18. London Bridge
19. Alphabet Song
20. Glow Worm

SONG LYRICS

Song 1

Hello, peek-a-boo!
Koala's here to play,
I've got lots of hugs for you,
Let's cuddle and snuggle all day!

Song 2

Hello my friend, hold me tight!
Snuggle me, cuddle me!
I love when I am with you!
Koala cuddles!

Song 3

Look in the mirror, who do I see?
I see you smiling back at me!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.

4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
5. The plush koala is surface washable only. Please remove the **Electronic Module** from the koala before cleaning.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

IMPORTANT NOTE:

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S. or 1-877-352-8697 in Canada, or by going to our website at **vtechkids.com** and filling out our **Contact Us** form located under the **Customer Support** link. A service representative will be happy to help you.

Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions that you might have. A service representative will be happy to help you.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE

This equipment has been tested and found to comply with the limits

for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Supplier's Declaration of Conformity
47 CFR § 2.1077 Compliance Information

Trade Name:	VTech®
Model:	5368
Product Name:	Grab & Go Koala™
Responsible Party:	VTech Electronics North America, LLC
Address:	1156 W. Shure Drive, Suite 200 Arlington Heights, IL 60004
Website:	vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:
(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION.

CAN ICES-3 (B)/NMB-3(B)

**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com
vtechkids.ca

Read our complete warranty policy online at
vtechkids.com/warranty
vtechkids.ca/warranty



TM & © 2020 VTech Holdings Limited.
All rights reserved.

Printed in China.

91-003920-000 (S) (E)