

Disney

User's Manual



ROYAL LEARNING TABLET



2-5
Years

vtech®

© Disney
Visit DisneyJunior.com

© 2014 VTech
Printed in China
91-009669-000 (US)

Dear Parent,

At VTech®, we know how important the first day of school is for your child. To help prepare preschoolers for this important event, VTech® has developed the **Preschool Learning™** series of interactive toys.

Preschool Learning™ features fun characters and inviting school themes that use technology to capture a child's attention and teach important preschool skills like spelling, counting and the alphabet. These vital skills are taught in a way that's both fun and highly engaging to maintain a child's interest. Children will also be introduced to fun school subjects such as art class, music class and even recess! With **Preschool Learning™**, learning is fun from day one!

At VTech®, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting VTech® with the important job of helping your child learn and grow!

Sincerely,

 
Your friends at VTech®

To learn more about **Preschool Learning™** series and other VTech® toys, visit www.vtechkids.com

INTRODUCTION

Thank you for purchasing the **VTech® Royal Learning Tablet**.

Join Sofia and her animal friends in eight interesting activities that teach letters, phonics, logic, music and more. With the **Royal Learning Tablet** by **VTech®**, royal learning is just a touch away!

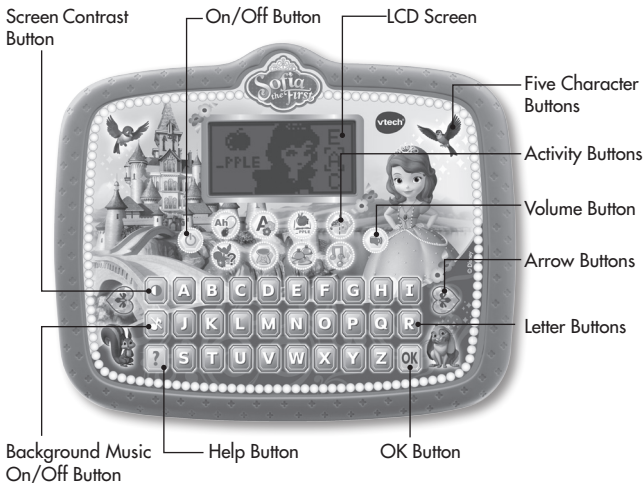

INCLUDED IN THIS PACKAGE

- One **VTech® Royal Learning Tablet**
- One User's Manual

WARNING:

 
All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.

NOTE: Please keep the user's manual as it contains important information.

Unlock the packaging locks:




- ① Rotate the packaging lock 90 degrees counterclockwise.
- ② Pull out the packaging lock.

GETTING STARTED

BATTERY INSTALLATION

 1. Make sure the unit is **OFF**.
2. Locate the battery cover at the back of the unit.
3. Use screwdriver or coin to open the battery cover.
4. Install 2 new AA Size (AM3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
5. Replace the battery cover and tighten the screw to secure.

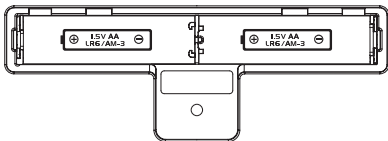

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

PRODUCT FEATURES

1. ON/OFF BUTTON



Press the **On/Off Button** to turn the unit **On** and press it again to turn the unit **Off**.

2. FIVE CHARACTER BUTTONS



Press the five **Character Buttons** to play or get to know Princess Sofia, Mia, Robin, Whatnaught and Clover.

3. VOLUME BUTTON



Press the **Volume Button** to adjust the volume. Use the **Left Arrow Button** to reduce the volume, or use the **Right Arrow Button** to raise the volume. Press the **OK Button** to confirm your choice.

4. SCREEN CONTRAST BUTTON



Press the **Screen Contrast Button** to adjust the screen contrast. Use the **Left Arrow Button** to lighten the contrast, or use the **Right Arrow Button** to darken the contrast. Press the **OK Button** to confirm your choice.

5. BACKGROUND MUSIC ON/OFF BUTTON



Press the **Background Music On/Off Button** to turn the background music on or off.

6. ACTIVITY BUTTONS



There are eight **Activity Buttons**. Press a button to enter that activity.

7. OK BUTTON



Press the **OK Button** to confirm your choice in a menu or activity.

8. ARROW BUTTONS



Press the **Arrow Buttons** to make a selection in a menu or activity.

9. LETTER BUTTONS



Press the **Letter Buttons** to learn letters or to answer letter-related questions.

10. HELP BUTTON

Press this button to repeat the current question or instruction, or to receive a useful hint in some activities.

11. AUTOMATIC SHUT-OFF

To preserve battery life, the unit will automatically turn off after several minutes without input. The unit can be turned on again by pressing the **On/Off Button**. The unit will also automatically turn off when the batteries are very low. A warning will be displayed on screen as a reminder to change the batteries.

ACTIVITIES

The **VTech® Royal Learning Tablet** offers a total of eight fun activities to play.

01. Words & Phonics



Learn letters, phonics and words with Sofia and the 3 good fairies at Royal Prep Academy. Press a **Letter Button** or use the **Arrow Buttons** then press the **OK Button** to play.



02. Guess the Letter



 
Help Sofia guess which letter is partly covered by a flower. Use the **Arrow Buttons** to move the flower left or right to see different parts of the letter then press a **Letter Button** to answer.



03. Royal Prep Library



Sofia is helping put books away in the Royal Prep library. Can you help her? Listen to the questions and press a **Letter Button** to answer. Or, use the **Arrow Buttons** to choose the correct answer and then press the **OK Button** to confirm your choice.



04. Picture Puzzle



Help Sofia fix the broken objects by matching the pictures correctly. Use the **Arrow Buttons** to choose the correct picture, and then press the **OK Button** to confirm your choice.



05. Guess Who?



It's time for hide-and-seek fun! Sofia and her animal friends will appear on the screen one at a time. Watch carefully! Press the correct **Character Button** when one of them appears.



06. Cedric's Potion



Help Sofia choose the correct ingredients for Mr. Cedric's new potion. Use the **Arrow Buttons** to choose the correct ingredient, and then press the **OK Button** to confirm your choice.



07. Lunch for Clover



Help Clover win the game and get the carrot. Three plates will appear on the screen. Watch carefully to see where the carrot goes! Use the **Arrow Buttons** to choose the correct plate, and then press the **OK Button** to confirm your choice.



08. Music Time



Dance with Sofia! There are 10 melodies to choose from. Use the **Arrow Buttons** to select a melody, and then press the **OK Button** to play. Press the **Letter Buttons** to see some surprises or press the **Character Buttons** to change the dancer!



CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on a hard surface and do not expose the unit to excess moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working, then please follow these steps:

1. Turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department on 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

TECHNICAL SUPPORT:

If you have a problem that cannot be solved by using this manual, we encourage you to visit us online or contact our Consumer Services Department with any problems and/or suggestions that you might have. A support representative will be happy to assist you.

Before requesting support, please be ready to provide or include the information below:

- The name of your product or model number (the model number is typically located on the back or bottom of your product).
- The actual problem you are experiencing.
- The actions you took right before the problem started.

Internet: www.vtechkids.com

Phone: 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada

IMPORTANT NOTE:

Creating and developing **VTech® Preschool Learning** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada with any problems and/or suggestions that you might have. A service representative will be happy to help you.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

COPYRIGHT NOTICES:

Copyright ©2014 **VTech**[®] Electronics North America, L.L.C. All Rights Reserved. **VTech**[®] and the **VTech**[®] logo are registered trademarks of **VTech**[®] Electronics North America, L.L.C. All other trademarks are property of their respective owners.