

Swim & Teach Ducks™



Printed In China 91-009689-004(US)

151600 Manual.indd 1 2013/11/26 12:29:12

Dear Parent,

Ever notice the look on your baby's face when they learn something new through their own discovery? These self-accomplished moments are a parent's greatest reward. To help fulfill them, VTech® created the Infant Learning® series of toys.

These unique interactive learning toys directly respond to what children do naturally – play! Using innovative technology, these toys react to baby's interactions, making each play experience fun and unique as they learn age-appropriate concepts like first words, numbers, shapes, colors and music. More importantly, VTecho's Infant Learning toys develop baby's mental and physical abilities by inspiring, engaging and teaching.

At **VTech***, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting **VTech*** with the important job of helping your child learn and grow!


sincerely,

Your friends at VTech®

To learn more about the **Infant Learning**® series and other **VTech®** toys, visit www.vtechkids.com

Thank you for purchasing the VTech® Swim & Teach Ducks™ learning toy!

Bathtime is so much fun with the **Swim & Teach Ducks™**! Turn the chunky red key to wind-up the duck, then watch them swim and sing! Press the letter button to hear fun phrases, songs and melodies and watch the light flash along to the music.

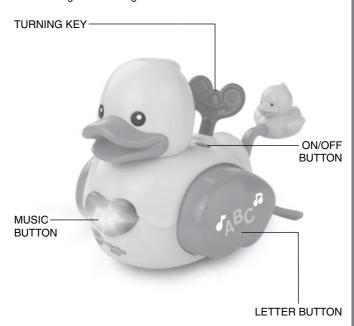

- One VTech® Swim & Teach DucksTM
- One instruction manual

WARNING: All packing materials, such as tape, plastic sheets.

wire ties and tags are not part of this toy, and should

be discarded for your child's safety.

ATTENTION: Pour la sécurité de votre enfant, débarrassez-vous

de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes.

Ils ne font pas partie du jouet.

NOTE: Please keep this instruction manual as it contains important information.

GETTING STARTED

BATTERY INSTALLATION

- 1. Make sure the unit is turned OFF and the battery cover, battery box and unit are all dry.
- 2. Locate the battery cover on the bottom of the unit. Use a screwdriver to loosen the four screws on the battery cover.
- 3. Install 2 new AAA (LR03/AM-4) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
- 4. Replace the battery cover and tighten the screws to secure.
- 5. When closing the battery cover ensure that the screws are securely tightened. This will avoid any water leakage.



- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbonzinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

With the VTech[®] Swim & Teach Ducks[™], safety comes first. To ensure your child's safety, please ensure the battery cover is securely locked into position to avoid injury.

WARNING:

- Batteries must be changed by an adult.
- Only use this product in water between 10 and 45 degrees celsius. 50 and 104 degrees Fahrenheit.
- This product cannot be used in salt water.
- Do not leave this product submerged in water for a long period of time.
- This product should only be operated in water when fully assembled in accordance with the instructions.
- To prevent drowning, never leave a child unattended in the bath.
- Use a thermometer to check the temperature of the water before sitting a child in the bath. Toddlers have very sensitive skin and can burn easily if the water is too hot.
- When finished playing, remove the unit from the water and pour out any remaining water. Rinse the unit with clean water and wipe with a dry cloth. Suspend the unit in an upright position to dry.



PRODUCT FEATURES

1. ON/OFF BUTTON

Press the ON/OFF BUTTON button to turn the unit ON, press the ON/ OFF BUTTON a second time to turn the unit OFF.



2. AUTOMATIC SHUT-OFF

To preserve battery life, the VTech[®] Swim & Teach Ducks[™] will automatically power-down after approximately 50 seconds without input. The unit can be turned on again by pressing any button.

Please Note: When the speaker fills up with water the volume of the product will decrease. To correct the problem remove the unit from the water and allow the water to drain away from the speaker.



 Press the on/off button to turn the unit on. You will hear a sing-along song, sound effect and fun phrase. The light will flash with the sounds.



Press the letter button to learn letters. and hear songs and fun sounds. The light will flash with the sounds.





151600 Manual.indd 6

3. Press the light-up button to hear a playful phrase, a song and melodies. The light will flash with the sounds.



4. Turn the big red key to see the ducks swim in the water.



MELODY LIST:

- 1. Sailing, Sailing
- 2. Sailor's Hornpipe
- 3. My Bonnie Lies Over the Ocean
- 4. A, B, C Tumble Down D

SUNG SONG LYRICS

SONG 1

Two yellow duckies in the tub, Kicking their feet and looking so sweet!

SONG 2

We love splishing, we love splashing. We love swimming, baby and me!

151600 Manual.indd 7

CARE & MAINTENANCE

- 1. Keep the unit clean by wiping it with a slightly damp cloth.
- Keep the unit out of direct sunlight and away from any direct heat source.
- Make sure you empty the water out of all the elements of the unit and rinse theoroughly before drying so sediment or cleaning products are left on the unit.
- 4. Make sure to dry all the elements of the unit before storing.
- Remove the batteries when the unit will not be in use for an extended period of time.
- 6. Do not drop the unit on hard surfaces.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

- 1. Please turn the unit OFF.
- 2. Interrupt the power supply by removing the batteries.
- 3. Let the unit stand for a few minutes, then replace the batteries.
- 4. Turn the unit **ON**. The unit should now be ready to play again.
- If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

For information on this product's warranty, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada.

(

IMPORTANT NOTE:

Creating and developing Infant Learning products is accompanied by a responsibility that we at VTech® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S., or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.





Caution: changes or modifications not expressly approved by the party

the equipment.