


vtech[®]
Baby

User's Manual

Roll & Sing Caterpillar™

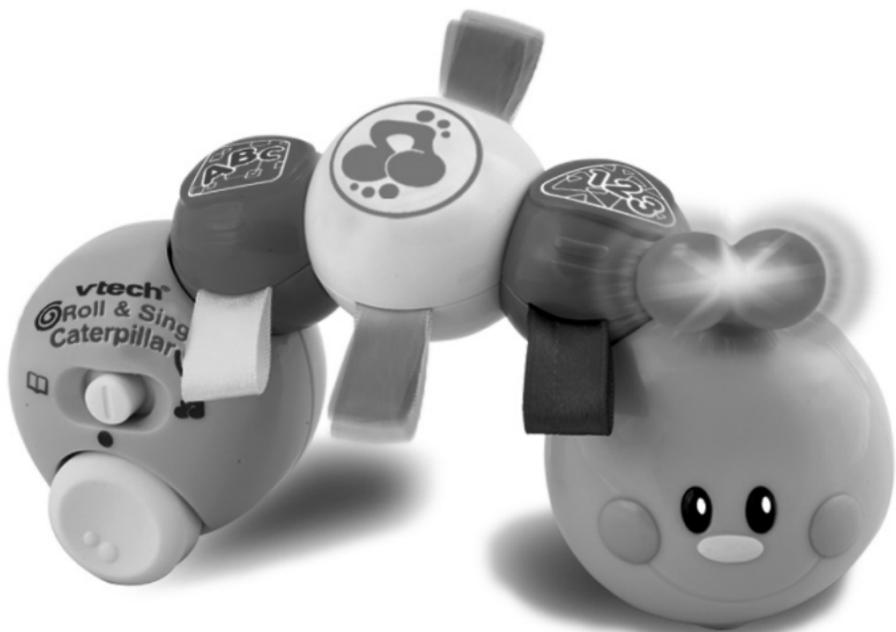

© 2009 VTech

Printed in China

91-100600-000-006 (美)


Dear Parent,

Ever notice the look on your baby's face when they learn something new through their own discovery? These self-accomplished moments are a parent's greatest reward. To help fulfill them, **VTech**[®] created the **Infant Learning**[®] series of toys.

These unique interactive learning toys directly respond to what children do naturally – play! Using innovative technology, these toys react to baby's interactions, making each play experience fun and unique as they learn age-appropriate concepts like first words, numbers, shapes, colors and music. More importantly, **VTech**[®]'s **Infant Learning**[®] toys develop baby's mental and physical abilities by inspiring, engaging and teaching.

At **VTech**[®], we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting **VTech**[®] with the important job of helping your child learn and grow!

Sincerely,

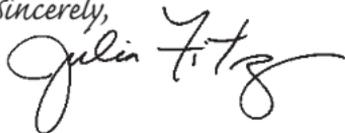

Julia Fitzgerald
Vice President, Marketing
Vtech Electronics, NA

To learn more about the **Infant Learning**[®] and other **VTech**[®] toys, visit www.vtechkids.com

INTRODUCTION

Thank you for purchasing the **VTech® Roll & Sing Caterpillar™** learning toy!

The **VTech® Roll & Sing Caterpillar™** is a fun electronic learning toy for babies! Twist the shape buttons and push the caterpillar along to learn colors, shapes, A-B-C's, 1-2-3's and hear fun phrases and sounds through two modes of play. Spinning the middle roller and pushing the caterpillar along aids motor skill development and hand-eye coordination. With entertaining sound effects, flashing lights and fun melodies, your baby will always be entertained!


TWISTING
SHAPE
BUTTONS

ROLLER

LIGHT-UP
ANTENNA

ON/OFF/MODE
SELECTOR SWITCH

TACTILE RIBBONS

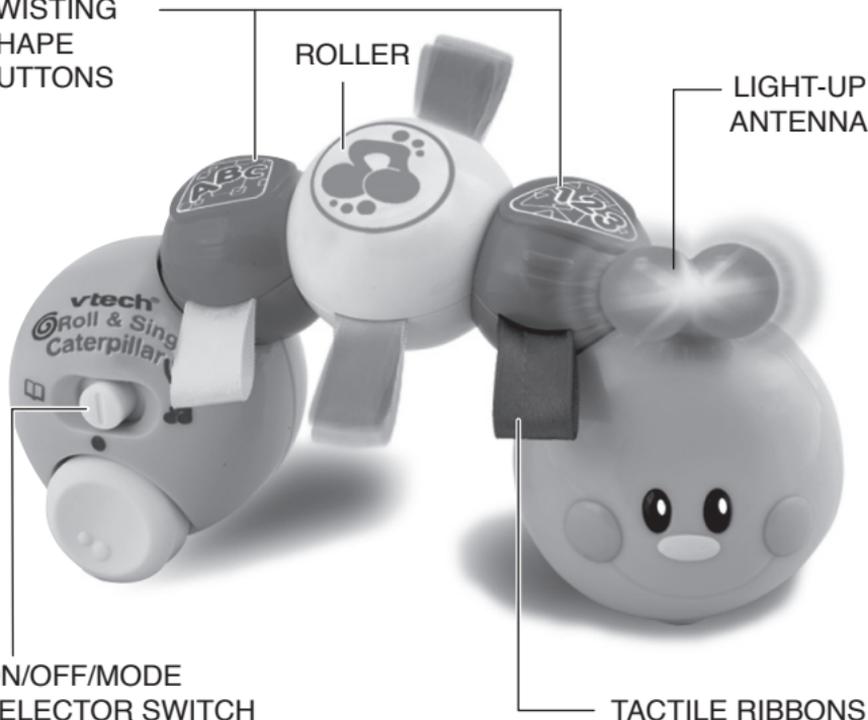

INCLUDED IN THIS PACKAGE


- One VTech® Roll & Sing Caterpillar™
- One instruction manual

WARNING: All packing materials, such as tape, plastic sheets, wire ties and tags are not part of this toy, and should be discarded for your child's safety.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the unit. Use a coin or a screwdriver to loosen the screw.
3. Install 2 new 'AAA' (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure the battery cover.

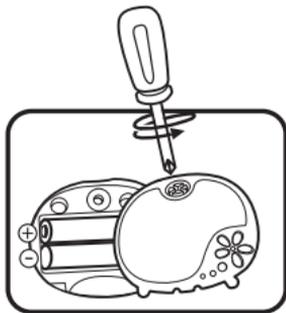

BATTERY NOTICE

- Install batteries correctly observing the polarity (+, -) signs to avoid leakage.
- Do not mix old and new batteries.
- Do not mix batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Remove the batteries from the equipment when the unit will not be

used for an extended period of time.


- Always remove exhausted batteries from the equipment.
- Do not dispose of batteries in fire.
- Do not attempt to recharge ordinary batteries.
- The supply terminals are not to be short-circuited.
- Only batteries of the same and equivalent type as recommended are to be used.

WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES.

PRODUCT FEATURES

1. ON/OFF/MODE SELECTOR SWITCH

To turn the unit **ON**, slide the **ON/OFF/MODE SELECTOR SWITCH** to the **LEARNING MODE** (📖) or **MUSIC MODE** (🎵) position. To turn the unit **OFF**, slide the **ON/OFF/MODE SELECTOR SWITCH** to the **OFF** (●) position.

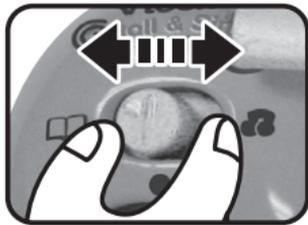


2. AUTOMATIC SHUT-OFF


To preserve battery life, the **VTech® Roll & Sing Caterpillar™** will automatically power-down after approximately 30 seconds without input. The unit can be turned on again by pressing any button.

ACTIVITIES


1. Slide the **on/off/mode selector switch** to select a mode of play. You will hear a caterpillar sound, a fun sing along song and fun phrases. The light will flash with the sounds.

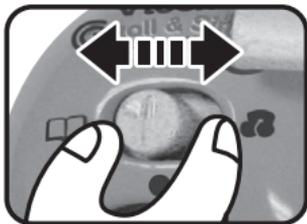


2. Twist the **square** or **triangle buttons** to learn about shapes, colors, A-B-C's and 1-2-3's in the learning mode and hear a variety of melodies in the music mode. The light will flash with the sounds.

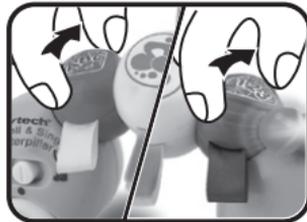

3. Spin the **roller** to hear fun phrases and sing along songs in both modes. The light will flash with the sounds.

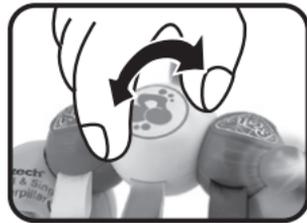

4. Push the caterpillar to hear fun phrases, melodies and caterpillar sound effects. When melodies are playing, push the caterpillar quickly to increase the tempo of the melody. The light will flash with the sounds.

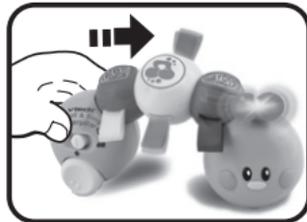

5. If there is no input to the unit after approximately 10 seconds, you will hear a fun phrase. After another 10 seconds if there is still no input, you will hear a sing along song. If there continues to be no input, you will hear "Bye-bye" then the unit will automatically power-down.

MELODY LIST

1. Alphabet Song
2. Chopsticks
3. Farmer in the Dell
4. Frere Jacques
5. Happy Farmer
6. Oh Susanna!
7. Polly Put the Kettle On
8. This Old Man

SONG LYRICS

SONG 1 (to the tune of “Alouette”)

Caterpillar come and play with me,
Pull me, spin me, we’ll have fun you’ll see!

SONG 2 (to the tune of “London Bridge”)

Caterpillar creeps along, crawling here, wiggling there,
Caterpillar moves along. Oh, so slowly!

SONG 3 (to the tune of “Mary, Mary, Quite Contrary”)

Twist me, turn me, turn me, twist me,
I like to spin around! Wee!

CARE & MAINTENANCE

1. Keep the unit and book pages clean by wiping with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.

3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

For information on this product's warranty, please call **VTech**® 1-800-521-2010 in the U.S., or 1-877-352-8697 in Canada.

IMPORTANT NOTE:

Creating and developing **Infant Learning** products is accompanied by a responsibility that we at **VTech**® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S., or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

FCC Notice:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES-003.

CET APPAREIL NUMÉRIQUE DE LA CLASSE B EST CONFORME À LA NORME NMB-003 DU CANADA.

Caution : changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.