

vtech®

Instruction Manual

Kitten Quest™



INCLUDED IN THE PACKAGE

- Kitten Quest™
- Certificate of Adoption & Kitten Care Chart



- Quick Start Guide

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE:

Please save this Instruction Manual as it contains important information.

ATTENTION :

 
Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

NOTE :

Il est conseillé de sauvegarder ce manuel d'utilisation car il comporte des informations importantes.

Unlock the Packaging Locks

- ① Rotate the packaging locks counterclockwise several times.
- ② Pull out the packaging locks and discard.

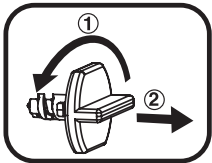



WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.



 
ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.
Tenir les piles ou accumulateurs hors de portée des enfants.

GETTING STARTED

Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the back of the unit, use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 4 new 1.5V AA (LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

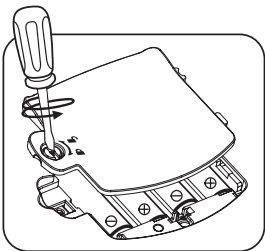

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES

- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

IMPORTANT : INFORMATIONS CONCERNANT LES PILES

- Mettre en place les piles ou les accumulateurs en respectant les polarités + et –.
- Ne pas mélanger des piles ou des accumulateurs neufs avec des usagés.
- Ne pas mélanger différents types de piles : alcalines, zinc-carbone et rechargeables.
- Seules des piles du type recommandé doivent être utilisées.
- Ne pas mettre les bornes d'une pile ou d'un accumulateur en court-circuit (en reliant directement le + et le –).
- Retirer les piles ou les accumulateurs en cas de non-utilisation prolongée.
- Enlever les piles ou les accumulateurs usagés du jouet.
- Ne les jeter ni au feu ni dans la nature.

 
PILES RECHARGEABLES :

- Les accumulateurs ne doivent être chargés que sous la surveillance d'un adulte.
- Ne pas tenter de recharger des piles non rechargeables.

 
Exit Try-Me Mode





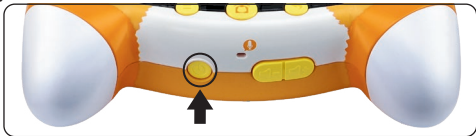



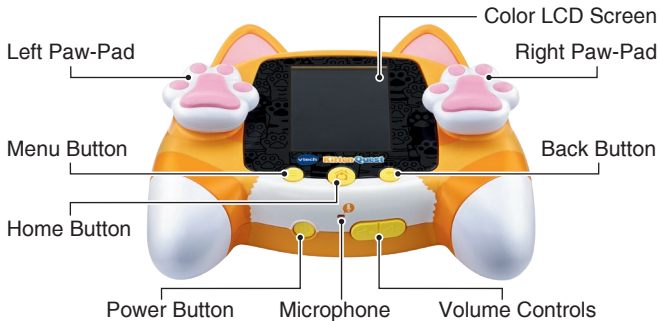



To exit Try-Me mode, follow the steps below:

1. If the device is already On, press and hold the **Power Button** to turn Off the device.
2. Press the **Power Button** to turn On the device.
3. When you see a kitten selection screen, **Kitten Quest™** is ready to play!



PRODUCT FEATURES



	Function keys	Function description	
	Power Button	Press it to turn Kitten Quest™ On. Press it to put Kitten Quest™ in sleep mode. Hold it for 3s to turn Kitten Quest™ Off.	
	Paw-Pads		Move the Paw-Pads (up/down/left/right) to guide your kitten/cat and browse menus.
			Press the center of the Paw-Pad to confirm an action
	Home Button	Press it to return from anywhere to the kitty's home. In the kitty's home, press it to switch between Virtual Pet and Adventure mode.	
	Back Button	Press to return to the previous location or cancel an action.	
	Menu Button	Press to go to the Menu to check Kitty's status, mission hints, and other settings.	
	Volume Controls	Press  to decrease or  to increase the sound volume.	
	Microphone	Use voice to interact with the kitty when  appears on the screen.	


HOW TO PLAY

Game Overview

Kitten Quest™ has three modes! First, you will **Adopt and Raise a Kitten**. After you've taken care of it, it will grow to be a young cat -- then, the adventure begins and you can switch between exploring the town in **Adventure Mode** and caring for your kitty in **Virtual Pet Mode**.

Adopt and Raise a Kitten




On the adoption screen, move the **Paw-Pads** left and right to select a kitten to adopt, then press a **Paw-Pad** to confirm your choice. Next, take care of the kitten until it grows to be a young cat!






The kitten will use thinking bubbles to tell you what it needs. For example, the first thing it will need is some milk . To take care of its needs, select and use items from the item tray. Use a **Paw-Pad** to move the cursor to the bottom to reveal the item tray. To pick up an item, move the cursor over it and then press a **Paw-Pad**. To use or place an item, move it to the kitten or to a floor location, then press a **Paw-Pad**.



Kitty's Needs

When the kitty needs to be taken care of, a thinking bubble appears above its head. Observe its needs and fulfill them with the appropriate items.

A New Kitten's Needs	
	The kitten is hungry. Feed it with a bottle of milk.
	The kitten wants to play. Pick a toy to give to it!
	The kitten is cold. A blanket would help keep it warm.

An Older Kitten's Needs	
	Kitty is hungry and needs food in a bowl.
	Kitty is thirsty and needs water in a bowl.
	Your kitten needs to go the bathroom! Clean up the litter box with a scoop.
	The kitten wants to play. Pick a toy to give to it!
	Your kitten has grown up! Give it a collar to start the adventure.

After raising your kitten, it grows up and you can split your time between exploring as your kitten (in **Adventure Mode**) and taking care of it at home (in **Virtual Pet Mode**).






Adventure Mode

The kitty's favorite jigsaw puzzle has blown away! Explore the town as your adopted kitten to find the missing pieces. By following the red guide arrow ➡, you can collect all the puzzle pieces. After you've collected the puzzle, you can try to finish all the levels in each mission and go treasure hunting. Adventuring makes your cat hungry! When you see 🍽️ over the kitten's head, it's time to return home and feed it in **Virtual Pet Mode**.



Guide Icons

Here are the icons you'll see in the game:

	Follow the red arrow to find the next piece of the puzzle!
	This is a transition from one area to another (such as from the home to the outside).
	These indicate where you can play games.
	This is a treasure spot! Your kitten can dig up "treasures" (and other bizarre objects) for its collection here.
	This is a spot for a fun event.

To select a spot or go into an activity, move near it to highlight it, and then press a **Paw-Pad**.

The Kitten's House

The Home button returns you to the kitten's home. On this screen, move a **Paw-Pad** left or right to scroll around the house. To select an activity, press a **Paw-Pad**. In the kitten's house, press the **Home button** again to switch to **Virtual Pet Mode**.

Daydreaming

Puzzle

My Treasures

Go Outside



Scratch! Scratch!


Goldfish Bowl

Agility Practice

Go Outside	Go outside and adventure!
Puzzle	Find the missing puzzle pieces and return them here.
My Treasures	This is the place to see your treasure collection.
Scratch! Scratch!	Surely nobody will mind if the cat scratches the couch!?
Daydreaming	Daydream to jump over clouds (optional bonus game).
Goldfish Bowl	Play a catching game with the goldfish pal
Agility Practice	Practice agility by hitting the blue ball.

Go Outside to the Town

 At home, use the door to go outside and explore the town. Follow the red arrow to find the next puzzle piece. You can also search for events, look for treasures, and try the harder levels of the missions.

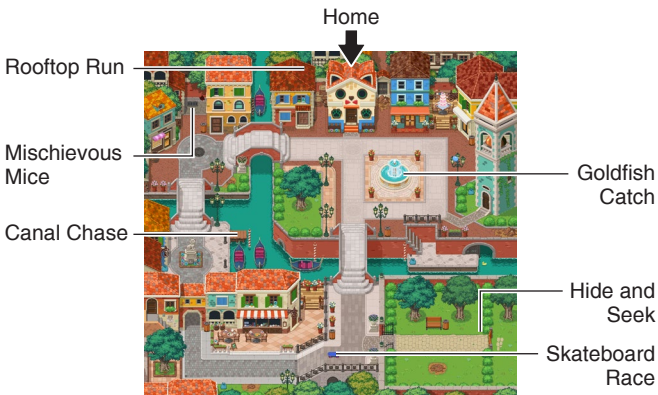


Missions

There are six missions in town, and you can find a puzzle piece by beating the first level of each one. Each mission has extra levels that are just for fun. After completing each level, the next level becomes available (five levels total for each mission). Move a **Paw-Pad** left or right to choose a difficulty level, then press a **Paw-Pad** to select it.



- **Rooftop Run**

 A crow has taken a puzzle piece! Jump over rooftops to chase it. Move a **Paw-Pad** left or right to move, and press a **Paw-Pad** to jump.

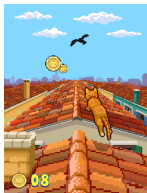


- **Mischievous Mice**

Pay attention to the color of the mouse that has the puzzle piece, and catch it to get the puzzle piece back. Move the left and right paws with the **Paw-Pads**. When a cursor is over the target mouse, press the corresponding **Paw-Pad** to make a catch.



- **Hide and Seek**

 The dog has buried a puzzle piece in the park. Find and dig all the treasure spots 📍. Move a **Paw-Pad** left or right to turn until you see a treasure spot 📍, then push a **Paw-Pad** up or down to move towards it. To dig up a treasure, press a **Paw-Pad** when you're close to a treasure spot 📍. Be careful! Don't alert the dog!

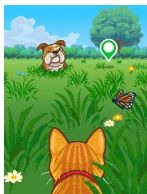


- **Goldfish Catch**

Oh no! A fish accidentally swallowed a puzzle piece! Pay attention to the pattern of the fish, and catch it to help it spit out the puzzle piece. Move the left and right paws with the **Paw-Pads**. When a cursor is over the target fish, press the corresponding **Paw-Pad** to make a catch.




- **Canal Chase**

 Look! A stray cat has taken a puzzle piece and is trying to keep it away. Jump over boats and piers to chase the stray cat. Move a **Paw-Pad** left or right to move the cat, and press a **Paw-Pad** to jump.

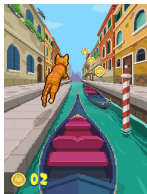

- **Skateboard Race**

 A playful macaw has stolen one of the puzzle pieces! Skate down the street to get it back. Move a **Paw-Pad** left or right to move.

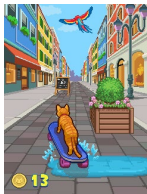

Virtual Pet Mode

Become a true pet parent as you feed your kitty, refill its water, play, and even clean the litter-box! Earn Cat Points 🐾 in **Adventure mode** to get more items or decorations.

TIP: To go to **Virtual Pet mode**, press 🏠 in the kitty's home.

To use an item, use a **Paw-Pad** to move the cursor to the bottom to reveal the item tray. Move the cursor to the left or right of the item tray to reveal more items. To pick up an item, move the cursor over it and then press a **Paw-Pad**. To use or place an item, move it to a floor location, then press a **Paw-Pad**. For example, if the kitten is hungry or thirsty, pick up food or water from the item tray and put it in its bowl.




Getting Items with Cat Points

Some items cost Cat Points to take out of the tray. If you don't want an item any longer, you can return it to the item tray to get your Cat Points back!

 






You earn Cat Points by taking care of the kitten in Virtual Pet mode and playing games and exploring in Adventure mode.

Menu

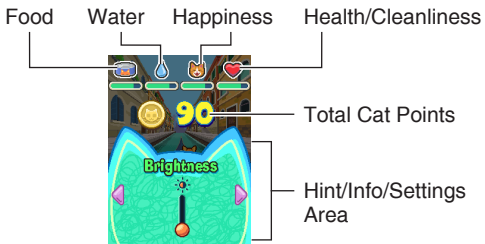


Press  to check the kitty's status and the number of Cat Points collected.

The lower area of the Menu gives hints about the next mission, brightness controls, and instructions to reset the game and adopt a new kitten.



	Food	When this is low, kitty needs to be fed.
	Water	When this is low, kitty needs to drink.
	Happiness	When this is low, kitty needs to play.
	Health/Cleanliness	When this is low, kitty needs to go to the litter box. Make sure to keep the litter box clean!

FAQ

- Q: **Kitten Quest™** keeps playing an animation and I can't start the game. What should I do?
- A: This is the demo animation. Press and hold the **Power Button** to turn Off **Kitten Quest™**, and then press the **Power button** again to turn it On. See Exit Try-Me Mode section on page 5.
- Q: How can I access the Virtual Pet game to feed and play with the kitten?
- A: To switch between the Virtual Pet and Adventure mode, press the **Home button**  in the kitty's home.
- Q: How can I start over with a new kitten?
- A: Press  to go to the Menu, and then press and hold the **Left Paw-Pad** and **Volume Down**  for 6 seconds to reset the device. Please note that this will reset all game records, and it cannot be restored.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
5. If the unit stops working or malfunctions, install a new set of batteries.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

ENVIRONMENTAL PHENOMENA

Electrostatic discharge may cause **Kitten Quest™** to malfunction. If this occurs, recover the unit by pressing and holding the Power Button for 10 seconds until the unit turns off, then press and hold the Power Button for 3 seconds to turn the unit on. Or remove batteries for 10 seconds and reinstall the batteries then power on the unit.

WARNING

A very small percentage of the public, due to an existing condition, may experience epileptic seizures or momentary loss of consciousness when viewing certain types of flashing colors or patterns on a game screen. While the **Kitten Quest™** does not contribute to any additional risks, we do recommend that parents supervise their children while they play video games. If your child experiences dizziness, altered vision, disorientation, or convulsions, discontinue use immediately and consult your physician. Please note that focusing on an LCD screen at close range for a prolonged period of time may cause fatigue or discomfort. We recommend that children take a 15-minute break for every hour of play.

IMPORTANT NOTE:

If the problem persists, please contact our **Consumer Services Department** at **1-800-521-2010** in the U.S., **1-877-352-8697** in Canada, or by going to our website **vtechkids.com** and filling out our **Contact Us** form located under the **Customer Support link**. Creating and developing VTech products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CAN ICES(B)/NMB(B)

Supplier's Declaration of Conformity
47 CFR § 2.1077 Compliance Information

Trade Name: VTech®
Model: 5942
Product Name: Kitten Quest™
Responsible Party: VTech Electronics North America, L.L.C.
Address: 1156 W. Shure Drive, Suite 200,
Arlington Heights, IL 60004
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com
vtechkids.ca

Read our complete warranty policy online at
vtechkids.com/warranty
vtechkids.ca/warranty



© 2026 VTech.
All rights reserved.
IM-594200-000
Version:0 US CAN