

Parent's Guide

# Soft & Smart Sensory Cube<sup>™</sup>




91-003776-000 🔊 😁

## INTRODUCTION

Thank you for purchasing the Soft & Smart Sensory Cube™!

This soft activity cube has six sides of tactile, visual and auditory play and keeps baby engaged from infancy through the toddler years. With a motion sensor, buttons and an interactive puppy, the activity cube sparks little ones' curiosity with fun sounds, phrases and upbeat songs. Little ones will love taking the balls out of the cube and putting them in again and exploring all the activities this toy offers.

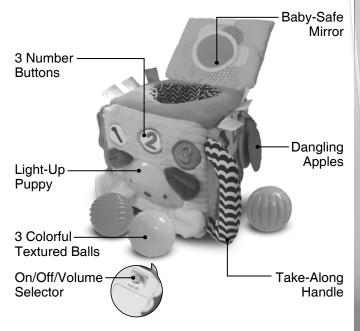

## INCLUDED IN THIS PACKAGE

- One Soft & Smart Sensory Cube™
- Three colorful balls
- One parent's guide

#### WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.

#### NOTE:

Please keep this parent's guide as it contains important information.

#### ATTENTION :

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes et vis d'emballage. Ils ne font pas partie du jouet.

#### NOTE :

Il est conseillé de conserver ce guide des parents car il comporte des informations importantes.

### **GETTING STARTED**

### **Battery Removal and Installation**

- 1. Make sure the unit is turned Off.
- Locate the battery cover on the electronic module inside the unit. Use a screwdriver to loosen the screw and open the battery cover.
- 3. Remove old batteries by pulling up on one side of each battery.
- Install 2 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (The use of a new alkaline batteries is recommended for maximum performance.)



5. Replace the battery cover and tighten the screw to secure.

### BATTERY NOTICE

- Use new alkaline batteries for maximum performance
- Use only batteries of the same or equivalent type as recommended
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries
- Do not use damaged batteries
- Insert batteries with the correct polarity
- Do not short-circuit the battery terminals
- Remove exhausted batteries from the toy
- Remove batteries during long periods of non-use
- Do not dispose of batteries in fire
- Do not charge non-rechargeable batteries
- Remove rechargeable batteries from the toy before charging (if removable)
- Rechargeable batteries are only to be charged under adult supervision

### Mise en garde

- Seules des piles du type recommandé doivent être utilisées
- Ne pas mélanger différents types de piles ou d'accumulateurs, ne pas mélanger des piles ou des accumulateurs neufs avec des usagés
- Ne pas utiliser des piles ou des accumulateurs endommagés
- Mettre en place les piles ou les accumulateurs en respectant les polarités + et –
- Ne pas mettre les bornes d'une pile ou d'un accumulateur en courtcircuit (en reliant directement le + et le –)
- Enlever les piles ou les accumulateurs usagés du jouet
- Retirer les piles ou les accumulateurs en cas de non-utilisation prolongée
- Ne les jeter ni au feu ni dans la nature
- Ne pas tenter de recharger des piles non rechargeables
- Enlever les accumulateurs du jouet pour les recharger
- Les accumulateurs ne doivent être chargés que sous la surveillance d'un adulte

### PRODUCT FEATURES

1. On/Off/Volume Selector

To turn the unit **On**, slide the **On/Off/ Volume Selector** to the **Low ●**) or the **High ●**)) volume position. You will hear a sound, phrase and a song. To turn the unit **Off**, slide the **On/Off/Volume Selector** to the **Off ●** position.



#### 2. Automatic Shut Off

To preserve battery life, the **Soft & Smart Sensory Cube**<sup>™</sup> will automatically power down after approximately 45 seconds without input. The unit can be turned on again by pressing the **Number Buttons**.

#### Note:

If the unit repeatedly powers down while playing or the light fades out, we suggest changing the batteries.

### ACTIVITIES

#### 1. Number Buttons

Press the **Number Buttons** to learn about numbers and colors. You will also hear sing-along songs, melodies and playful sounds. The puppy's face will flash with the sounds.



#### 2. Motion Sensor

Shake the cube to activate the **Motion Sensor**. You will hear an assortment of playful and silly sounds. The puppy's face will flash with the sounds.



#### 3. Tactile Stimulation

The **Soft & Smart Sensory Cube**<sup>™</sup> includes a variety of fabric textures and plastic features to encourage interaction and provide an assortment of tactile play opportunities.

### **MELODY LIST**

- 1. Bicycle Built for Two
- 2. Teddy Bears' Picnic
- 3. Skip to My Lou
- 4. Looby Loo
- 5. Pat-a-Cake
- 6. Humpty Dumpty
- 7. There Is a Tavern in the Town
- 8. One, Two, Buckle My Shoe
- 9. Listen to the Mockingbird
- 10. Hickory, Dickory, Dock
- 11. Shoo Fly! Don't Bother Me
- 12. London Bridge
- 13. Grandfather's Clock
- 14. Ring Around the Rosy
- 15. Diddle, Diddle Dumpling

### SING-ALONG SONG LYRICS

#### Song 1

Hello little buddy, How do you feel today? I'm happy you are here to play, You brighten up my day!

#### Song 2

One, two, three, count with me. Three, two, one, we are having fun!

#### Song 3

Can you hear the little puppy, the puppy, the puppy? Can you hear the little puppy, barking to say hi!

### **CARE & MAINTENANCE**

- 1. Keep the unit clean by wiping it with a slightly damp cloth.
- 2. Keep the unit out of direct sunlight and away from any direct heat sources.
- 3. Remove the batteries if the unit will not be used for an extended period of time.
- 4. Do not drop the unit on hard surfaces and do not expose the unit to excess moisture or water.
- 5. The unit is surface washable. Remove the electronic module before wiping down the unit.

### TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

- 1. Turn the unit Off
- 2. Interrupt the power supply by removing the batteries
- 3. Let the unit stand for a few minutes, then replace the batteries
- 4. Turn the unit back **On**. The unit should now be ready to play again
- 5. If the unit still does not work, install a new set of batteries

#### **IMPORTANT NOTE:**

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S., **1-877-352-8697** in Canada, or by going to our website **vtechkids.com** and filling out our **Contact Us** form located under the **Customer Support** link. Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

#### Caution:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

#### Supplier's Declaration of Conformity

Trade Name:	VTech®
Model:	5282
Product Name:	Soft & Smart Sensory Cube™
Responsible Party:	VTech Electronics North America, LLC
Address:	1156 W. Shure Drive, Suite 200, Arlington Heights, IL 60004
Website:	vtechkids.com
THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES, OPERATION IS SUBJECT TO THE FOLLOWING TWO	
CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL	
INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY	
INTERFERENCE RECEIVED, INCLUDING INTERFERENCE	
THAT MAY CAUSE UNDESIRED OPERATION.	

CAN ICES-3 (B)/NMB-3(B)

## Visit our website for more information about our products, downloads, resources and more.

### vtechkids.com

Read our complete warranty policy online at vtechkids.com/warranty



TM & © 2019 VTech Holdings Limited. All rights reserved. **Printed in China.** 91-003776-000 (® @)