

**vtech**<sup>®</sup>

User's Manual

# Smart Friends Bowling<sup>™</sup>



© 2011 VTech  
Printed in China  
91-002482-000 (M)

Dear Parent,

Ever notice the look on your baby's face when they learn something new through their own discovery? These self-accomplished moments are a parent's greatest reward. To help fulfill them, VTech® created the **Jungle Gym®** series of toys.

These unique interactive learning toys directly respond to what children do naturally – play! Using innovative technology, these toys react to baby's interactions, making each play experience fun and unique as they learn age-appropriate concepts like first words, numbers, shapes, colors and music. More importantly, VTech®'s **Jungle Gym®** toys develop baby's mental and physical abilities by inspiring, engaging and teaching.

At VTech®, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting VTech® with the important job of helping your child learn and grow!

Sincerely,

 
Your friends at VTech®

To learn more about the **Jungle Gym®** series and other VTech® toys, visit [www.vtechkids.com](http://www.vtechkids.com)

# INTRODUCTION

Thank you for purchasing the **VTech® Smart Friends Bowling™** learning toy!

Learning and fun are right up your child's alley with **Smart Friends Bowling™** by **VTech®**. This innovative bowling set will get your little ones into the game as they roll the colorful ball toward the five pins. As the animal-themed pins fall, they teach counting, numbers, animals and more. Bright bumpers that extend from the set help keep the ball on track and flashing buttons keep score for easy play.

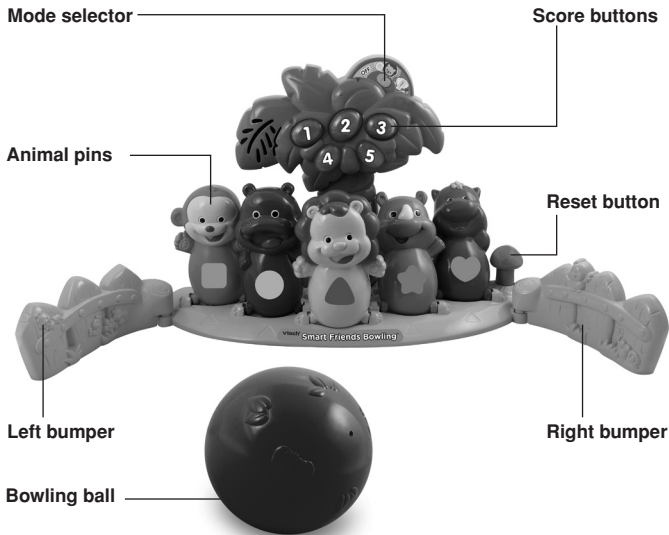

# INCLUDED IN THIS PACKAGE

One **VTech® Smart Friends Bowling™**

One left bumper



One right bumper



 
One base support



One bowling ball



One base bottom

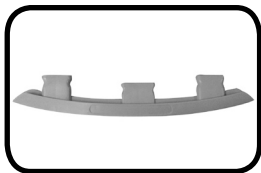

One base



One instruction manual

Included in This Package

**WARNING:** All packing materials, such as tape, plastic sheets, wire ties and tags are not part of this toy, and should be discarded for your child's safety.


**Attention :** Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.

**NOTE:** Please keep this instruction manual as it contains important information.

### Demo strip removal:

 When the product is taken out of the packaging, please remove the demo strip from the unit to activate normal play mode.

### Unlock the packing locks:

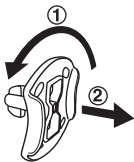


- ① Rotate the packing locks 90 degrees counter-clockwise
- ② Pull out the packing locks

## GETTING STARTED
 
### BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the unit. Use a coin or a screwdriver to loosen the screw.
3. Install 2 new 'AA' (AM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure.

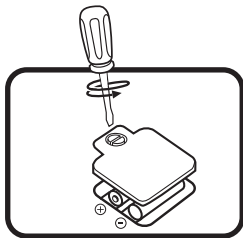

## BATTERY NOTICE

- The use of new alkaline batteries is recommended for maximum performance.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged (if removable).
- Rechargeable batteries are only to be charged under adult supervision (if removable).
- Different types of batteries or new and used batteries are not to be mixed.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- The toy is not to be connected to more than the recommended number of power supplies.
- Do not dispose of batteries in fire.

 
## WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES.

With the **VTech® Smart Friends Bowling™** safety comes first. To ensure your child's safety, please only assemble this product by an adult.


## PRODUCT ASSEMBLY

Caution: To ensure your child's safety, this product must be assembled by an adult. Please ensure that all assembled parts are securely locked into position before use.


1. Insert the left bumper into the left hole on the front of base.

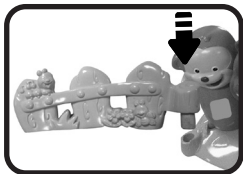

 
2. Insert the right bumper into the right hole on the front of base.

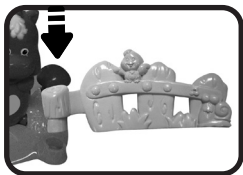

 3. Insert the base support into the two square-shaped holes at the back of the base. Ensure it is secure before allowing your child to play with the toy.

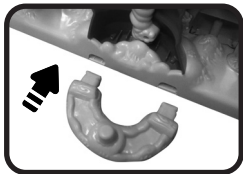

 4. Insert the base bottom into the three slots on the front of the base.

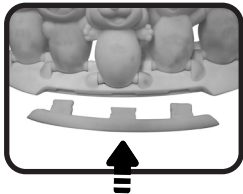

# PRODUCT FEATURES

## 1. MODE SELECTOR

To turn the unit **ON**, slide the **MODE SELECTOR** to the **JUNGLE MODE** (🐼) or the **CHALLENGE MODE** (🎵) position. To turn the unit **OFF**, slide the **MODE SELECTOR** to the **OFF** (●) position.



## 2. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® Smart Friends Bowling™** will automatically power-down after approximately 28 seconds without input. The unit can be turned on again by pressing any button.

## ACTIVITIES

1. Slide the **MODE SELECTOR** to turn the unit **ON**. You will hear a song, a friendly phrase and sounds. The lights will flash with the sounds.



2. Press the **SCORE BUTTONS** to learn numbers and hear short tunes in Jungle Mode. In Challenge Mode, press the **SCORE BUTTONS** to hear melodies. The lights will flash with the sounds.





3. Roll the ball to the **ANIMAL PINS** to bowl! In Jungle Mode, knocking down pins will play friendly phrases to teach animals, animal sounds, upbeat tunes and a song. In Challenge Mode, knocking down pins will play rewarding phrases and count points. Knock down all five pins on the first try for a strike! The lights will flash with the sounds.



4. Press the **RESET BUTTON** to reset the pins for a new round of bowling. In Jungle Mode, when a song is playing, press the **RESET BUTTON** to play fun sounds over the song. The lights will flash with the sounds.



5. If there is no input for approximately 8 seconds, you will hear a phrase, a sound or a song. If there continues to be no input for another 10 seconds, you will hear a song or a phrase. If there is no input for an additional 10 seconds, you will hear a short tune and the unit will power down. The unit can be turned on again by pressing any button.

**MELODY LIST:**

1. I've Been Working on the Railroad
2. Row, Row, Row Your Boat
3. This Old Man
4. Pop! Goes the Weasel
5. Humpty Dumpty
6. Old MacDonald Had a Farm
7. London Bridge
8. Old King Cole
9. Here We Go 'Round the Mulberry Bush
10. My Bonnie Lies Over the Ocean

**SUNG SONG 1 LYRICS**

It's time to bowl, roll the ball,  
Right to the animals, one and all.  
Roll to the animals as you like.  
Roll to the lion for a strike!

**SUNG SONG 2 LYRICS**

Let's bowl,  
Let's sing,  
We'll have fun with everything!

**SUNG SONG 3 LYRICS**

It's great, you bowled a strike!  
Having fun, as we like.  
Lion and friends, let's play again.  
Try for another strike!

## CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

## TROUBLESHOOTING

If for some reason the program/activity stops working, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

For information on this product's warranty, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

### IMPORTANT NOTE:

Creating and developing **Active Play** products is accompanied by a responsibility that we at **VTech**<sup>®</sup> take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

## Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Caution : Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

