

User's Manual



Squirrelly Adventure Tree House™



© 2017 VTech All rights reserved Printed in China

Dear Parent,

Welcome to the world of **Go! Go! Smart Animals**®! We're excited you've decided to go on an adventure with us and explore all that **Go! Go! Smart Animals**® has to offer. These toys have been designed to give your child a thrilling learning experience with hours of fun.

Go! Go! Smart Animals® features a collection of animals that interact with your child by lighting up and playing music and sounds while teaching your child letters and animal names*. But that's only the beginning of the learning excitement! When your child interacts with our innovative SmartPoint® technology, they will love hearing the animals respond to each SmartPoint® location on Go! Go! Smart Animals® and Go! Go! Smart Wheels® playsets* with different phrases, cheerful melodies, sing-along songs or sound effects.

Additionally, our Go! Go! Smart Animals® playsets can be connected to other playsets including Go! Go! Smart Wheels® to stimulate your child's creativity. The playsets also feature buttons, gears and other manipulative elements to encourage the development of your child's fine motor skills.

With Go! Go! Smart Animals®, playtime goes wild with learning!™

sincerely,

Your friends at VTech®


To learn more about VTecho toys, visit vtechkids.com

*Each sold separately.

INTRODUCTION

Thank you for purchasing the VTech® Go! Go! Smart Animals® Squirrelly Adventure Tree House™!

Explore the Go! Go! Smart Animals® Squirrelly Adventure Tree House™ by VTech®. Learn about the squirrel, its color and more with the SmartPoint® squirrel. Then, lift the platform to launch the squirrel down the slide. For added fun, you can connect this playset to other Go! Go! Smart Animals® and Go! Go! Smart Wheels® playsets (each sold separately).

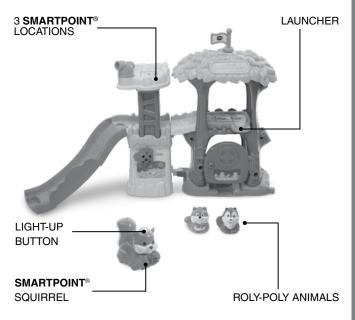

INCLUDED IN THIS PACKAGE



Smartpoint® squirrel



Tree house



One flag



Slide track



One squirrel



One dog



One label sheet



User's manual

Unlock the packaging lock:



- ① Rotate the packaging lock counter-clockwise 90 degrees.
- ② Pull out and discard the packaging lock.

WARNING: All packing materials, such as tape, plastic sheets,

packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

ATTENTION: Pour la sécurité de votre enfant, débarrassez-

vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.

NOTE: Please keep this user's manual as it contains important

information.

GETTING STARTED

BATTERY INSTALLATION - SQUIRREL

- 1. Make sure the unit is turned OFF.
- Locate the battery cover on the bottom of the squirrel. Use a coin or a screwdriver to loosen the screw.
- Install two new "AAA" (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)




 Replace the battery cover by laying it flat against the battery slot and tightening the screw to secure it.

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbonzinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- · Do not use damaged batteries.
- Insert batteries with the correct polarity.

- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- · Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Please adhere the labels to the playset as indicted below:

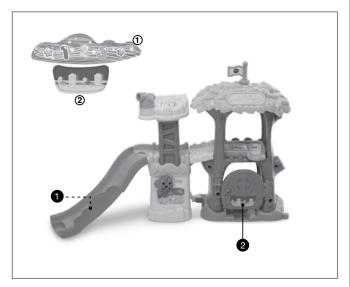

ASSEMBLY INSTRUCTIONS

With the VTech® Go! Go! Smart Animals® Squirrelly Adventure Tree House™, safety comes first. To ensure your child's safety, adult assembly is required.

 Insert the FLAG into the top of the TREE HOUSE. You will hear a "click" sound to indicate the FLAG is secure.




2. Attach the **RAMP TRACK** to the **TREE HOUSE**.



PRODUCT FEATURES - SQUIRREL

1. ON/OFF SWITCH

 To turn the unit ON, slide the ON/OFF SWITCH to the ON (0) position. To turn the unit OFF, slide the ON/OFF SWITCH to the OFF (0) position.




2. AUTOMATIC SHUT-OFF

To preserve battery life, the unit will automatically power-down after approximately 30 seconds without input. The unit only can be turned on again by pressing the **LIGHT-UP BUTTON** or pushing the squirrel quickly.

Note: This product is in try-me mode in the packaging. After opening the package, turn the animal OFF and ON again to proceed with normal play. If the unit powers down while playing, we suggest changing the batteries.

ACTIVITIES - SQUIRREL

  Slide the ON/OFF SWITCH to the ON position to turn the unit on. You will hear sounds, a song and a phrase. The light will flash with the sounds.



Press the LIGHT-UP BUTTON to hear fun sounds, songs and phrases. The light will flash with the sounds.



Push the squirrel to hear fun sounds and melodies. While a melody is playing, push the squirrel again to add fun sounds on top of the melody. The light will flash with the sounds.



4. For added fun, the squirrel interacts with the VTech® Go! Go! Smart Animals® Squirrelly Adventure Tree House™. Simply place the squirrel on one of the playset's SmartPoint® locations to see the light flash and to hear greetings, fun sounds, short tunes and phrases. You can also play with



your animal on other Go! Go! Smart Animals® playsets and Go! Go! Smart Wheels® tracks (each sold separately).

PRODUCT FEATURES – SQUIRRELLY ADVENTURE TREE HOUSE™

1. SMARTPOINT® LOCATIONS

The Squirrelly Adventure Tree House™ includes three SmartPoint® locations that interact with the included SmartPoint® squirrel or other Go! Go! Smart Animals® characters (each sold separately). Simply place the animal on a SmartPoint® location to hear fun sounds, phrases and music.

ACTIVITES

 Place the squirrel on the SMARTPOINT® LAUNCHER. Lift the LAUNCHER, and watch the squirrel race down the ramp.



 Place the squirrel on the SMARTPOINT® TELESCOPE platform to trigger a fun response. Twist the telescope for mechanical play.



Move the ladybug back-and-forth for added pretend play.



 Open and close the tree house door to let the squirrel in and out of the house. When the squirrel is placed in the tree, the SMARTPOINT® will trigger a response.



CARE & MAINTENANCE

- 1. Keep the unit clean by wiping it with a slightly damp cloth.
- Keep the unit out of direct sunlight and away from any direct heat source.
- 3. Remove the batteries when the unit will not be in use for an extended period of time.
- Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working, please follow these steps:

- 1. Please turn the unit OFF.
- 2. Interrupt the power supply by removing the batteries.
- 3. Let the unit stand for a few minutes, then replace the batteries.
- 4. Turn the unit **ON**. The unit should now be ready to play again.
- If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our website at www.vtechkids.com and filling out our Contact Us form located under the Customer Support link. A service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing Infant Learning products is accompanied by a responsibility that we at VTech® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our website at www.vtechkids.com and filling out our Contact Us form located under the Customer Support link with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

CAN ICES-3 (B)/NMB-3(B)



PRODUCT WARRANTY

This Warranty is applicable only to the original purchaser, is non-transferable and applies only to "VTech" products or parts. This product is covered by a 3-month Warranty from the original purchase date, under normal use and service.

against defective workmanship and materials. This Warranty does not apply to (a) consumable parts, such as batteries; (b) cosmetic damage, including but not limited to scratches and dents; (c) damage caused by use with non-VTech products; (d) damage caused by accident, misuse, unreasonable use, immersion in water, neglect, abuse, battery leakage, or improper installation, improper service, or other external causes; (e) damage caused by operating the product outside the permitted or intended uses described by VTech in the owner's manual; (f) a product or part that has been modified (g) defects caused by normal wear and tear or otherwise due to the normal aging of the product; or (h) if any VTech serial number has been removed or defaced.

Prior to returning a product for any reason, please notify the VTech Consumer Services Department by going to our website at www.vtechkids.com, filling out our Contact Us form located under the Customer Support link or calling 1-800-521-2010.

If the service representative is unable to resolve the issue, you will be provided instructions on how to return the product and have it replaced under Warranty. Return of the product under Warranty must adhere to the following rules: If VTech believes that there may be a defect in the materials or workmanship of the product and can confirm the purchase date and location of the product, we will at our discretion replace the product with a new unit or product of comparable value. A replacement product or parts assumes the remaining Warranty of the original product or 30 days from the date of replacement, whichever provides longer coverage.

THIS WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL, WRITTEN, STATUTORY, EXPRESS OR IMPLIED. IF VTECH CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY AND TO THE REPLACEMENT SERVICE AS DETERMINED BY VTECH IN ITS SOLE DISCRETION.

To the extent permitted by law, VTech will not be responsible for direct, special, incidental or consequential damages resulting from any breach of Warranty.

This Warranty is not intended to persons or entities outside the United States of America. Any disputes resulting from this Warranty shall be subject to the final and conclusive determination of VTech.