

vtech®

CYBER SPY NOTEBOOK™



© 2008 VTech
Printed in China
91-002329-000-000 (美)

Dear Parent,

At VTech®, we know that in order to effectively reach kids, today's learning tools have to be plugged into the fast-paced world around them. That's why we created the **Grade School Learning Series** – an engaging set of stylized, interactive computers specially designed to get grade-school kids up to speed with their fast-paced, tech-savvy world.

Every product in the **Grade School Learning Series** covers a wide range of school basics – math, language, social studies, science, and even an intro to basic Spanish, French and German. Activities are presented in a fast-paced, arcade-game style that kids will recognize and enjoy. Each learning machine is loaded with hi-tech features such as word processors, electronic address books, plug-in accessories, and PC uplinks – tools that go hand-in-hand with the way kids learn, play and use information.

As a bonus, each Grade School Learning product includes a free 1-year membership to www.planetvtech.com. Here kids can play, learn and hang out, all within a safe and secure web environment that's fun for play and approved by Mom.

With the **Grade School Learning Series**, kids can access a way to learn that closely matches the way they already live and play. We thank you for trusting VTech® with the important job of helping your child learn and succeed. We hope to help your child discover that "It's Cool to Be Smart!"

Sincerely,



Julia Fitzgerald
Vice President, Marketing
VTech Electronics, NA

To learn more about the Electronic Learning Series™ and other VTech® toys, visit www.vtechkids.com

CYBER SPY NOTEBOOK™ USER'S MANUAL

TABLE OF CONTENTS

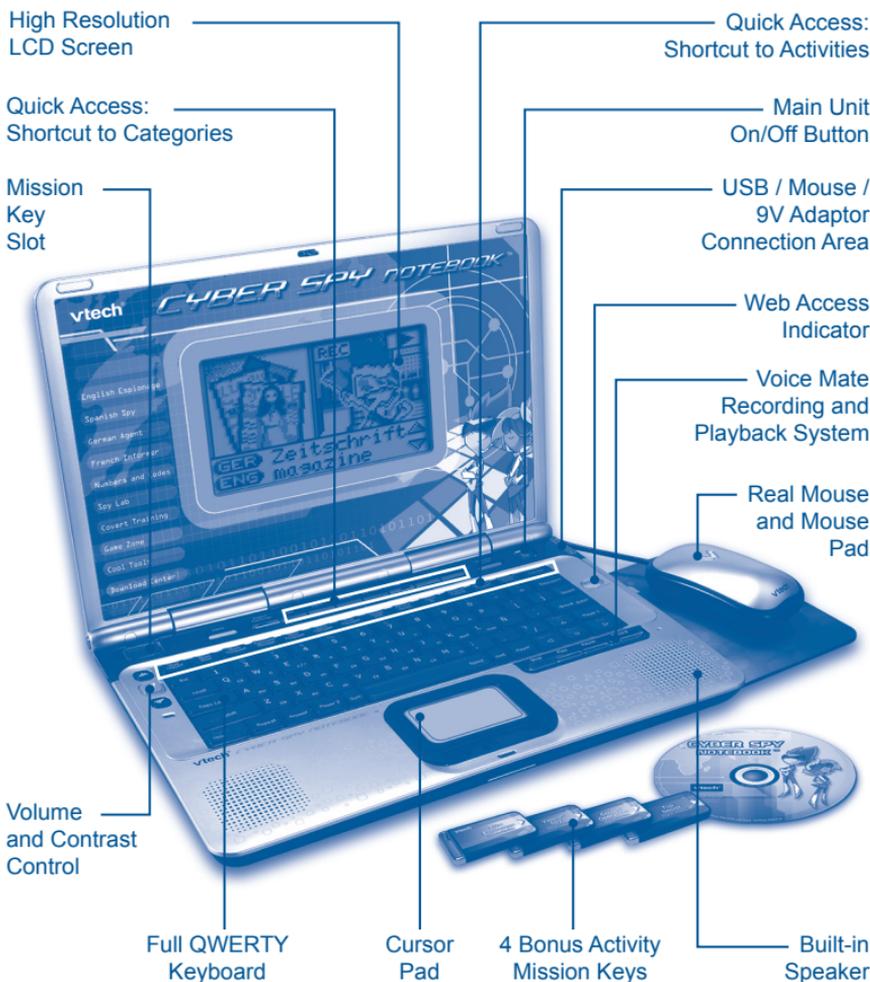
SECTION 1	INTRODUCTION
CHAPTER 1	INTRODUCTION
CHAPTER 2	INCLUDED IN THIS PACKAGE
SECTION 2	SET-UP
CHAPTER 1	GETTING STARTED
CHAPTER 2	PRODUCT FEATURES
SECTION 3	ACTIVITIES
CHAPTER 1	MAIN UNIT
CHAPTER 2	MISSION KEY 1: ENGLISH MISSION - TOP SECRET
CHAPTER 3	MISSION KEY 2: SPANISH MISSION - COVERT OPERATION
CHAPTER 4	MISSION KEY 3: GERMAN MISSION - ELITE ESPIONAGE
CHAPTER 5	MISSION KEY 4: FRENCH MISSION - VETERAN SPY
SECTION 4	INTERNET CONNECTIVITY
CHAPTER 1	SOFTWARE INSTALLATION
CHAPTER 2	ACCOUNT REGISTRATION
CHAPTER 3	LOGGING IN
CHAPTER 4	FEATURES IN PLANET VTECH
SECTION 5	CYBER SPY HEADQUARTERS
CHAPTER 1	CONNECTING TO CYBER SPY HEADQUARTERS
CHAPTER 2	NAVIGATING AROUND
CHAPTER 3	LAUNCHING MISSIONS
SECTION 6	CARE AND MAINTENANCE
CHAPTER 1	CARE AND MAINTENANCE
CHAPTER 2	TROUBLESHOOTING
CHAPTER 3	TECHNICAL SUPPORT
CHAPTER 4	OTHER INFORMATION

INTRODUCTION

CYBER SPY NOTEBOOK™

Thank you for purchasing the **VTech® Cyber Spy Notebook™**.

Your **Cyber Spy Notebook™** is an electronic learning laptop that you can take on the go, or connect to our **web site** to play interactive games online in vivid color! **Cyber Spy Notebook™** challenges young minds with over 100 activities in different categories as diverse as English, Spanish, German, French, math, logic, science, history, geography, music and more.



INCLUDED IN THIS PACKAGE

- **Cyber Spy Notebook™** console
- Real mouse
- Mouse pad
- PC connection cable
- PC desktop software CD-ROM
- 4 bonus activity mission keys
- 2 instruction manuals
- Planet VTech Membership Card

WARNING:

All packing materials such as tape, plastic sheets, wire ties and tags are not part of this toy and should be discarded for your child's safety.

SET-UP

GETTING STARTED

Before playing for the first time, please insert 4 new "AA" sized alkaline batteries. (The "AA" sized batteries included in the unit are for demo purpose only and are not long-life batteries.) Or use a VTech 9V AC (300mA center positive) power supply adaptor (sold separately).

If you are using a power supply adaptor, please remember to empty the battery slot first. Before playing, please make sure the plastic strip is removed from the bottom of the unit.

BATTERY INSTALLATION

Cyber Spy Notebook™ operates on 4 "AA" sized batteries or a **VTech®** (300mA center positive) power supply adaptor (sold separately).

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit and open it.
3. Insert 4 "AA" sized batteries as illustrated.
4. Close the battery cover.

NOTE: For best performance, replace with new, alkaline batteries.

RECHARGEABLE BATTERIES ARE NOT RECOMMENDED.



BATTERY NOTICE

- The use of new alkaline batteries is recommended for maximum performance.
- Do not try to recharge non-rechargeable batteries.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Do not mix new and used batteries.
- Only use batteries of the recommended or equivalent type.
- Install batteries correctly observing the polarity (+, -) signs to avoid leakage.
- Batteries that have run out of energy must be removed from the toy.
- Do not short circuit the supply terminals.
- Do not use more batteries than recommended.
- Remove batteries from the toy if it will not be used for an extended period of time.
- Do not dispose of batteries in fire.

Notice: When **Cyber Spy Notebook™** is on, you may see this icon appear on the screen . This indicates that battery power is low, and you should replace the batteries soon.

AC-DC ADAPTOR



Use a **VTech®** adaptor or any other standard adaptor that complies with EN61558 DC 9V  300mA  center-positive adaptor.

CONNECTING THE ADAPTOR

1. Make sure the unit is **OFF**.
2. Locate the adaptor jack on the right side of the unit.
3. Insert the adaptor plug into the unit's adaptor jack.
4. Plug the adaptor into a wall outlet.
5. Turn the unit **ON**.

NOTE: When the toy is not going to be in use for an extended period of time, unplug the adaptor.

ADAPTOR NOTICE

- The toy is not intended for use by children under 3 years old.
- Only use the recommended adaptor with the toy.
- The adaptor is not a toy.
- Never clean a plugged-in toy with liquid.
- Never use more than 1 adaptor.
- Do not leave toy or adaptor plugged in for extended periods of time.

NOTICE TO PARENTS

Regularly examine the adaptor, checking for damage to the cord, plug, transformer or other parts. Do not use the adaptor if there is any damage to it.

USING THE MOUSE

CONNECTING THE MOUSE

Use the mouse only on the supplied mouse pad so that the roller ball is not damaged and the cursor moves freely across the screen. Only use a mouse that is compatible with **VTech®** products.

1. Make sure the unit is **OFF**.
2. Locate the mouse jack on the right side of the unit.
3. Plug the mouse into the mouse jack.



USING THE MOUSE

1. Move the mouse in the direction you want the cursor to move.
2. Click the mouse button to make a selection.

CLEANING THE MOUSE

1. Following the arrows, use a screwdriver to open the cover on the bottom of the mouse.
2. Take the ball out of the mouse and use a dry cloth to clean the mouse and the ball.
3. Place the ball back in the mouse, replace the mouse cover and screw the cover closed.



INSERTING MISSION KEYS

1. Make sure the unit is turned **OFF**.
2. Insert the mission key into the mission key slot on the left side of the unit. The mission key should lock into place. Please use care when removing the mission key from the slot.



3. Turn **Cyber Spy Notebook™ ON** by pressing the  button.

PRODUCT FEATURES

THE UNIT

TURNING THE UNIT ON AND OFF

Pressing the  button will turn the unit **ON**.

Pressing the  button again will turn the unit **OFF**.

AUTOMATIC POWER OFF

To save power, **Cyber Spy Notebook™** automatically shuts down if it does not receive any input after several minutes. Press the  button to wake your unit. We recommend that you turn off the unit when finished playing. Remove the batteries and unplug the adaptor if your **Cyber Spy Notebook™** will not be used for an extended period of time.

VOLUME AND CONTRAST CONTROL

Pressing the  button will switch to Volume control. Pressing the  button again will switch to Contrast control. Press  or  to adjust the Volume or Contrast.

KEYBOARD LAYOUT

In addition to a full QWERTY keyboard, you will also find the function keys described below:



HOT KEYS (1)

Press one of the following buttons to jump to the sub menu of the chosen category.



- | | |
|---------------------------|--|
| Demo: | Press this key to enter the Demo program. |
| English Espionage: | Press this key to enter the English category. |
| Spanish Spy: | Press this key to enter the Spanish category. |
| German Agent: | Press this key to enter the German category. |
| French Informer: | Press this key to enter the French category. |
| Numbers and Codes: | Press this key to enter the Math category. |
| Spy Lab: | Press this key to enter the Science category. |
| Covert Training: | Press this key to enter the Social Studies category. |
| Game Zone: | Press this key to enter the Games category. |
| Download Center: | Press this key to enter the Download Center Menu. |

HOT KEYS (2)

Press one of the following buttons to jump directly to the activity.



-  Press this key to enter the Mission Key Menu.
-  Press this key to switch ON/OFF the Background Music.
-  Press this key to enter the Music Mixer activity.
-  Press this key to enter the Music Composer activity.
-  Press this key to enter the Supersonic Message activity.
-  Press this key to enter the Word Processor activity.
-  Press this key to enter the Agent Calculator activity.
-  Press this key to enter the Cool Translator activity.
-  Press this key to enter the Reward Vault activity.
-  Press this key to enter the Personal Identity activity.
-  Press this key to enter the Agent Phonebook activity.
-  Press this key to enter the Progress Tracking activity.
-  Press this key to enter the Dance Disguise activity.
-  Press this key to enter the Download Center Menu.

FUNCTION KEYS:

Press one of the following buttons to perform the indicated action:

- Esc:** Press this key to exit the current activity.
- Caps Lock:** Press this key to type capital letters. Press it again to type lowercase letters.

- Shift:** Press and hold this key to capitalize letters. This key can also access the alternate function of another key, when both are pressed at the same time.
- Status:** Press this key with the Shift key to get the status of the current game.
- Help:** Press this key to see helpful instructions for the current activity.
- Level:** Press this key to select an activity's level of difficulty.
- Answer:** Press this key to see the correct answer to a question. You will not receive points if this key is pressed.
- Sym:** Press this key to access the symbol menu. Use the mouse to select and insert a symbol.
- Space Bar:** When typing, use this key to insert a space between words, letters or numbers. Press it in the dancing activity to perform your dance.
- Hint:** Press this key to get helpful hints about the activity you're playing.
- Player:** Press this key to switch between one-player and two-player modes.
- Player 1:** Press this key when Player 1 wants to answer a question in two-player mode.
- Player 2:** Press this key when Player 2 wants to answer a question in two-player mode.
- Enter:** Press this key after choosing your answer to confirm your selection.
- Delete:** Press this key to delete the current character or space to the right of the cursor or above the underscore.
- Repeat:** Press this key to repeat a question or pronunciation.
- Backspace:** Press this key to erase the character to the left of the cursor.
- Reset:** Press this button to reset the unit. (The button is located on the front of the unit.)
- Arrow Keys:** Press the arrow keys to move the cursor up, down, left or right. Press one of these keys and the shift key to use the Page Up, Page Down, Home and End functions.

Cursor Pad: You can control the mouse cursor with your finger just by touching the cursor pad  on the keyboard.

Record: Press the  button in the foreign language learning activity to record your own voice and compare pronunciations.

Stop / Pause: Press the  /  button to stop voice recording.

Play: Press the  button to listen to your recorded voice.

ACTIVITY SELECTION

With the **Cyber Spy Notebook™** you can choose from different categories of play and learning:

- English Espionage
- Spanish Spy
- German Agent
- French Informer
- Numbers and Codes
- Spy Lab
- Covert Training
- Game Zone
- Cool Tools
- Progress Tracking
- Download Center (When an activity is downloaded from our web site.)
- Mission Key (When a mission key is inserted.)

 
MAIN MENU:

When the unit is turned ON, you will see a short opening scene before entering the Main Menu. Icons representing the different categories will be shown in the menu. You can choose a category in one of these ways:

- 1) Use the arrow keys to select the category icon. Then press the  key to confirm selection.
- 2) Or use the cursor pad to select the category icon. Then press the **ENTER** key to confirm selection.
- 3) Alternatively, you can use the mouse to select the category icon by clicking the mouse once to confirm selection.

SUB MENU:

After category selection, you will see a list of activities for you to choose from. You can choose an activity in one of these ways:

- 1) Use the arrow keys to select the activity you like. Then press the  key to confirm selection.
- 2) Or use the cursor pad to select the activity on screen. Then press the **ENTER** key to confirm selection.
- 3) Alternatively, you can use the mouse to select the activity by clicking the mouse once to confirm selection.

MISSION KEY:

Make sure the unit is turned **OFF** before inserting a mission key. Insert a mission key into the mission key slot on the left side of the notebook. Then turn the notebook **ON**. You will see a short opening scene before entering the Main Menu. In the Main Menu you will see an icon for the mission key. Click the mission key icon to enter the mission key menu. A list of activities will be shown in the menu. You can choose an activity in one of these ways:

- 1) Use the arrow keys to select the activity you like. Then press the  key to start the activity.
- 2) Or use the cursor pad to select the activity icon. Then press the **ENTER** key to start the activity.
- 3) Alternatively, you can use the mouse to select the activity icon by clicking the mouse once to start the activity.

LEVEL SELECTION:

Press the  key to go to the level selection screen. Use the arrow keys or mouse to select a level. When a level is selected, the current activity will start from the beginning.

PLAYER MODE SELECTION:

Press the  key on the keyboard to switch between one-player and two-player modes. When player mode is changed, the current activity will start from the beginning.

ANSWER:

In most activities, the answer will be provided after a certain number of tries.

ACTIVITIES

Your **Cyber Spy Notebook™** offers a total of 100 activities including 8 activities from bonus mission keys.

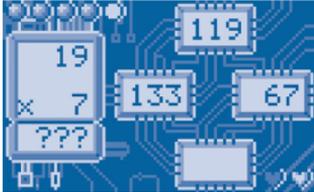
MAIN UNIT

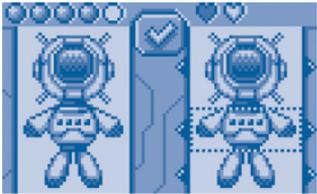
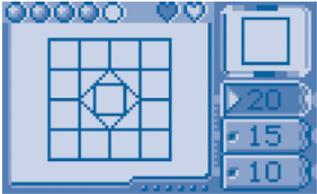
Activity No.	Activity Name	Category Name	Activity Description
1	Spanish Letter Scan	Spanish Spy	<p>Here you can hear and learn Spanish letters. You can also press the Record button to record your own voice and compare pronunciations.</p> 
2	Number Chip	Spanish Spy	<p>Here you can hear and learn Spanish numbers. You can also press the Record button to record your own voice and compare pronunciations.</p>
3	Word Trainer	Spanish Spy	<p>Select a word to learn it in Spanish. You can also press the Record button to record your own voice and compare pronunciations.</p>
4	Spanish Spy Chat	Spanish Spy	<p>Choose a topic to start a conversation in Spanish. You can also press the Record button to record your own voice and compare pronunciations.</p>
5	Spanish Spy Chat Quiz	Spanish Spy	<p>Choose the correct phrase to complete the Spanish conversation.</p>

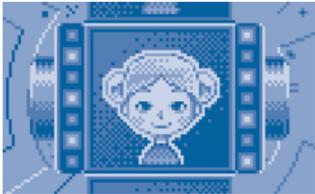
6	What's Missing?	Spanish Spy	Headquarters is missing a system code. Find the correct letter that completes the code.
7	Number Detector	Spanish Spy	Listen to the Spanish pronunciation carefully, and then choose the correct number.
8	Spanish Word File	Spanish Spy	Choose the picture that describes the Spanish word.
9	German Letter	German Agent	Here you can hear and learn German letters. You can also press the Record button to record your own voice and compare pronunciations.
10	German Number	German Agent	Here you can hear and learn German numbers. You can also press the Record button to record your own voice and compare pronunciations.
11	German Word	German Agent	Select a word to learn it in German. You can also press the Record button to record your own voice and compare pronunciations. 
12	German Gossip	German Agent	Choose a topic to start a conversation in German. You can also press the Record button to record your own voice and compare pronunciations.

13	Gossip Quiz	German Agent	Choose the correct phrase to complete the German conversation.
14	Reach a Letter	German Agent	Find the letter that completes the word.
15	Word Strike	German Agent	Type in the word as fast as you can before the entire word appears on screen.
16	Spy Speak	German Agent	Collect the correct letter that completes the word.
17	French Letter	French Informer	Here you can hear and learn French letters. You can also press the Record button to record your own voice and compare pronunciations.
18	French Number	French Informer	Here you can hear and learn French numbers. You can also press the Record button to record your own voice and compare pronunciations.
19	French Word	French Informer	Select a word to learn it in French. You can also press the Record button to record your own voice and compare pronunciations.
20	French Communication	French Informer	Choose a topic to start a conversation in French. You can also press the Record button to record your own voice and compare pronunciations.
21	Communication Quiz	French Informer	Choose the correct phrase to complete the French conversation.
22	French Spy File	French Informer	Choose the picture that describes the French word.

23	Hit a Word	French Informer	Type in the word as fast as you can before the entire word appears on screen.
24	French Interpreter	French Informer	Collect the correct letter that completes the word. 
25	Letter Catcher	English Espionage	Move the robot arm to catch the letters to complete a word. 
26	Letter Collector	English Espionage	Collect the letter to complete the word.
27	Vocabulary Clues	English Espionage	Read the clue, and then collect letters to form a word.
28	Message Marker	English Espionage	Look for incorrect capitalization or punctuation and then mark the mistakes.
29	Object Sorting Pair	English Espionage	Match the objects in pairs according to their meaning.
30	Antonym Pairs	English Espionage	Try to match the words that have the opposite meaning. 
31	Synonym Match	English Espionage	Try to match the words that have the same meaning.

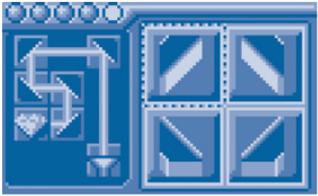
32	Homonym Match	English Espionage	Try to match the words that sound the same.
33	Equation Encrypted	Numbers and Codes	Collect the number or sign to complete the math problem.
34	Odd & Even Collector	Numbers and Codes	Collect the odd or even number according to the requirement.
35	Math Machine	Numbers and Codes	Read the math question, and then type in your answer.
36	Math Challenge	Numbers and Codes	Read the math question, and then type in your answer.
37	Number Filer	Numbers and Codes	Collect the correct file according to the math problem at the bottom of the screen.
38	Sign Detector	Numbers and Codes	Select the math sign that completes the equation. 
39	Number Spy	Numbers and Codes	Read the math question, and then type in your answer.
40	Addition Mania	Numbers and Codes	Collect the number that answers the math problem.
41	Subtraction Mania	Numbers and Codes	Read the math question, and then choose the correct answer.
42	Multiplication Mania	Numbers and Codes	Read the math question, and then choose the correct answer. 

43	Division Mania	Numbers and Codes	Read the math question, and then choose the correct answer.
44	Fraction Force	Numbers and Codes	Read the question on the left and choose the answer as fast as you can.
45	Sign Collector	Numbers and Codes	Collect the math sign to complete the math problem.
46	Math Generator	Numbers and Codes	Select the correct math sign to complete the math equation.
47	Math in Pairs	Numbers and Codes	Match the equation by selecting the upper or lower half of the gate.
48	Robot Factory	Numbers and Codes	Re-create the robot on the left by using the robot parts on the right. 
49	Fingerprint Identity	Numbers and Codes	Choose a fingerprint from the right that matches the fingerprint on the left.
50	Shape Finder	Numbers and Codes	Count the total number of shapes. 
51	Number Decoder	Numbers and Codes	Read the word on the screen, then type in the number.

52	Password Memory	Numbers and Codes	Memorize the numbers on the screen, then type the numbers within the time limit.
53	Agent Match	Numbers and Codes	Memorize the face displayed and then choose the face that matches. 
54	Formula Stabilizer	Numbers and Codes	Select the equation that completes the math problem.
55	Pattern Password	Numbers and Codes	Collect the correct symbol that completes the symbol series.
56	Number Value	Numbers and Codes	Listen to the question about place value. Type the answer as quickly as you can.
57	Multiple Mania	Numbers and Codes	Collect the number that completes the number series.
58	Treasure Find	Numbers and Codes	Mark the spot on the map according to the math problem on the right side. 
59	Multiply Grid	Numbers and Codes	Mark the spot on the map according to the math problem on the right side.

60	Time Telling	Numbers and Codes	Read the clock and then select the right time.
61	Money Counting	Numbers and Codes	Collect the amount of cyber money that is required.
62	Nature Challenge	Spy Lab	Read the question and then choose the answer as quickly as you can.
63	Spy Science	Spy Lab	Read the question and then type in your answer before the word appears.
64	Interrogation Trainer	Spy Lab	Read the question and then choose the answer as quickly as you can.
65	Earth Operation	Spy Lab	Read the question and then type in the correct answer as quickly as you can.
66	Lab Quiz Mix	Spy Lab	Read the question and select the answer before time runs out.
67	International Spy	Covert Training	Read the question and then type in the answer before it appears completely.
68	World Missions	Covert Training	Read the question and select the answer before time runs out.
69	History Expert	Covert Training	Read the question and then choose your answer as fast as you can.
70	History Surveillance	Covert Training	Read the question and then type in the correct answer as fast as you can.
71	Social Expert Mix	Covert Training	Read the question and then select your answer as fast as you can.

72	Dance Disguise	Game Zone	<p>Dance with the instructor. Remember the instructor's dance moves and then repeat the dance.</p> 
73	Database Gathering	Game Zone	<p>Collect as much data as you can in order to gain more points within the time limit.</p>
74	Typing Tutor	Game Zone	<p>Hone your typing skills by typing as many words as you can.</p>
75	Shooting Star	Game Zone	<p>Count the space objects indicated and then type in the answer.</p> 
76	Instrument Expert	Game Zone	<p>Listen to the music and then select the instrument that played the music.</p>
77	Follow the Notes	Game Zone	<p>Listen carefully to the notes and then replay them in order.</p>
78	Music Composer	Game Zone	<p>Here you can compose and listen to your own music.</p> 

79	Music Mixer	Game Zone	Choose an instrument to mix into the melody.
80	Odd One Out	Game Zone	Find out which bar code is different from the other three.
81	Password Match	Game Zone	Memorize the password and then select the same one on the right side.
82	What's the Code?	Game Zone	Memorize the password at the first screen, and then select the same password at the second screen.
83	Power Up	Game Zone	Hone your logic skills by selecting the correct mirror to reflect light to its destination. 
84	Personal Identity	Cool Tools	Here you can create your own profile by filling in specific information in the fields. Remember: all the information will be auto-saved to your notebook.
85	Agent Phonebook	Cool Tools	A place for agents to store other spy contacts. Remember: all the information will be auto-saved to your notebook.

86	Supersonic Message	Cool Tools	A cool device for agents to record and play back a secret voice message. 
87	Progress Tracking	Cool Tools	Check your score and your progress here. Click the Recycle bin to clear your score.
88	Word Processor	Cool Tools	Here you can type secret messages and then save them to read later.
89	Agent Calculator	Cool Tools	This is a simple calculator for solving math problems.
90	Download Center	Cool Tools	All activities downloaded from the web will be stored here.
91	Cool Translator	Cool Tools	Select a word and translate it into 3 different languages.
92	Reward Vault	Cool Tools	In here you can check out all your rewards.

Mission Key 1: English Mission – Top Secret

93	Letter Space	English Mission: Top Secret	Our lighting system has been shut down! Help find the secret code to activate the system.
94	Word Interpreter	English Mission: Top Secret	Try to match the objects according to how they are related.

Mission Key 2: Spanish Mission – Covert Operation

95	Crack a Code	Spanish Mission: Covert Operation	Challenge the computer! Type in the entire word before it appears on the screen completely.
96	Spanish Decoder	Spanish Mission: Covert Operation	Collect the correct letter to complete the word.

Mission Key 3: German Mission – Elite Espionage

97	German Figures	German Mission: Elite Espionage	Listen to the German pronunciation carefully, and then choose the correct number.
98	German Expression	German Mission: Elite Espionage	Choose the picture that describes the German word.

Mission Key 4: French Mission – Veteran Spy

99	Scope a Letter	French Mission: Veteran Spy	Find the correct letter to complete the word.
100	French Digit	French Mission: Veteran Spy	Listen to the French pronunciation carefully, and then choose the correct number.

INTERNET CONNECTIVITY FEATURES

MINIMUM SYSTEM REQUIREMENTS

Hardware Requirements:

CPU: Pentium® 4, 1 GHz or above

Memory: 256MB

Video Adaptor: Graphic card with 1024 x 768 at 16 or 32 bit color

Monitor Resolution: 1024 x 768

USB 1.1 or higher

100MB Hard disk space

Windows® compatible sound card and speakers

Note: Home internet connection required for online access.

Note: USB hubs are not supported.

Software Requirements:

Microsoft® Windows® 2000(SP4), XP or Windows Vista® Operating System
Internet Explorer® version 6 or above

Adobe® Flash® Player 9 (To acquire the latest version of Flash player, please visit www.adobe.com)

Note: Windows® 98/Windows® ME/Windows® NT are not supported.

Microsoft, Windows® is a registered trademark of Microsoft Corporation in the United States and other countries. Adobe®, the Adobe logo, Flash® are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries. Intel®, Pentium®, are trademarks of Intel Corporation in the United States and other countries. All other trademarks are the property of their respective owners. THIS PRODUCT IS NOT ENDORSED OR SPONSORED BY ADOBE SYSTEMS INCORPORATED, PUBLISHER OF FLASH.

Software Installation

Installing from CD-ROM:

Insert the CD-ROM that comes with your **Cyber Spy Notebook™** and follow on-screen instructions to proceed with software installation.



If the installation program does not initiate automatically when you insert the CD, you can start the installation manually by doing the following:

1. Double click on “My Computer” (located on your desktop).
2. Find the CD-ROM drive that has the **Cyber Spy Notebook™** installation CD.
3. Right click on the drive and choose “Explore”.
4. Locate and run “Setup.exe” on the explorer to begin the installation process.

Account Registration

Once you have successfully installed the software, locate the USB cord on your product and plug the device into your computer's USB port. This will take you automatically to the Planet VTech web site.

Alternatively, you can open your internet browser and enter the following URL:

www.planetvtech.com



Click on the “Sign In” button and follow the on-screen instructions to proceed with the account registration process.

Logging In

After account registration, you can go to www.planetvtech.com anytime and click the “Sign In” button to log in using your screen name and password.

Features in Planet VTech

There are many fun activities and features to be found in Planet VTech. For details, please refer to the separate Planet VTech User’s Manual.

Accessing Parents’ Center

You can track your child’s progress online and edit your account information via the online Parents’ Center. To access the Parents’ Center, please navigate to www.planetvtech.com, click the Parents’ Center button and log in to your account.

CYBER SPY HEADQUARTERS

CONNECTING TO CYBER SPY HEADQUARTERS

- Install the **Cyber Spy Notebook™** PC program. The first time you connect the **Cyber Spy Notebook™** to the PC, you will be taken to the login page of Planet VTech. Log in to play games at Cyber Spy Headquarters, or explore Planet VTech and find other exciting games and surprises!
- Once you have successfully logged in, you will be taken to the entrance of Cyber Spy Headquarters.

Entrance of Cyber Spy Headquarters



Enter Cyber Spy Headquarters

You can also type the web site into your browser’s URL to go to Planet VTech directly: [http:// www.planetvtech.com](http://www.planetvtech.com)

Note: In order to play games at Planet VTech, your PC must be connected to the Internet.

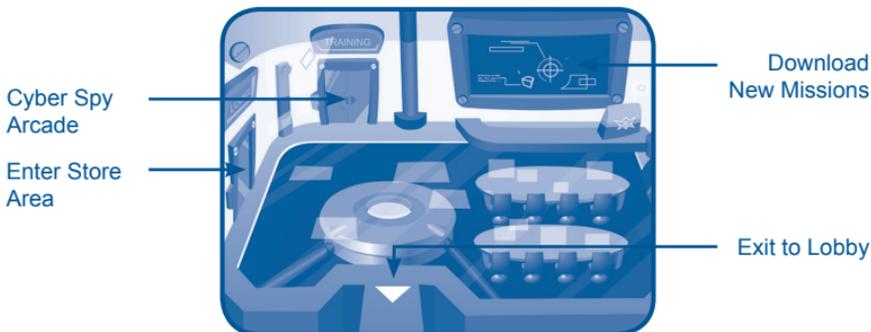
Note: The web site screenshots in this manual may be different from those seen on the actual web site.

NAVIGATING AROUND

Cyber Spy Lobby



Cyber Spy Briefing Room



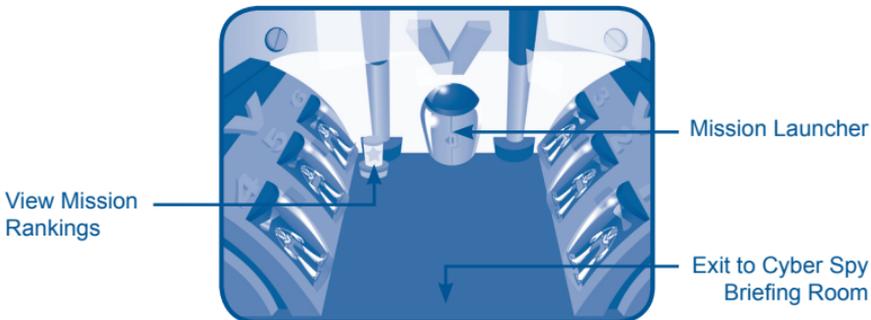
- You can download additional missions to your **Cyber Spy Notebook™** for free at Cyber Spy Headquarters.
- Click on the area shown above to download new games.

Cyber Spy Store



- You can purchase **Cyber Spy Notebook™** related items with your V.Points by clicking on the area shown above.
- You can also view your **Cyber Spy Notebook™** game scores and rank by clicking on the area shown above.

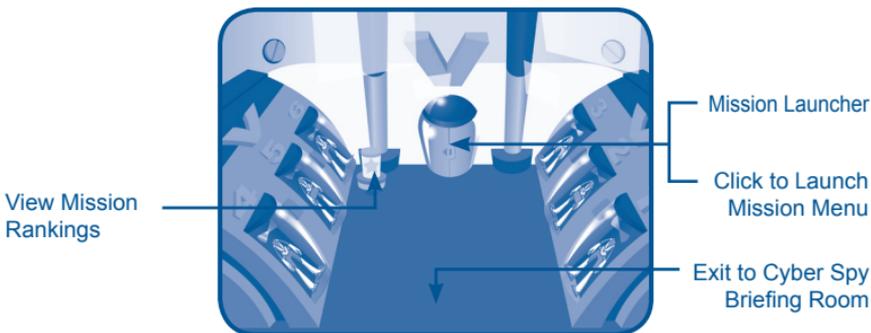
Cyber Spy Arcade



Online Tour Guide

Should you have any questions on Planet VTech, look for avatars with names beginning with "Tour Guide". They will be able to help you out!

LAUNCHING MISSIONS



- Click on the mission launcher.
- You can select different missions and start playing.

CARE & MAINTENANCE

1. Keep your **Cyber Spy Notebook™** clean by wiping it with a slightly damp cloth. Never use solvents or abrasives.
2. Keep it out of direct sunlight and away from direct sources of heat.
3. Remove the batteries when not using it for an extended period of time.
4. Avoid dropping it. **Never** try to dismantle it.
5. Always keep **Cyber Spy Notebook™** away from water.

WARNING:

A very small percentage of the public, due to an existing condition, may experience epileptic seizures or momentary loss of consciousness when viewing certain types of flashing colors or patterns.

While the **Cyber Spy Notebook™** does not contribute to any additional risks, we do recommend that parents supervise their children while they play games. If your child experiences dizziness, altered vision, disorientation, or convulsions, discontinue use immediately and consult your physician.

Please note that focusing on a screen at close range and handling a keyboard for a prolonged period of time may cause fatigue or discomfort. We recommend that children take a 15 minutes break for every hour of play.

TROUBLESHOOTING

1. If your Cyber Spy Notebook™ stops working or does not turn on:

- Check your batteries. Make sure the batteries are fresh and properly installed.
- Insert the tip of a paper clip (or a similar object without a sharp tip) into the small hole on the back of the unit labeled “Reset.”
- If you are still having problems, visit our [web site](http://www.vtechkids.com) at www.vtechkids.com for troubleshooting tips.

2. If when pressing the On/Off button, nothing happens:

- Make sure your unit is plugged in.
- If you are using batteries, check to see that they are aligned correctly.

3. If you turn the unit on, but cannot see anything on the screen:

Adjust the contrast switch to adjust the darkness of the screen.

4. If you can't hear any sound:

Adjust the volume switch to adjust the sound level of the speaker.

5. If the screen is frozen and not responding to any input:

Use the tip of a paper clip (or a similar object without a sharp tip) to gently press the Reset button.

6. If a Windows® pop-up for formatting disk appears:

Click cancel to abort the action.

7. If the PC does not auto-launch to Cyber Spy Headquarters after plugging in the Cyber Spy Notebook™:

- Make sure that the software included on the installation CD was properly installed onto the PC.
- Check the USB connection. Make sure the cable ends are connected correctly.

8. If the PC cannot access www.planetvtech.com or failed to load:

Make sure you have the latest version of Adobe Flash Player® and make sure your firewall or router is properly set up to accept the incoming connection on Port 3030.

TECHNICAL SUPPORT

If you have a problem that cannot be solved by using this manual, we encourage you to visit us online or contact our Consumer Services Department with any problems and/or suggestions that you might have.

A support representative will be happy to assist you. Before requesting support, please be ready to provide or include the information below:

- The name of your product or model number (the model number is typically located on the back or bottom of your product).
- The actual problem you are experiencing.
- The actions you took right before the problem occurred.

Internet: www.vtechkids.com

Phone: 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada

OTHER INFO

DISCLAIMER AND LIMITATION OF LIABILITY

VTech® Electronics North America, L.L.C. and its suppliers assume no responsibility for any damage or loss resulting from the use of this handbook. **VTech®** Electronics North America, L.L.C. and its suppliers assume no responsibility for any loss or claims by third parties that may arise through the use of this software. **VTech®** Electronics North America, L.L.C. and its suppliers assume no responsibility for any damage or loss caused by deletion of data as a result of malfunction, dead battery, or repairs. Be sure to make backup copies of important data on other media to protect against data loss.

Company: **VTech®** Electronics North America, L.L.C.

Address: 1155 West Dundee Rd., Suite 130, Arlington Heights, IL 60004 USA

Phone: 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

COPYRIGHT NOTICES:

Copyright(c) 2008 **VTech**[®] Electronics North America, L.L.C. All Rights Reserved. **VTech**[®] and the **VTech**[®] logo are registered trademarks of **VTech**[®] Electronics North America, L.L.C. All other trademarks are property of their respective owners.

IMPORTANT NOTE

Creating and developing Electronic Learning product is accompanied by a responsibility that we at **VTech**[®] take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada with any problems and/or suggestion that you might have. A services representative will be happy to help you.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.