

Disney

User's Manual

Explore 'n Learn Table



Visit the Disney Web site at www.disney.com

© Disney

Based on the "Winnie the Pooh" works
by A.A. Milne and E.H. Shepard.
All rights reserved.

vtech[®]

Dear Parent,

At **VTech**[®] we know that a child's imagination is a truly wonderful thing and needs to be developed and nurtured. That's why we created the **Winnie the Pooh electronic learning series**[™] of interactive learning toys to stimulate children's imaginations, while also teaching vital preschool concepts such as the alphabet, numbers, shapes, colors and objects.

Through the use of unique technology and engaging child-directed role-play scenarios, **Winnie the Pooh** characters magically come to life to guide children through learning activities. These engaging characters foster children's critical reasoning skills, enhance their fine motor skills and engage them in exciting role-play activities for endless hours of learning fun.

At **VTech**[®] we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting **VTech**[®] with the important job of helping your child learn and grow!

Sincerely,

Your Friends at **VTech**[®]

To learn more about **Winnie the Pooh electronic learning series**[™] and other **VTech**[®] toys, visit

www.vtechkids.com

INTRODUCTION

Thank you for purchasing the **VTech® Explore 'n Learn Table!**

The Explore 'n Learn Table is a magic table that's full of fun learning! With 4 moving character features, flipping bee wings and 9 chunky buttons, your child will learn age-appropriate curriculum through exciting play. With the real voice of Winnie the Pooh, fun sounds and music, too! The large music roller plays cheerful melodies and cute sung songs. Remove the legs for extra floor play fun!

MOVING
WINNIE THE
POOH JOYSTICK

MUSIC ROLLER

NUMBER & SHAPE
BUTTONS

3D BEE WITH
MOVABLE WINGS

MIRROR


ON/OFF
SWITCH

LIGHT-UP
LETTER
BUTTONS

SLIDING
EYORE

BOUNCING
TIGGER DISC

SPINNING
PIGLET

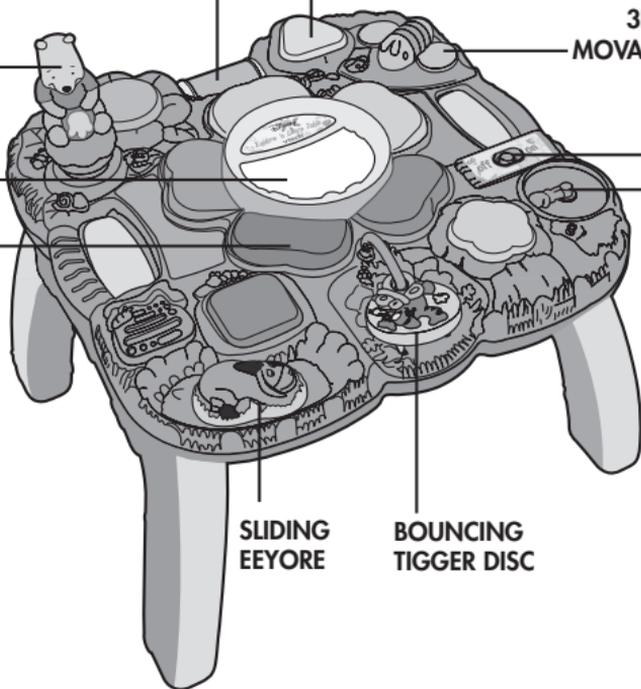

INCLUDED IN THIS PACKAGE


- One **VTech® Explore 'n Learn Table**
- Two Removable Legs
- One Winnie the Pooh Joystick
- One User's Manual

WARNING: All packing materials such as tape, plastic sheets, wire ties and tags are not part of this toy, and should be discarded for your child's safety.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit. Use a coin or screwdriver to loosen the screw.
3. Install 3 new 'AA' batteries following the diagram inside the battery box.
4. Replace the battery cover and tighten the screw to secure.

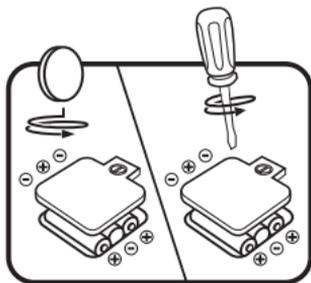

BATTERY NOTICE

- Install batteries correctly observing the polarity (+, -) signs to avoid leakage.
- Do not mix old and new batteries.
- Do not mix batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Remove the batteries from the equipment when the unit will not be used for an extended period of time.

- Always remove exhausted batteries from the equipment.
- Do not dispose of batteries in fire.
- Do not attempt to recharge ordinary batteries.
- The supply terminals are not to be short-circuited.
- Only batteries of the same and equivalent type as recommended are to be used.

WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES.


TO ENSURE YOUR CHILD'S SAFETY, THIS PRODUCT MUST BE ASSEMBLED BY AN ADULT.

The Winnie the Pooh joystick must be assembled securely onto the **Explore 'n Learn Table** before giving this toy to a child.

When used as a play table with the legs attached, please ensure the legs are securely locked into position before giving this toy to a child.

ASSEMBLY INSTRUCTIONS


1. Insert the legs one at a time by pushing them into the holes on either side of the table top. Push the legs until they snap into place. Pull the legs to ensure they are securely locked into position.

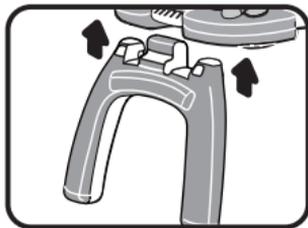

2. To remove the legs, locate the release tabs on the bottom of the table top inside the legs. Press the release tabs inwards and pull the legs out to remove.




3. To insert the Winnie the Pooh joystick, push the base of Winnie the Pooh onto the short post located next to the circle shape button until it clicks into place. Once the joystick is pushed and locked into place, it cannot be removed.

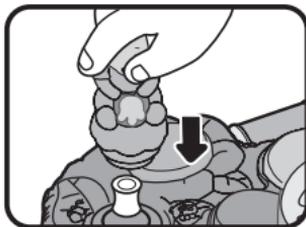

PRODUCT FEATURES


1. ON/OFF SWITCH

To turn the unit **ON**, slide the **ON/OFF SWITCH** to the **ON** position. To turn the unit **OFF**, slide the **ON/OFF SWITCH** to the **OFF** position.

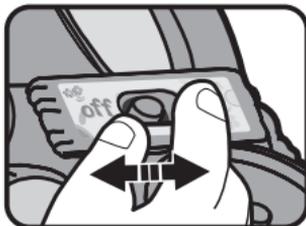

2. VOLUME CONTROL SWITCH

Locate the **VOLUME CONTROL SWITCH** on the bottom of the table. To adjust the volume, switch to the **LOW VOLUME** (🔊) or the **HIGH VOLUME** (🔊) position.

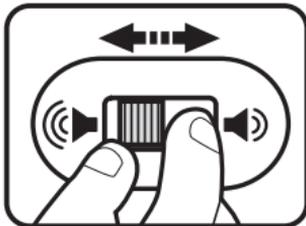


3. AUTOMATIC SHUT-OFF


To preserve battery life, the **VTech® Explore 'n Learn Table** will automatically power-down after approximately 45 seconds without input. The unit can be turned on again by pressing any button or rolling the music roller.

ACTIVITIES


1. Slide the **ON/OFF SWITCH** to turn the unit **ON**. You will hear Winnie the Pooh sing a cute song and giggle. The lights will flash with the sounds.

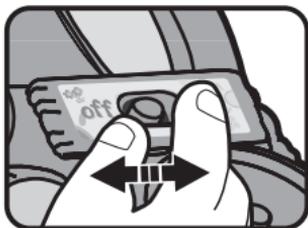

2. Move the **WINNIE THE POOH JOYSTICK** to hear fun phrases, a sung song or a melody. During any melody, move the joystick quickly to hear the melody play faster, hold the joystick down in any direction to hear the melody play slower, or release the joystick to hear the melody play normally. The lights will flash with the sounds.

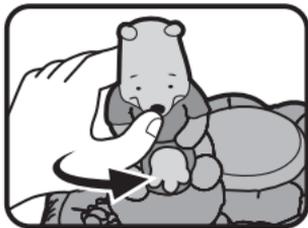

3. Flip the **TIGGER DISC**, slide **EYORE** forwards or backwards, move **PIGLET'S** arm or turn the **BEE WINGS** to learn opposites and sounds and to hear cheerful melodies and fun phrases. If a melody is playing and the same button is pressed again, the corresponding sound effect will play over the melody. The lights will flash with the sounds.

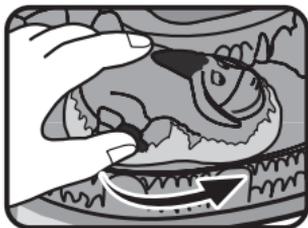

4. Press the **NUMBER/SHAPE BUTTONS** to learn numbers, shapes, colors, counting and to hear short tunes. The lights will flash with the sounds.



5. Press the **LIGHT-UP LETTER BUTTONS** to learn letters, objects and to hear fun sounds. The corresponding light will flash with the sounds.



6. Roll the **MUSIC ROLLER** to hear sung songs and a variety of melodies. If a melody is playing and the **TIGGER DISC** is pressed, **EYORE** is moved, **PIGLET'S** arm is moved or the **BEE WINGS** are turned, the corresponding sound effect will play over the melody. Move the **WINNIE THE POOH JOYSTICK** while a melody is playing to change the tempo of the melody. The lights will flash with the sounds.



7. If there is no input to the unit after approximately 15 seconds, you will hear a question. If you answer the question correctly, you will hear a positive response. You have three chances to answer correctly before returning to normal play mode. After another 15 seconds, if there is still no input, you will go into the exciting "follow the lights" game. Press the lights as fast as you can to light up the five colorful letter buttons! Press each light as it flashes and keep going until your time is up. Watch carefully! During the "follow the lights" game, press any other buttons except the 5 letter buttons to return to normal play mode.

MELODY LIST

1. If You're Happy and You Know It
2. Pop! Goes the Weasel
3. London Bridge
4. Hickory Dickory Dock
5. Here We Go 'Round the Mulbery Bush

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit off.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit on. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **electronic learning Winnie the Pooh** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

FCC Notice:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Caution : changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.