

Disney

User's Manual

Light-Up Alphabet Log



Visit the Disney Web site at www.disney.com

©Disney

Based on the "Winnie the Pooh" works by
A.A. Milne and E.H. Shepard.
All rights reserved.

vtech[®]

Dear Parent,

At VTech®, we know that a child's imagination is a truly wonderful thing and needs to be developed and nurtured. That's why we created the Winnie the Pooh® electronic learning series of interactive learning toys to stimulate children's imaginations, while also teaching vital preschool concepts such as the alphabet, numbers, shapes, colors and objects.

Through the use of unique technology and engaging child-directed role-play scenarios, Winnie the Pooh® characters magically come to life to guide children through learning activities. These engaging characters foster children's critical reasoning skills, enhance their fine motor skills and engage them in exciting role-play activities for endless hours of learning fun.

At VTech®, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting VTech® with the important job of helping your child learn and grow!

Sincerely,

Your Friends at VTech®


To learn more about the Winnie the Pooh electronic learning series™ and other VTech® toys, visit

www.vtechkids.com

INTRODUCTION

Thank you for purchasing the **VTech® Light-Up Alphabet Log** learning toy!

The **VTech® Light-Up Alphabet Log** educates children through fun, interactive play. Guided by the lovable and familiar character of Winnie the Pooh, your child will receive an entertaining introduction to the alphabet, phonics and words. With fun on-screen animations, sound effects, cheerful melodies, and the adorable Winnie the Pooh and his friends, your child will find that the fun of learning never ends!

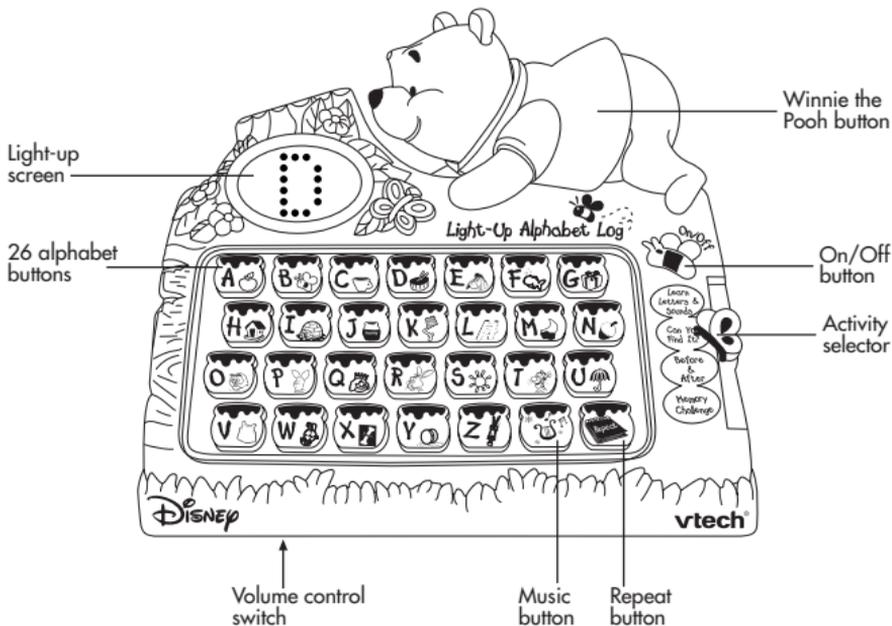

INCLUDED IN THIS PACKAGE

- One VTech® Light-Up Alphabet Log learning toy.
- One instruction manual.

WARNING:

All packing materials such as tape, plastic sheets, wire ties and tags are not part of this toy, and should be discarded for your child's safety.


GETTING STARTED

REMOVE DEMO TAG

The demo tag should detach automatically when the product is taken out of the packaging. If the demo tag is still attached, please remove it from the bottom of the unit to begin normal play mode.

BATTERY INSTALLATION

1. Make sure the unit is turned OFF.
2. Locate the battery cover on the bottom of the unit.
3. Install 3 new "AA" (LR 06) batteries following the diagram inside the battery box. (The use of new, alkaline batteries is recommended for best performance.)
4. Replace the battery cover.

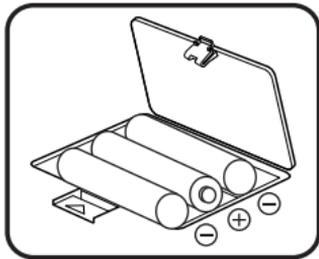

BATTERY NOTICE

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged (if removable).
- Rechargeable batteries are only to be charged under adult supervision (if removable).
- Different types of batteries or new and used batteries are not to be mixed.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- The toy is not to be connected to more than the recommended number of power supplies.
- Do not dispose of batteries in fire.

WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES.

PRODUCT FEATURES


ON/OFF BUTTON

1. To turn the unit on, press the **ON/OFF BUTTON**. You will hear the opening melody and greeting.
2. Press the **ON/OFF BUTTON** again to turn the unit off.



ACTIVITY SELECTOR

To change the activity mode, slide the **ACTIVITY SELECTOR** up or down.

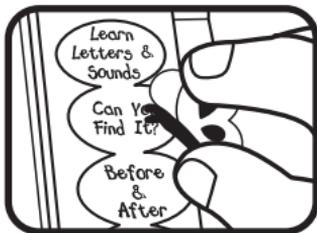


WINNIE THE POOH BUTTON

Press this button to hear a greeting from Pooh, or a question from one of the activities.




REPEAT BUTTON

To hear the previous response repeated, press the **REPEAT** BUTTON.

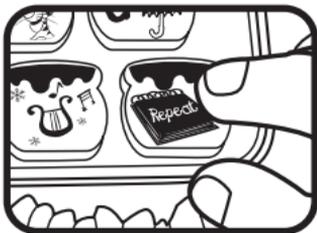


MUSIC BUTTON

Press the **MUSIC BUTTON** to change or stop the background music.

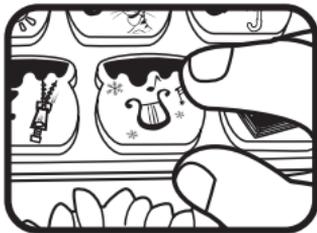

VOLUME CONTROL SWITCH

Adjust the volume by sliding the **VOLUME CONTROL SWITCH** located at the bottom of the unit. Slide it to the left for lower volume, and to the right for higher volume.

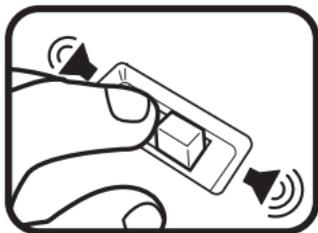

26 ALPHABET BUTTONS



Press these buttons to hear about the letters and words pictured, and to answer questions in the activities.

AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® Light-Up Alphabet Log** will automatically turn off after several minutes without input. The unit can be turned on again by pressing the **ON/OFF** button.

ACTIVITIES

1. Learn Letters & Sounds



- Press an alphabet button to hear the name of the letter shown, and a related word or phrase. Press it again to hear more words, sounds, and phrases. At the same time, a picture will appear on the light-up screen.
- Press the Winnie the Pooh button to hear a greeting from Pooh. Press it again to learn a letter, letter sound or word.

2. Can You Find It?



- Pooh will ask you to find a certain letter or object. To answer, press an alphabet button.
- Press the Winnie the Pooh button to hear a greeting from Pooh. Press it again, and he will ask you to find one of his friends by pressing an alphabet button.

3. Before & After



- Pooh will give you some clues about a letter. Press an alphabet button to find it.
- Press the Winnie the Pooh button to hear a fun phrase from Pooh. Press it again, and he will give you clues about an object. Press an alphabet button to find it.

4. Memory Challenge



- Follow Pooh's sequence of objects by pressing the right alphabet buttons. If you answer correctly, you will hear a cheerful melody.
- Press the Winnie the Pooh button to hear a greeting from Pooh. Press it again, and Pooh will ask you to help him spell a word. Press the correct alphabet buttons to answer.

MELODY LIST

1. Here We Go 'Round the Mulberry Bush
2. Bingo
3. Sing a Song of Sixpence
4. Ring Around the Rosie
5. London Bridge is Falling Down
6. Hickory Dickory Dock

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on a hard surface and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working, please follow these steps:

1. Turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, install a set of new batteries.
6. If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-800-267-7377 in Canada, and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing the **Winnie the Pooh**[®] electronic learning products is accompanied by a responsibility that we at **VTech**[®] take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S., or 1-800-267-7377 in Canada with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note:

This equipment generates and uses radio frequency energy and if not installed and used properly, that is, in strict accordance with the manufacturer's instructions, it may cause interference to radio and television reception. It has been type tested and found to comply within the limits for a Class B computing device in accordance with the specifications in Subpart J of Part 15 FCC Rules, which are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference with radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help