


vtech®

Parent's Guide

Disney


Go!Go!  
Smart Wheels®

## Minnie Ice Cream Parlor

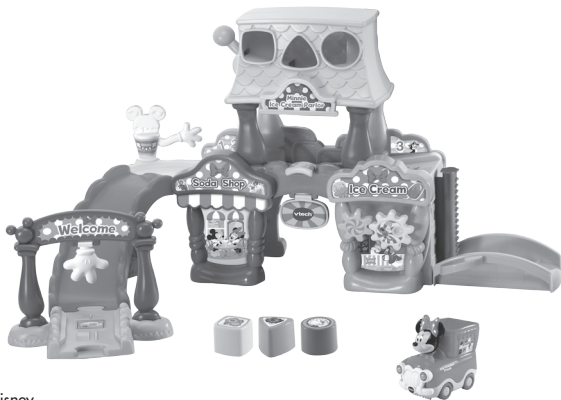

# INTRODUCTION

Thank you for purchasing the **VTech® Go! Go! Smart Wheels® Minnie Ice Cream Parlor!** Take a ride with Minnie and her Ice Cream Truck down the tracks and through the gate to deliver ice cream treats.

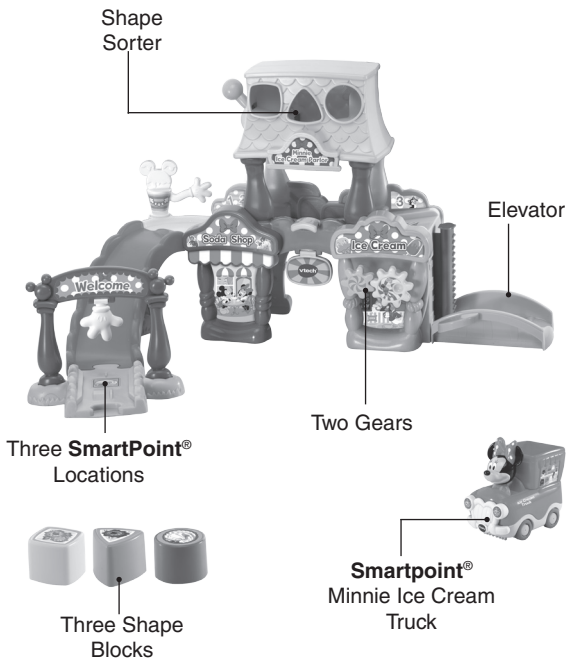


# INCLUDED IN THIS PACKAGE




One **SmartPoint®**  
Minnie Ice Cream Truck



One shape sorter

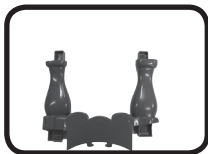

Shape sorter  
support A

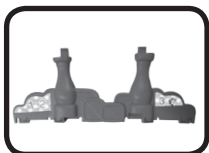

Shape sorter  
support B



One delivery  
launcher



One gate




One elevator  
guide rail



One elevator  
wall



One elevator

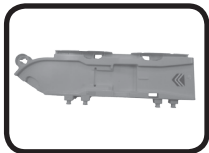

One second  
level track



Base wall A




Base wall B



Base wall C



Base wall D

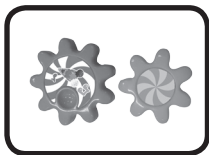

Two gears



Three shape  
sorter blocks



One ramp exit



One ramp exit  
sign



One exit track



One ramp track



One ramp track  
support



One parlor sign



One label sheet

- One parent's guide

## WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.

**NOTE:** Please keep this parent's guide as it contains important information.

## ATTENTION:

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes et vis d'emballage. Ils ne font pas partie du jouet.


**NOTE :** Il est conseillé de conserver ce guide des parents car il comporte des informations importantes.

**Adult assembly required.**

**Ce jouet doit être assemblé par un adulte.**

## Unlock the packaging locks:

- ① Turn the packaging locks counter-clockwise several times.
- ② Pull out and discard the packaging locks.

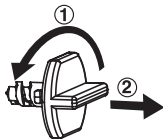


# GETTING STARTED

## BATTERY INSTALLATION

### Ice Cream Truck

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the **Ice Cream Truck**. Use a screwdriver to loosen the screw.
3. Install 2 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)

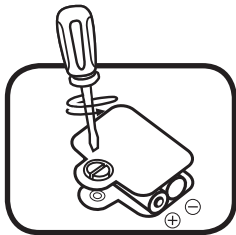

4. Replace the battery cover and tighten the screw to secure the battery cover.





## BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

## LABEL APPLICATION

Please adhere the labels to the playset securely as indicated on the following page:



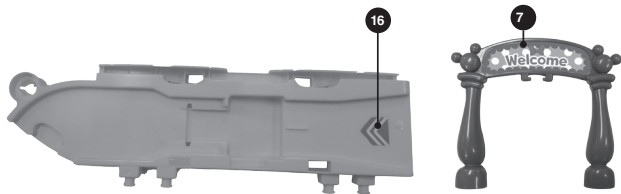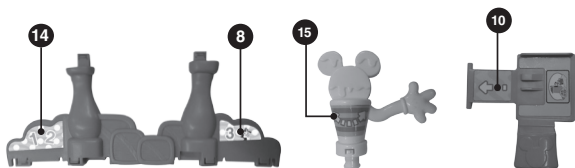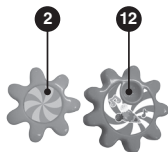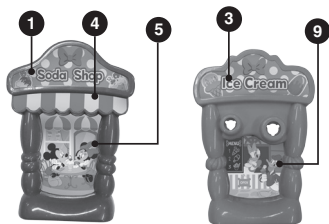


# ASSEMBLY INSTRUCTIONS



## Minnie Ice Cream Parlor

With the VTech® Go! Go! Smart Wheels® Minnie Ice Cream Parlor, safety comes first. To ensure your child's safety, adult assembly is required.


1. Insert the two **Gears** into **Base Wall B**, as shown below. You will hear a “click” sound to indicate the pieces are secure.

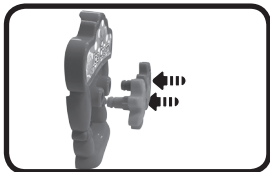

2. Insert **Base Walls A, B, C** and **D** into the **Second Level Track**, as shown below. You will hear a “click” sound to indicate the pieces are secure.

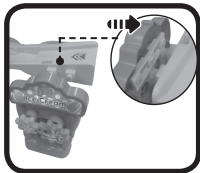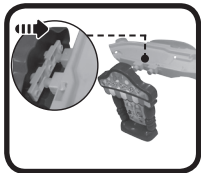


3. Insert the **Gate** into the **Second Level Track**, as shown below. You will hear a “click” sound to indicate the piece is secure.

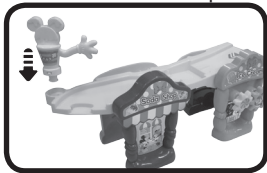






4. Attach the **Elevator Guide Rail** and **Elevator Wall**. Then, insert the **Elevator Guide Rail** into the **Elevator**, as shown below.

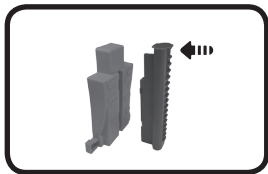


5. Insert the **Elevator Support Wall** into the **Second Level Track**, **Base Wall B** and **Base Wall C**, as shown below. You will hear a “click” sound to indicate the pieces are secure.

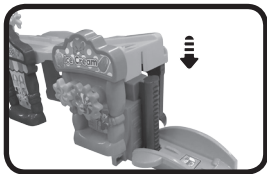

6. Insert **Shape Sorter Support A** and **B** into the **Second Level Track**. Then, insert the **Parlor Sign** into **Shape Sorter Support A**, as shown below. You will hear a “click” sound to indicate the pieces are secure.

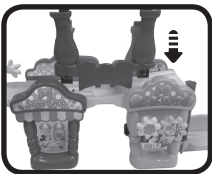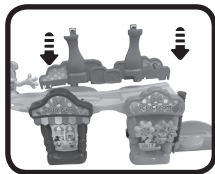



7. Insert the **Delivery Launcher** into the **Second Level Track**, as shown below.

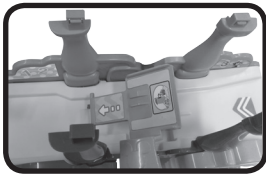

8. Insert the **Shape Sorter** into the **Shape Sorter Supports**, as shown below. You will hear a “click” sound to indicate the pieces are secure.



9. Insert the **Ramp Track Support** into the **Ramp Track**. Then, attach the **Ramp Track** to the **Second Level Track**, as shown below.

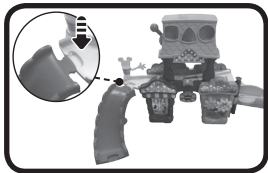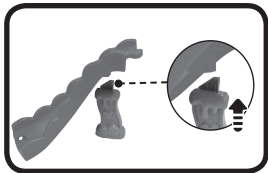

10. Attach the **Ramp Exit Sign** to the **Ramp Exit**. Then, insert the **Ramp Exit** to the **Exit Track**, as shown below. You will hear a “click” sound to indicate the pieces are secure.




Once you've completed the above steps, connect the tracks and you're ready to play! You can connect this playset to other **Go! Go! Smart Wheels®** tracks and playsets (each sold separately).



## EXPAND & EXPLORE

Connect to the **Go! Go! Smart Wheels® Mickey Choo-Choo Express** (as shown below) or other **Go! Go! Smart Wheels®** playsets (each sold separately) to expand the **Minnie Ice Cream Parlor** and inspire creativity.

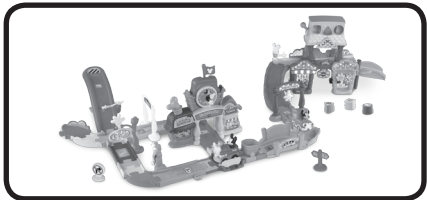


# PRODUCT FEATURES

## Ice Cream Truck

### 1. ON/OFF SWITCH

To turn the unit **ON**, slide the **On/Off Switch** to the **ON** (☺) position. To turn the unit **OFF**, slide the **On/Off Switch** to the **OFF** (●) position.

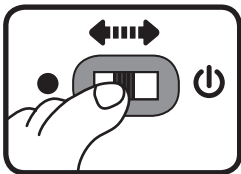

### 2. AUTOMATIC SHUT-OFF


To preserve battery life, the **Ice Cream Truck** will automatically power-down after approximately 50 seconds without input. The unit can be turned on again by pressing the **Character Button** or pushing the **Ice Cream Truck** quickly.

**Note:** This product is in Try-Me mode in the packaging. After opening the package, turn the **Ice Cream Truck** off and on again to proceed with normal play. If the unit repeatedly powers down while playing, we suggest changing the batteries.

## ACTIVITIES

### Ice Cream Truck

1. Slide the **On/Off Switch** to the **ON** position to turn the unit **ON**. You will hear a song, a phrase and sounds. The lights will flash with the sounds.

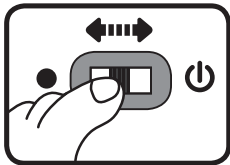

2. Press the **Character Button** to hear fun sounds, songs and phrases. The lights will flash with the sounds.



3. Push the **Ice Cream Truck** to hear fun sounds and melodies. While the melody is playing, push the vehicle again to add in fun sounds on top of the melody. The lights will flash with the sounds.



4. For added fun, the **Ice Cream Truck** interacts with the **Go! Go! Smart Wheels® Minnie Ice Cream Parlor**. Simply roll or put the **Ice Cream Truck** on one of the playset's three **SmartPoint®** locations to hear the **Ice Cream Truck** play fun sounds, short tunes and phrases.

## ACTIVITIES

### Minnie Ice Cream Parlor


1. Place the **Ice Cream Truck** on any of the playset's three **SmartPoint®** locations to trigger fun sounds, phrases and music.



2. Put the **Ice Cream Truck** on the elevator and lift it up and down.



3. With the vehicle in the delivery launcher, place the **Shape Sorter Blocks** in the **Shape Sorter** and pull the lever to drop a **Shape Sorter Block** in the back of the **Ice Cream Truck**.

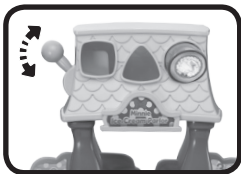

## SONGS

1. Delivering here,  
Delivering there,  
Delivering ice cream everywhere!
2. Did you ever see a sweet treat?  
A sweet treat,  
A sweet treat,  
Did you ever see a sweet treat?  
You didn't want to eat.
3. Come and pick out your favorite treat.  
'Cause Minnie's ice cream just can't be beat!

## MELODY LIST

1. Chopsticks
2. Did you Ever See a Lassie
3. Flight of the Bumble Bee
4. Jack Be Nimble
5. Little Miss Muffet
6. Where Has My Little Dog Gone?

## CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.

3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

## TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit sit for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our website at [vtechkids.com](http://vtechkids.com) and filling out our Contact Us form located under the Customer Support link. A service representative will be happy to help you.

### IMPORTANT NOTE:

Creating and developing **VTech**<sup>®</sup> products is accompanied by a responsibility that we at **VTech**<sup>®</sup> take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our website at [vtechkids.com](http://vtechkids.com) and filling out our Contact Us form located under the Customer Support link with any problems and/or suggestions that you might have. A service representative will be happy to help you.

## Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Caution:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:  
(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND  
(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

*CAN ICES-3 (B)/NMB-3(B)*



**Visit our website for more  
information about our products,  
downloads, resources and more.**

***vtechkids.com***

Read our complete warranty policy online at  
*vtechkids.com/warranty*

